

Quick Start Guide

Using Your Maytag Commercial Top-Loading Washer

⚠ WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

1 ADD HE DETERGENT




Follow manufacturer's instructions to determine amount of laundry products to use.



2 LOAD THE WASHER



3 ADD BLEACH if desired.

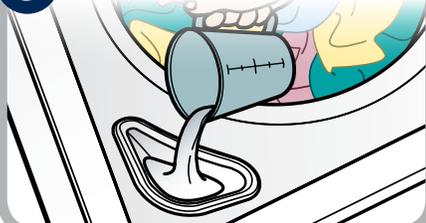

4 ADD FABRIC SOFTENER if desired.

Fabric softener will automatically be added during the final rinse.




With Dispenser

Add fabric softener during the final rinse. Lift lid and add measured recommended amount of liquid fabric softener. Close lid to start the washer.




Without Dispenser


5 SELECT CYCLE

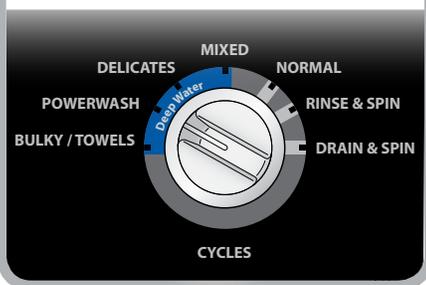

6 SELECT WASH TEMP

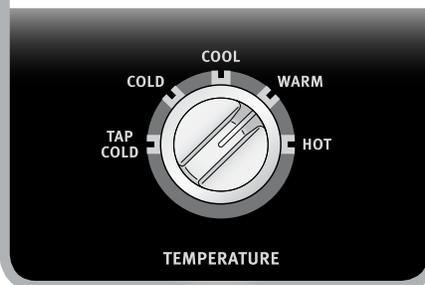

7 SELECT OPTIONS

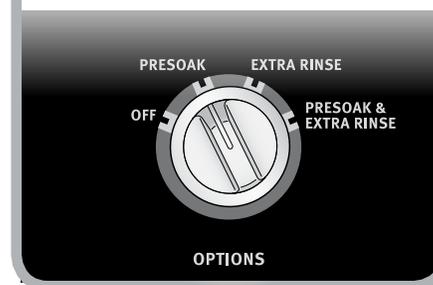

8 PRESS START/PAUSE

 
Press and release to start.



START / PAUSE
HOLD 3 SECONDS
TO CANCEL

NOTE: If you press Start/Pause to pause cycle you must press Start/Pause to resume cycle. If you hold Start/Pause for more than 3 seconds it will cancel your cycle and drain the washer.

9 ADD A GARMENT



During Fill and Soak/Wash, open the lid, add a garment, and close the lid.

IMPORTANT: If lid is left open for more than 10 minutes, the wash cycle will cancel and the water will pump out.

NOTE: See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your washer.

W11045662A
W11045663A-SP

©2017 All rights reserved.

Guide de démarrage rapide

Utilisation de la laveuse à chargement par le dessus commercial Maytag

⚠️ AVERTISSEMENT



Risque d'incendie


Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Aucune laveuse ne peut complètement enlever l'huile.

Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.

1 AJOUTER LE DÉTERGENT HE

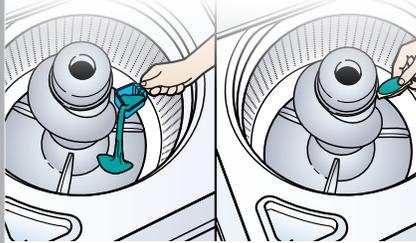

Suivre les instructions du fabricant pour déterminer la quantité de produits de lessive à utiliser.



2 CHARGER LA LAVEUSE



4 AJOUTER DE L'ASSOUPLEISSANT POUR TISSU si désiré.

L'assouplissant sera automatiquement ajouté lors du rinçage final.



Avec distributeur

Ajouter l'assouplissant pour tissu au cours du rinçage final. Soulever le couvercle et verser la mesure recommandée d'assouplissant liquide pour tissu. Fermer le couvercle pour remettre la laveuse en marche.




Sans distributeur


3 AJOUTER L'AGENT DE BLANCHIMENT si désiré.




5 SÉLECTIONNER LE PROGRAMME

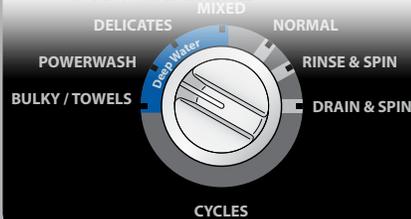

6 SÉLECTIONNER LA TEMPÉRATURE DE LAVAGE

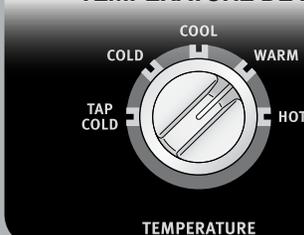

7 SÉLECTIONNER OPTIONS

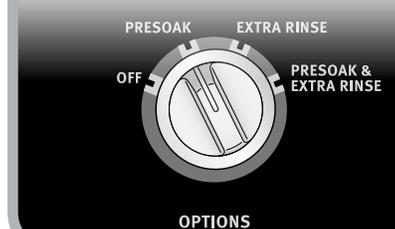


8 APPUYER SUR START/PAUSE (MISE EN MARCHÉ/PAUSE)

Appuyer et relâcher pour mettre en marche.



REMARQUE : Si l'on appuie sur Start/Pause (mise en marche/pause) pour interrompre le programme, il faut appuyer sur Start/Pause (mise en marche/pause) pour poursuivre le programme. Si l'on appuie sur Start/Pause (mise en marche/pause) pendant plus de 3 secondes, le programme s'annule et la laveuse se vidange.

 9 AJOUTER UN VÊTEMENT



Pendant la phase Fill (remplissage) et Soak/Wash (trempage/lavage), ouvrir le couvercle, ajouter un vêtement et fermer le couvercle.

IMPORTANT : Si on laisse le couvercle ouvert pendant plus de 10 minutes, le programme de lavage est annulé et l'eau est vidangée.