


# KitchenAid® COOKTOP PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
(Black) (Designer White) (Pure Biscuit) (Stainless)

30" SLIDE-IN  
ELECTRIC OVEN  
SELF CLEAN

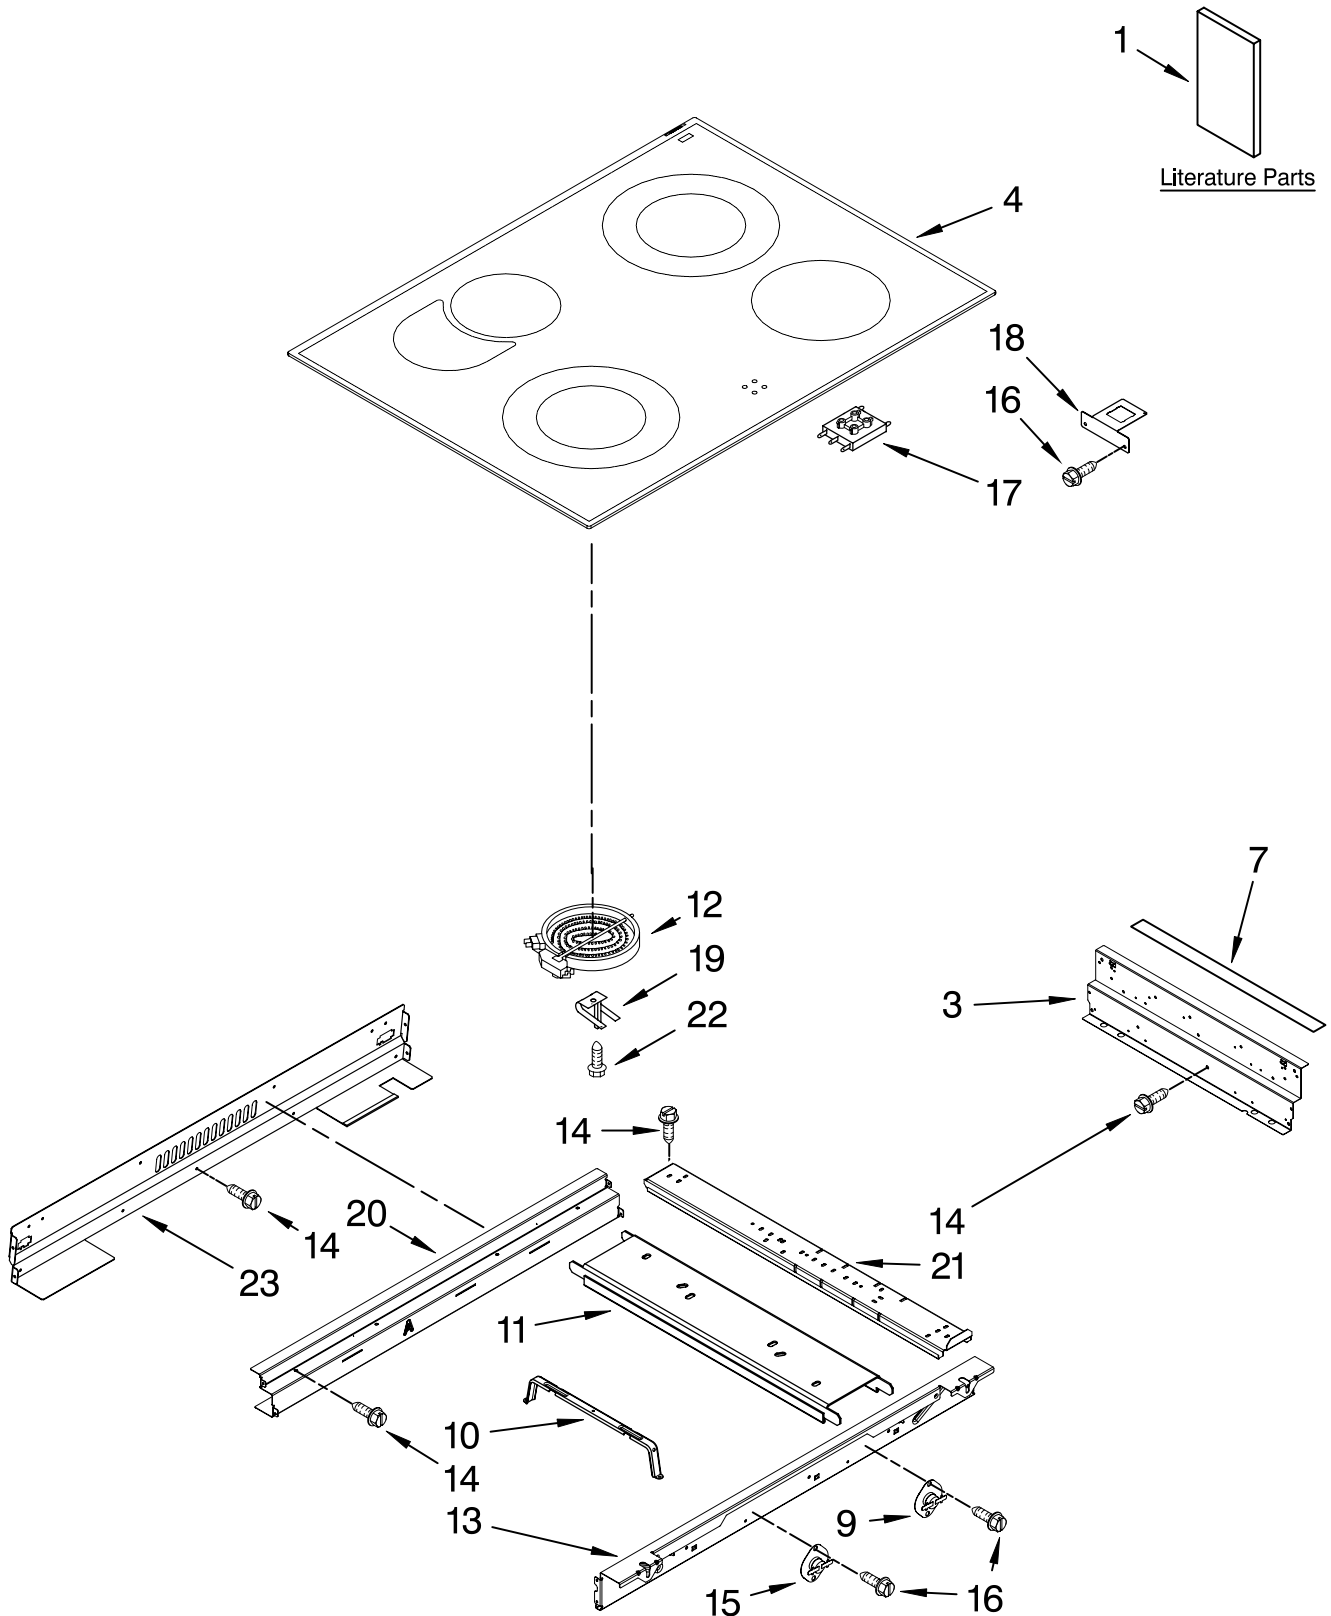

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01


(Black) (Designer White) (Pure Biscuit) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	4		Cooktop	15	341196	Thermostat
	W10118260	Installation Instructions		W10110271	Black/Stainless	16	3196160	Screw
	W10162196	Use & Care Guide		W10110269	White	17	8523739	Indicator Light, Hot Surface
	W10112097	Tech Sheet		W10110270	Biscuit	18	9758799	Bracket, Indicator Light
	9763467	Easy Set Guide	7	W10076030	Gasket (2)	19	9759094	Spring, Locator
	9757680	Anti-Tip Instructions	9	9759944	Thermostat	20	9761768	Frame, Cooktop Rear
	9762761	Safe Cooking Tips English	10	9756821	Support, Wiring	21	9763517	Rail, Element (2)
	W10065852	Safe Cooking Tips French	11	9757825	Rail, Element Center (1)	22	246119	Screw
3	9761422	Frame, Cooktop Side	12		Element, Surface	23	9761724	Cover, Cooktop Rear
				4456507	LR/1000W			
				4453909	LF,RR/1200W			
				8523696	RF/1800W			
			13	9761423	Frame, Cooktop Front			
			14	3196537	Screw			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
 (Black) (Designer White) (Pure Biscuit) (Stainless)

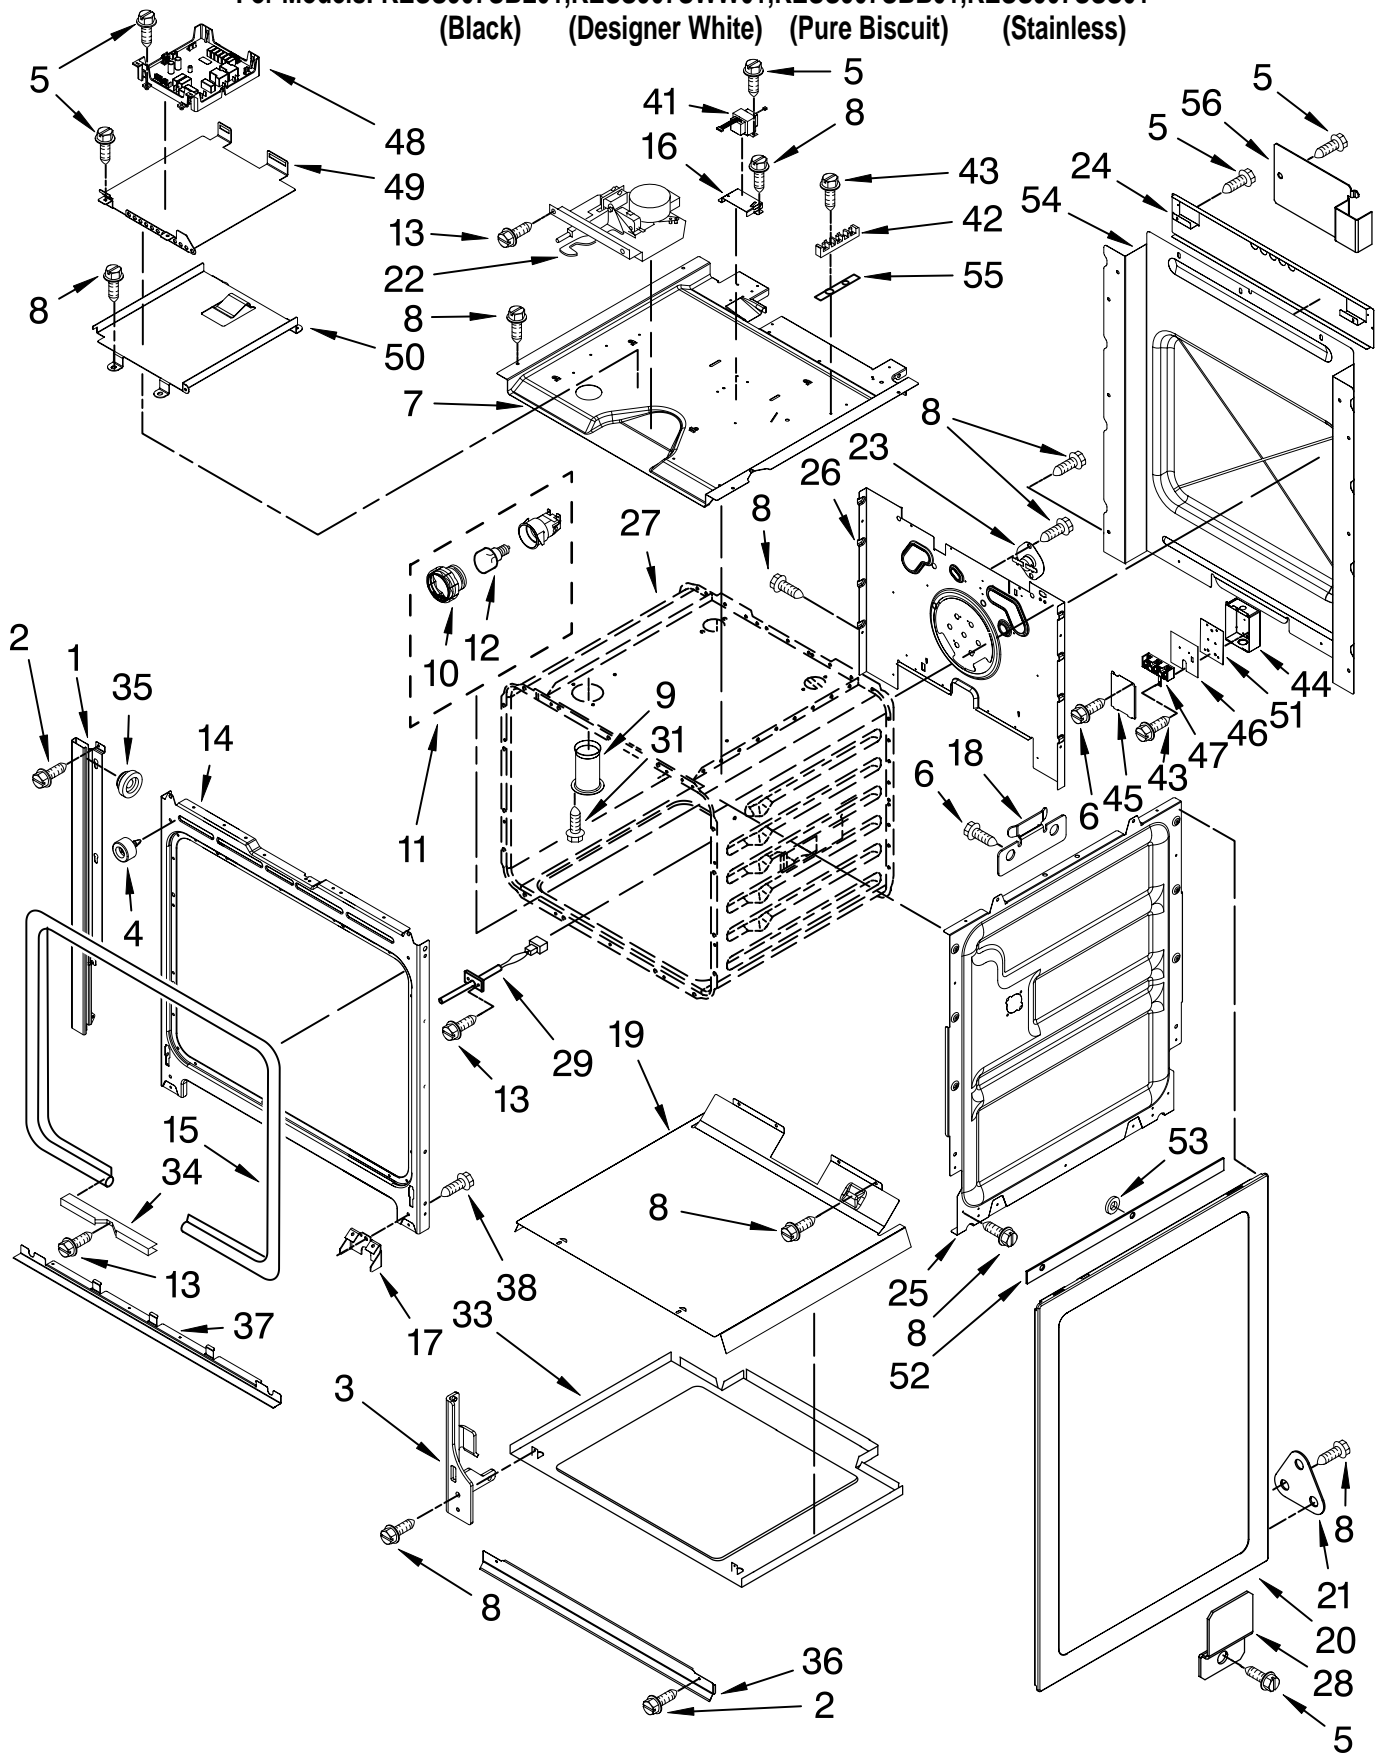

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS


For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
(Black) (Designer White) (Pure Biscuit) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	20		Body, Side	43	3400080	Screw
	W10109540	Black		9760723PB	Black/Stainless	44	9757404	Box, Terminal
	W10109570	White		9760723PW	White	45	9757405	Cover, Terminal Box
	W10109550	Biscuit	21	9757461	Bracket, Side Panel	46	9759721	Insulator, Terminal Box
	W10140548	Stainless	22	9760888	Latch, Motorized	47	9761958	Block, Terminal
		Left	23	9759242	Thermostat	48	W10181438	Appliance, Manager
	W10109490	Black	24	9757811	Brace, Side Panel	49	W10083460	Slide, GOC
	W10109520	White	25	4455641	Side, Chassis	50	9756454	Bracket, Appliance Manager
	W10109500	Biscuit	26	9759761	Back, Chassis	51	9759884	Insulation
	W10140547	Stainless	27		Liner, Oven (Not Serviceable)	52	9759722	Insulation, Body Side
2	3400832	Screw	28	9759890	Clip, Side Panel	53	9760481	Washer
3		Hinge Receiver	29	W10131825	Sensor	54	9758583	Cover, Back
	4455606	Right	31	3196176	Screw	55	9759885	Pad, Insulation(2)
	4455605	Left	33	9759713	Base, Chassis	56	9759945	Standoff, Rear
4	W10105790	Bumper, Door (2)	34	4448933	Retainer, Gasket	<b>FOLLOWING PARTS NOT ILLUSTRATED</b>		
5	3196537	Screw	35	4448444	Grommet, Mounting Rail	<b>INSULATION</b>		
6	3196160	Screw	36		Vent, Bottom Upper		9756817	Insulation, Wrap
7	8303099	Top Chassis		9756481BL	Black		9756470	Insulation, Back
8	4449809	Screw		9756481WH	White			
9	4452158	Tube, Vent		W10116898	Biscuit			
10	W10067870	Lens, Light (2)		W10140533	Stainless			
11	W10009930	Oven Light, Assembly (2)	37		Vent, Bottom Lower			
12	4452166	Bulb, Light (2)		W10104890	Black			
13	4449154	Screw		W10104910	White			
14	W10130368	Frame, Front		W10104900	Biscuit			
15	W10074200	Gasket, Door		W10140546	Stainless			
16	9757829	Bracket, Transformer	38	4449743	Screw			
17	4452152	Bracket, Mounting	41	W10111628	Transformer, Control			
18	9757685	Guide, Side Panel	42	4449868	Block, Terminal			
19	4451478	Support, Insulation						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
(Black) (Designer White) (Pure Biscuit) (Stainless)

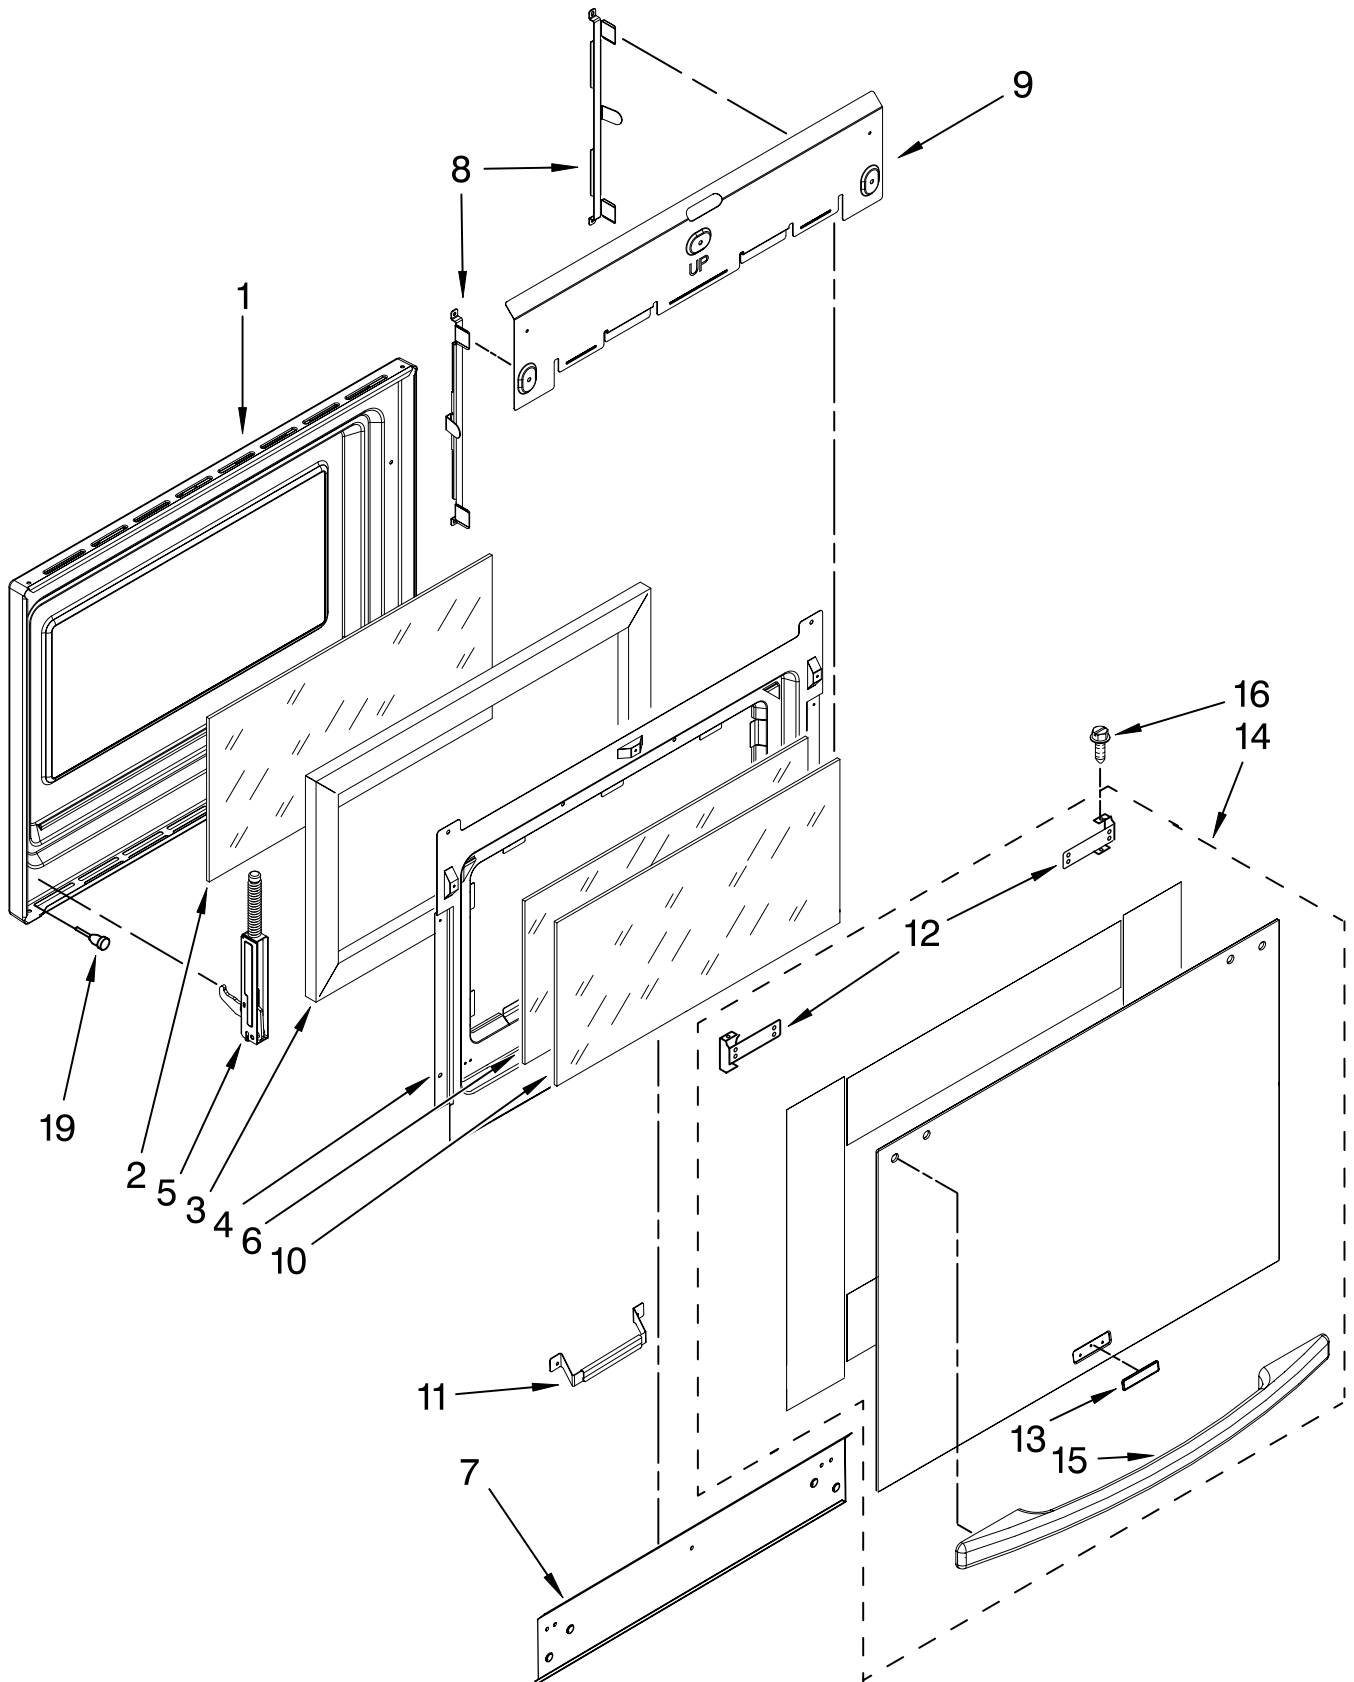

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# DOOR PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
 (Black) (Designer White) (Pure Biscuit) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9759413	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760580	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457103	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	9763497	Right
	9763496	Left
13		Badge
	8304603BL	Black
	8304603WH	White
	8304603BT	Biscuit
	8304603SS	Stainless
14		Assembly, Door Kit
	W10131888	Black
	W10131889	White
	W10103890	Biscuit
	W10155557	Stainless
15		Handle, Door
	8303774BL	Black
	8303774WH	White
	8303774BT	Biscuit
	8303774SS	Stainless
16	3196184	Screw
19	4448520	Bumper, Door

# DRAWER PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
 (Black) (Designer White) (Pure Biscuit) (Stainless)

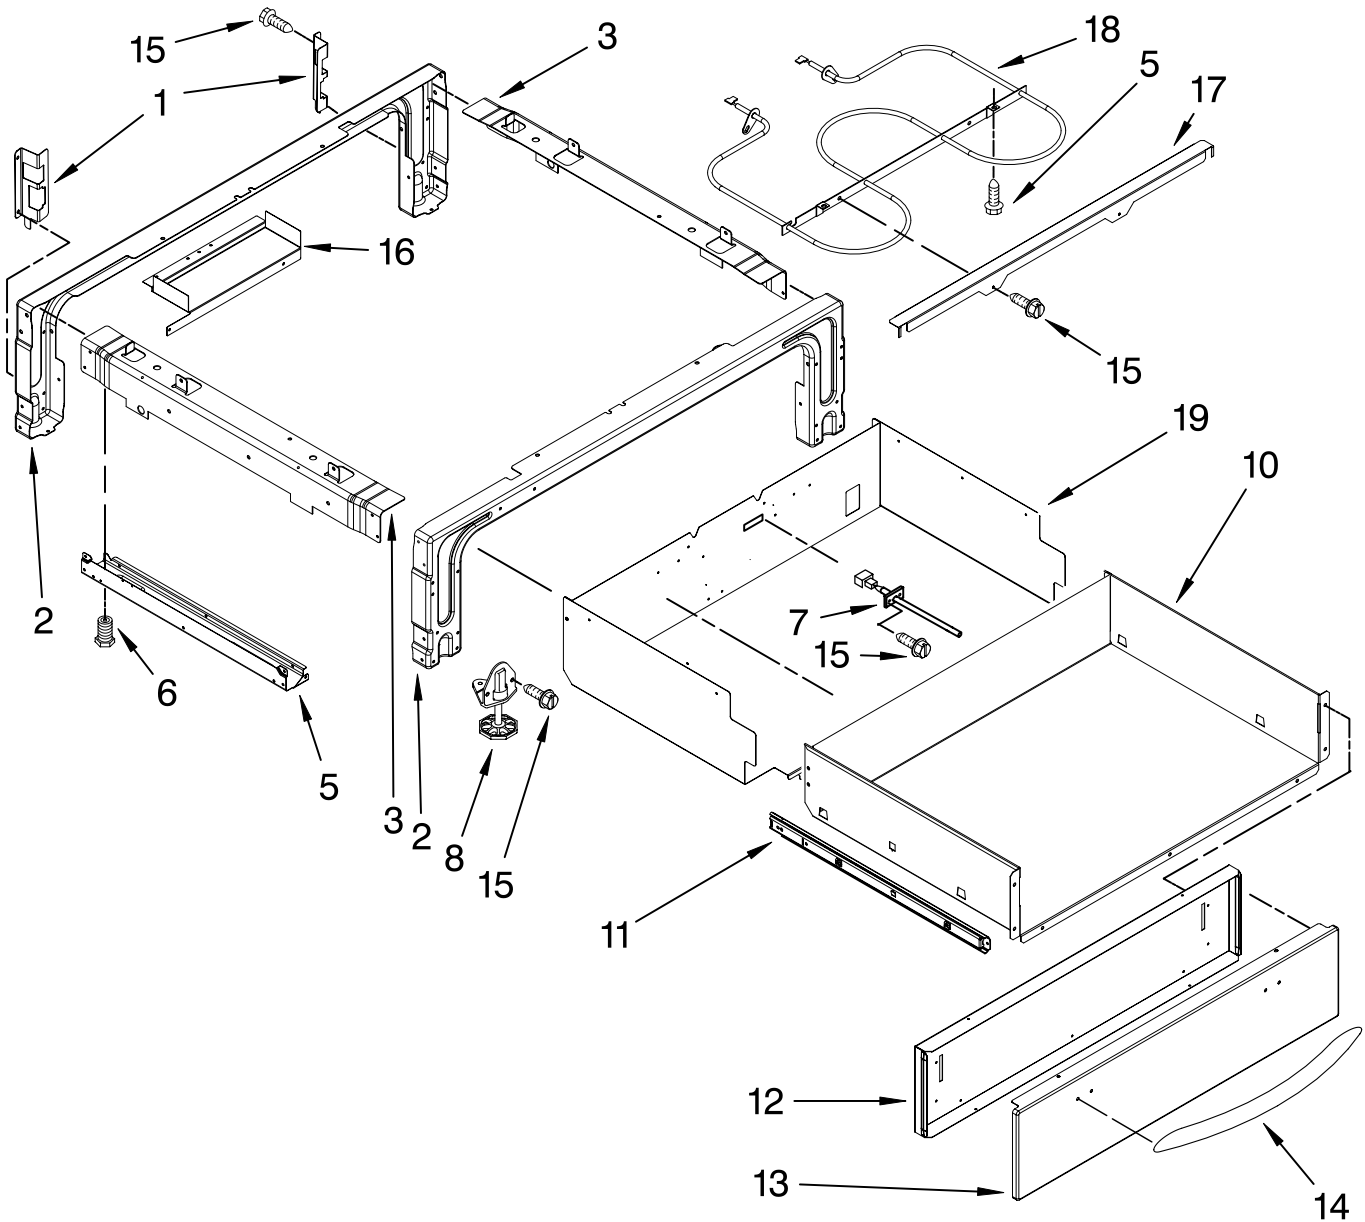

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
7	8274149	Thermistor
8	3196037	Foot Assembly
10	W10140539	Drawer
11		Drawer Slide
	W10019810	Right
	W10019800	Left
12	W10140544	Panel, Drawer
13		Front, Drawer
	9761747BL	Black
	9761747WH	White
	9761747BT	Biscuit
	W10140545	Stainless

Illus. No.	Part No.	DESCRIPTION
14		Handle, Drawer
	9761573BL	Black
	9761573WH	White
	9761573BT	Biscuit
	9761573SS	Stainless
15	3196537	Screw
16	W10045140	Cover, Terminal
17	9758676	Support, Element
18	9760775	Element, Warming Drawer
19	9763518	Enclosure, Warming Drawer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
(Black) (Designer White) (Pure Biscuit) (Stainless)

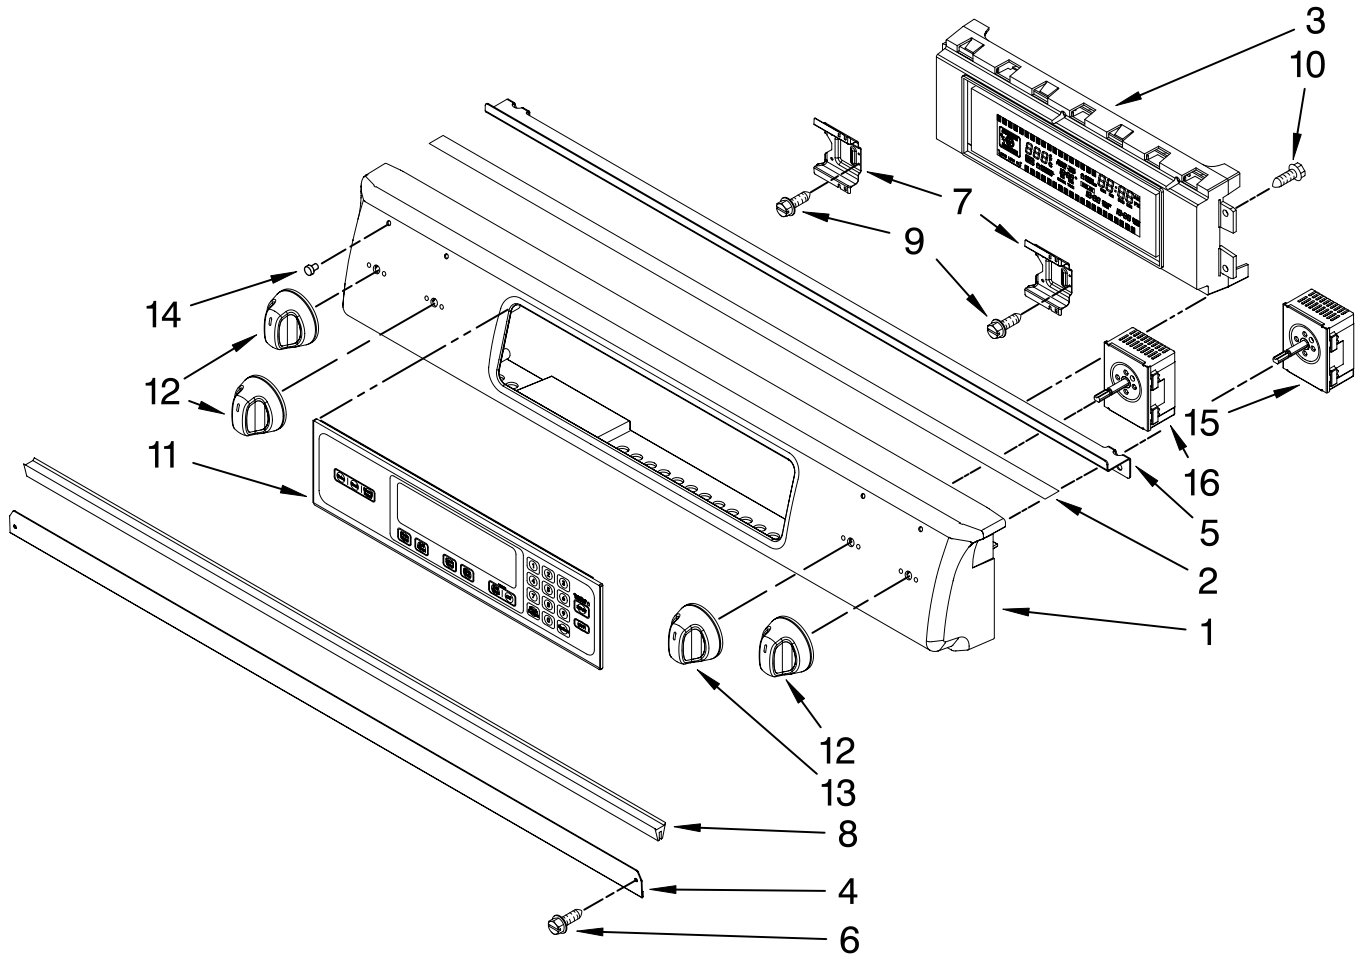

Illus. No.	Part No.	DESCRIPTION
1		Control Panel
	W10117025	Black
	W10117027	White
	W10117026	Biscuit
	W10156271	Stainless
2	W10110246	Gasket, Console
3	W10181439	Control, Electric
4	W10105370	Shield, Console Vent
5	W10117524	Bracket, Console
6	3196160	Screw
7	9761745	Bracket, Thermostat (2)

Illus. No.	Part No.	DESCRIPTION
8	W10116195	Gasket, Vent Shield
9	3196537	Screw
10	9780271	Screw
11	9761566	Membrane, Switch LF,LR,RR
12		Knob, Smart Dual
	W10130391	Black
	W10130392	White
	W10130393	Biscuit
	W10156260	Stainless

Illus. No.	Part No.	DESCRIPTION
13		Knob, Smart Single RF
	W10130387	Black
	W10130388	White
	W10130389	Biscuit
	W10156261	Stainless
14	3196068	Lens, Indicator Light
15	9763762	Dual Switch LF,LR,RR
16	9763761	Single Switch RF


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# INTERNAL OVEN PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01

(Black) (Designer White) (Pure Biscuit) (Stainless)

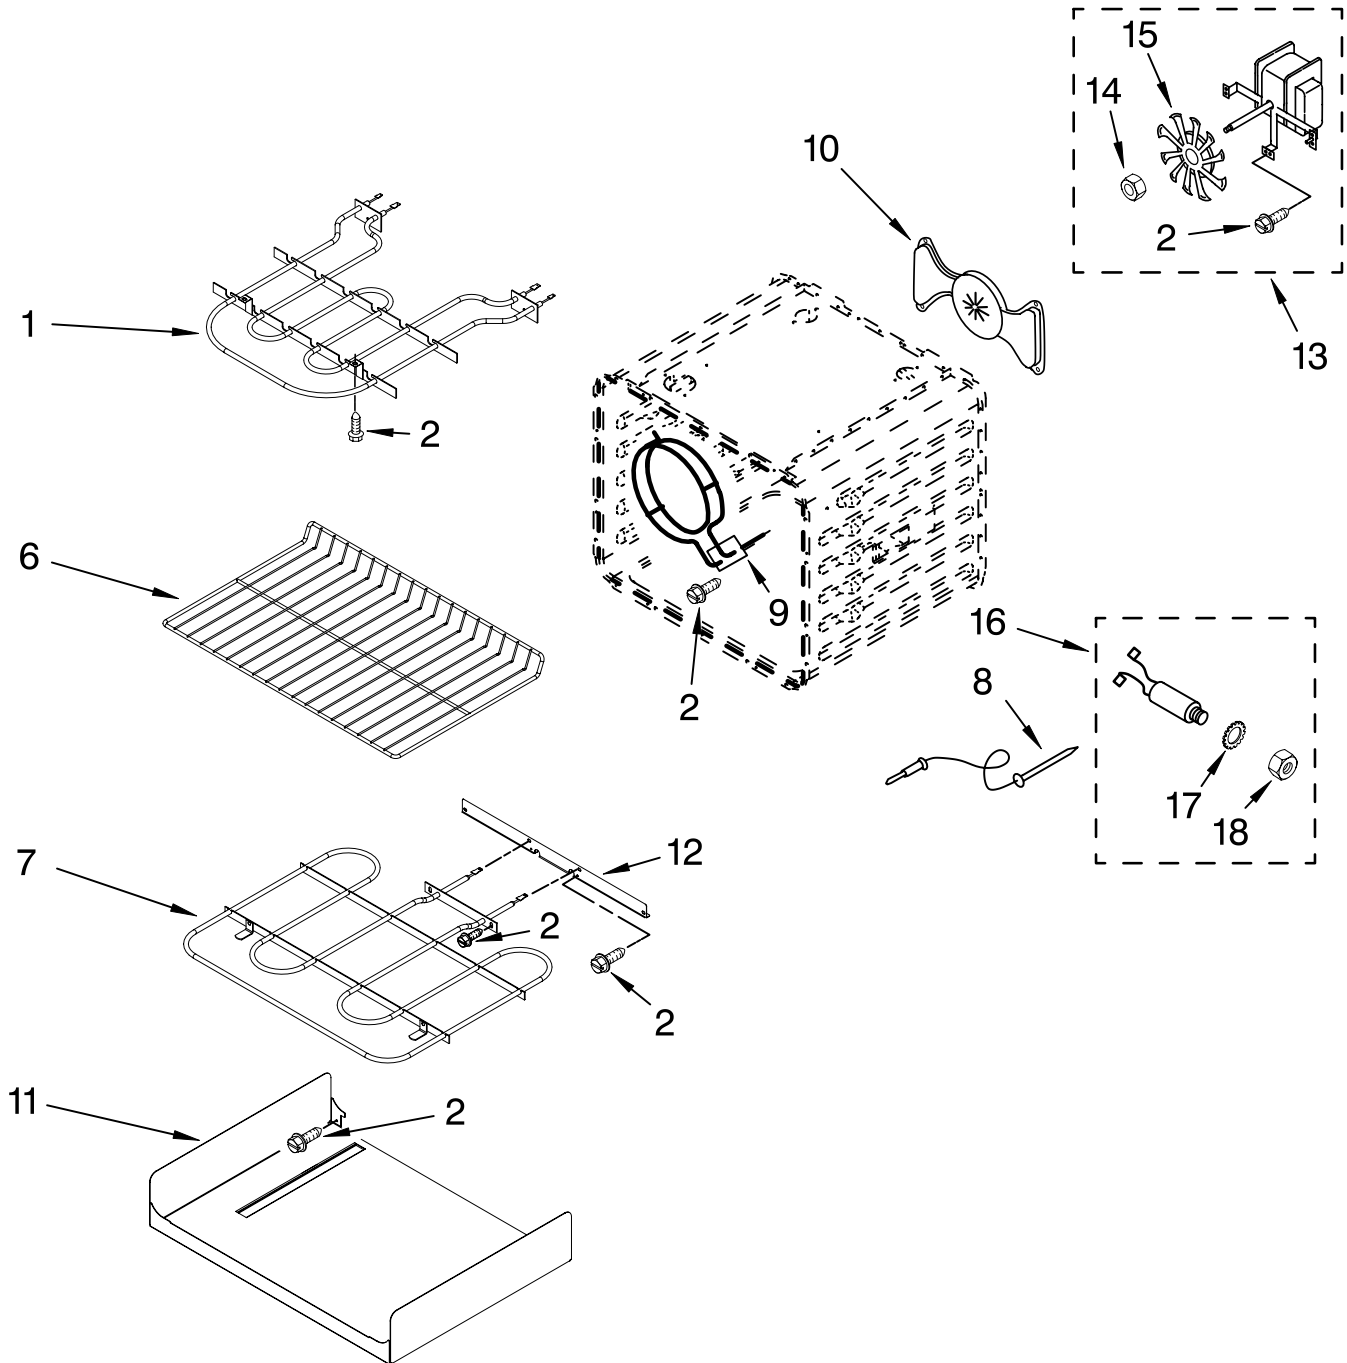

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4449154	Screw
6	4448717	Rack, Oven
7	9760768	Element, Bake
8	9755542	Probe, Meat


Illus. No.	Part No.	DESCRIPTION
9	9760769	Element, Convection
10	9756690	Cover, Fan
11	4455037	Tray, Hidden Bake
12	4450039	Cover, Bake Tray
13	W10116228	Motor, Convection

Illus. No.	Part No.	DESCRIPTION
14	W10116349	Nut
15	W10116351	Blade, Fan
16	9755543	Jack, Meat Probe
17	9755547	Lock Washer
18	9755546	Hex Nut

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
 (Black) (Designer White) (Pure Biscuit) (Stainless)

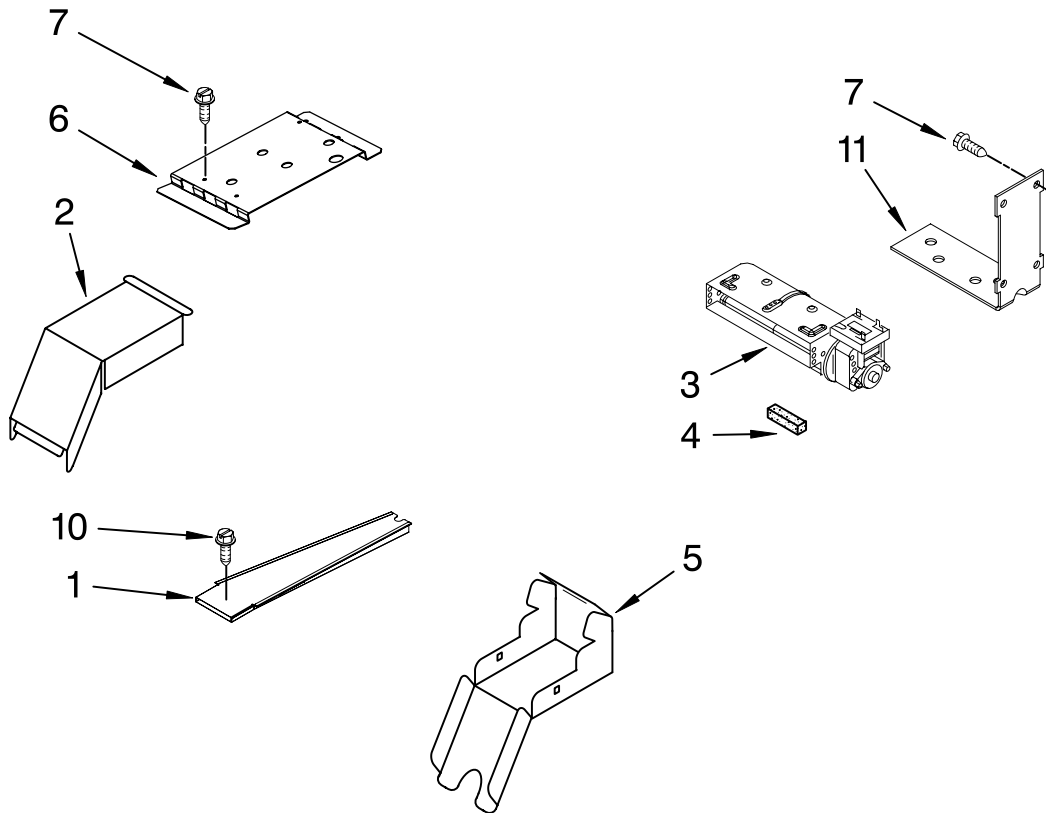

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	W10143041	Bracket, Terminal Box
7	4449809	Screw (2)
10	4449040	Screw
11	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: KESS907SBL01, KESS907SWW01, KESS907SBB01, KESS907SSS01  
(Black) (Designer White) (Pure Biscuit) (Stainless)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
Optional Parts Not Included	<b><u>SPLICING WIRES--25FT. LENGTH</u></b>	<b><u>WIRING HARNESS PARTS</u></b>
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>	242828 Wire (12 Ga. 150 c Black)	W10118728 Harness, Main
72017 White	242820 Wire (14 Ga. 150 c Black)	W10115167 Harness, Cooktop Connection
261869 Cord Brown	242821 Wire (14 Ga. 150 c Blue)	W10157935 Harness, Switch
72032 Black	242822 Wire (14 Ga. 150 c Brown)	9762921 Harness, Communication
<b><u>PAINT, SPRAY</u></b>	242830 Wire (14 Ga. 200 c Brown)	4452222 Spacer, Harness
350930 White	242823 Wire (14 Ga. 150 c Green)	9763481 Harness, Ground Strap
261900 Citrine White	242824 Wire (14 Ga. 150 c Orange)	W10115168 Cooktop, Tap Touch Switch
830864 Black	242825 Wire (14 Ga. 150 c Red)	W10111396 Conduit
<b><u>ADHESIVE</u></b>	242831 Wire (14 Ga. 200 c Red)	313660 Clip, Ground Wire
591014 Adhesive	242827 Wire (14 Ga. 150 c Yellow)	4448664 Clamp
Loctite (1/3 oz.)		W10155291 Connector, Flex
482338 Sealer, Silastic (3 oz.)		9757778 Bushing, Snap, Split 1"
		W10076020 Gasket
		4449809 Screw
		112432 Nut
		4450800 Screw, Ground
		3400015 Screw, Ground
		<b><u>Miscellaneous</u></b>
		9782676 Anti-Tip Assembly Filler, Counter Top
		W10113902A Black
		W10113903A White
		W10113904A Biscuit
		W10113901A Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST