


**KitchenAid®**

**30" Freestanding GAS OVEN CONVECTION**

**MODELS:**

KGSK901SBL02 (Black)  
KGSK901SWH02 (White)  
KGSK901SSS02 (Stainless)


# COOKTOP PARTS

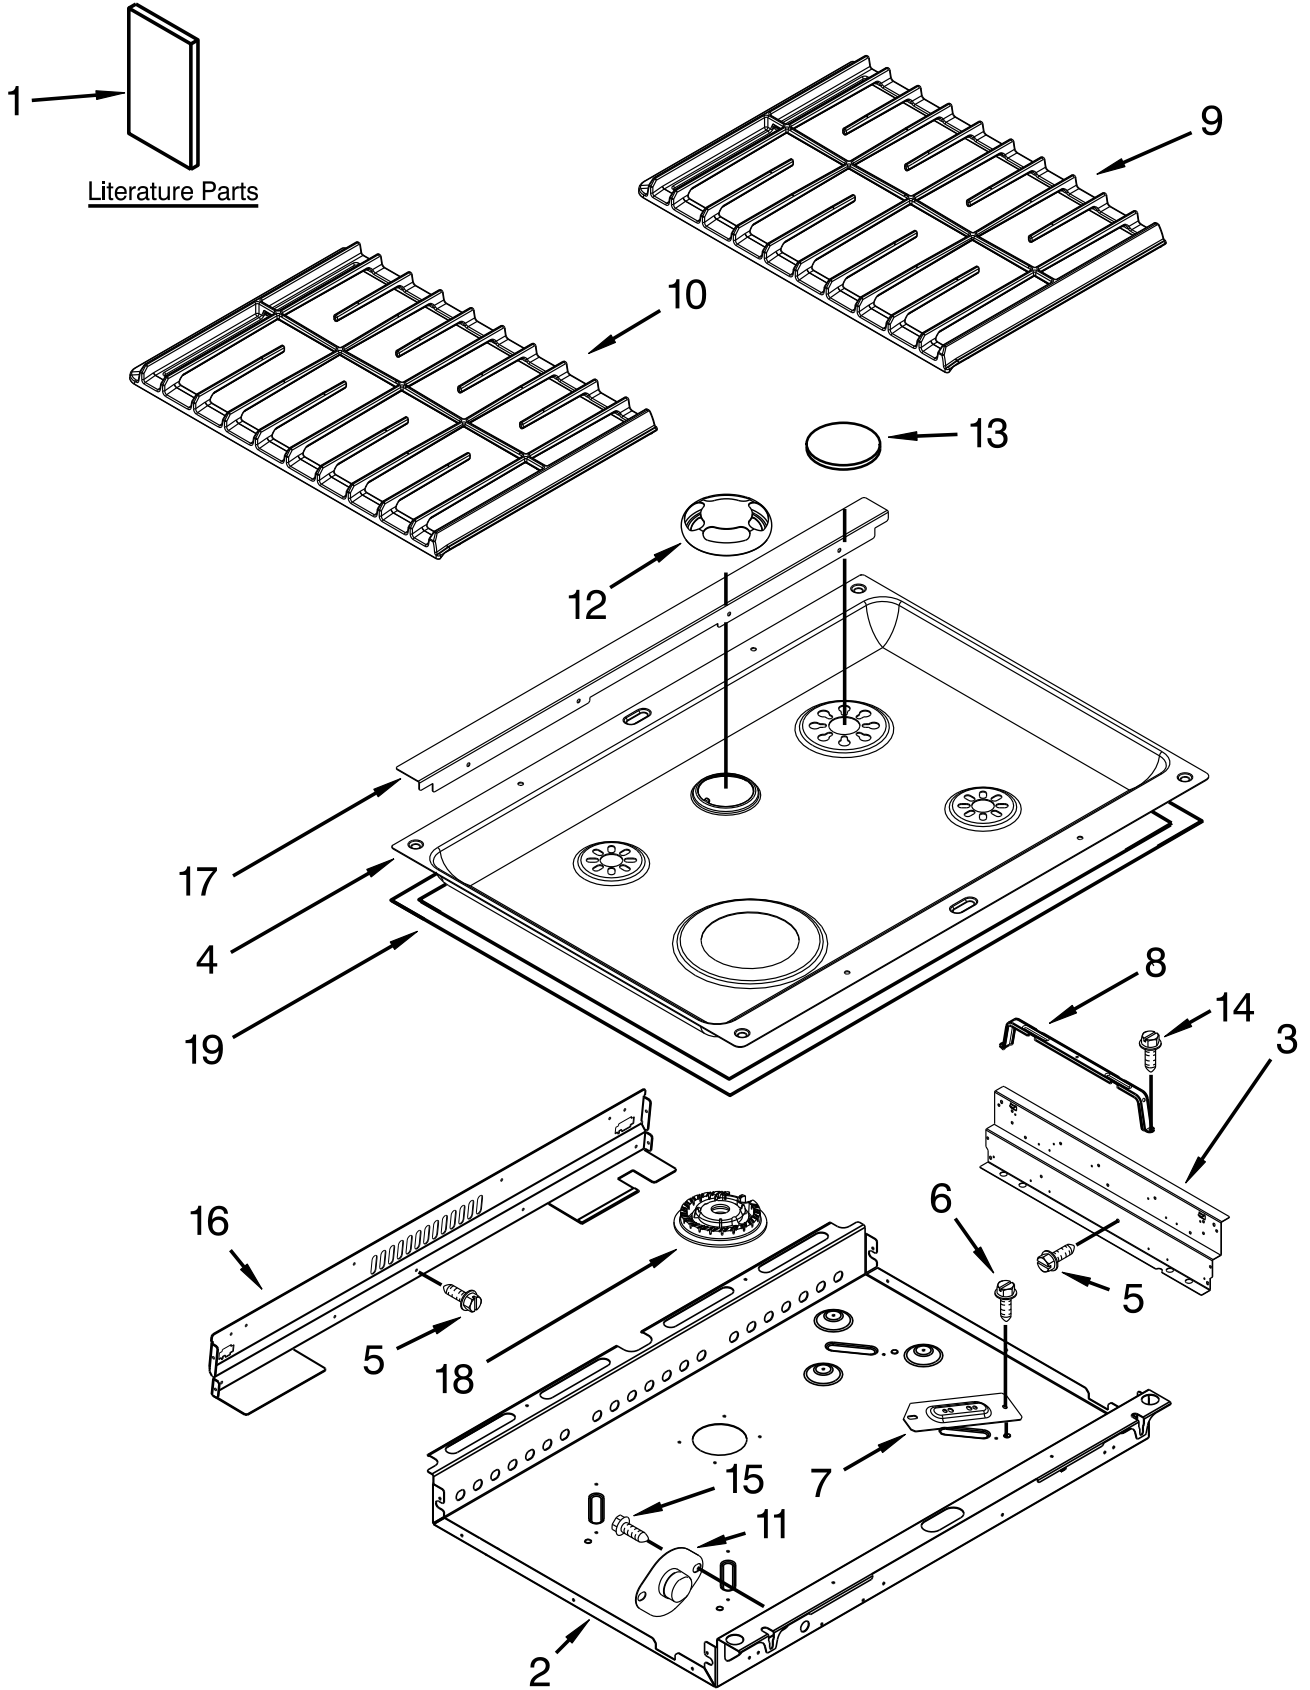

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10		Grate, Burner Left	18	8286181	Burner Head, Auxiliary (6K) (Left Rear & Right Front)
	W10118262	Installation Instructions		9761560CB	Coal Black			
	W10162198	Use & Care Guide		9761560SD	Satin Cumberland		8286182	Burner Head, Rapid (12K) (Right Rear)
	W10221015	Tech Sheet	11	9759944	Thermostat, 70C			
	9757680	Instructions, Anti-Tip	12		Vent, Center		9762553	Burner Head, Turbo (Left Front)
	9762761	Tips, Safe Cooking (English)		9760225BL	Black			
	W10065852	Tips, Safe Cooking (French)		9760225WH	White			
	9763467	Guide, Easy Set	13		Cap, Burner (Left Rear & Right Front)	19	W10109920	Gasket (Tape)
2	W10208808	Box, Burner		8284669	Coal Black			
3	9761784	Frame, Cooktop		9761562SD	Satin Cumberland (Right Rear)			
4		Cooktop		9761563CB	Coal Black			
	W10175854	Black		9761563SD	Satin Cumberland (Left Front)			
	W10175855	White		9761564CB	Coal Black			
5	3196537	Screw		9761564SD	Satin Cumberland			
6	3400843	Screw	14	4449809	Screw			
7	9763445	Bracket, Burner	15	3196160	Screw			
8	9756821	Support, Wiring	16	9759627	Cover, Cooktop Rear			
9		Grate, Burner Right	17	9763436	Cover, Top Rear			
	9761555CB	Coal Black						
	9761555SD	Satin Cumberland						

# OVEN PARTS

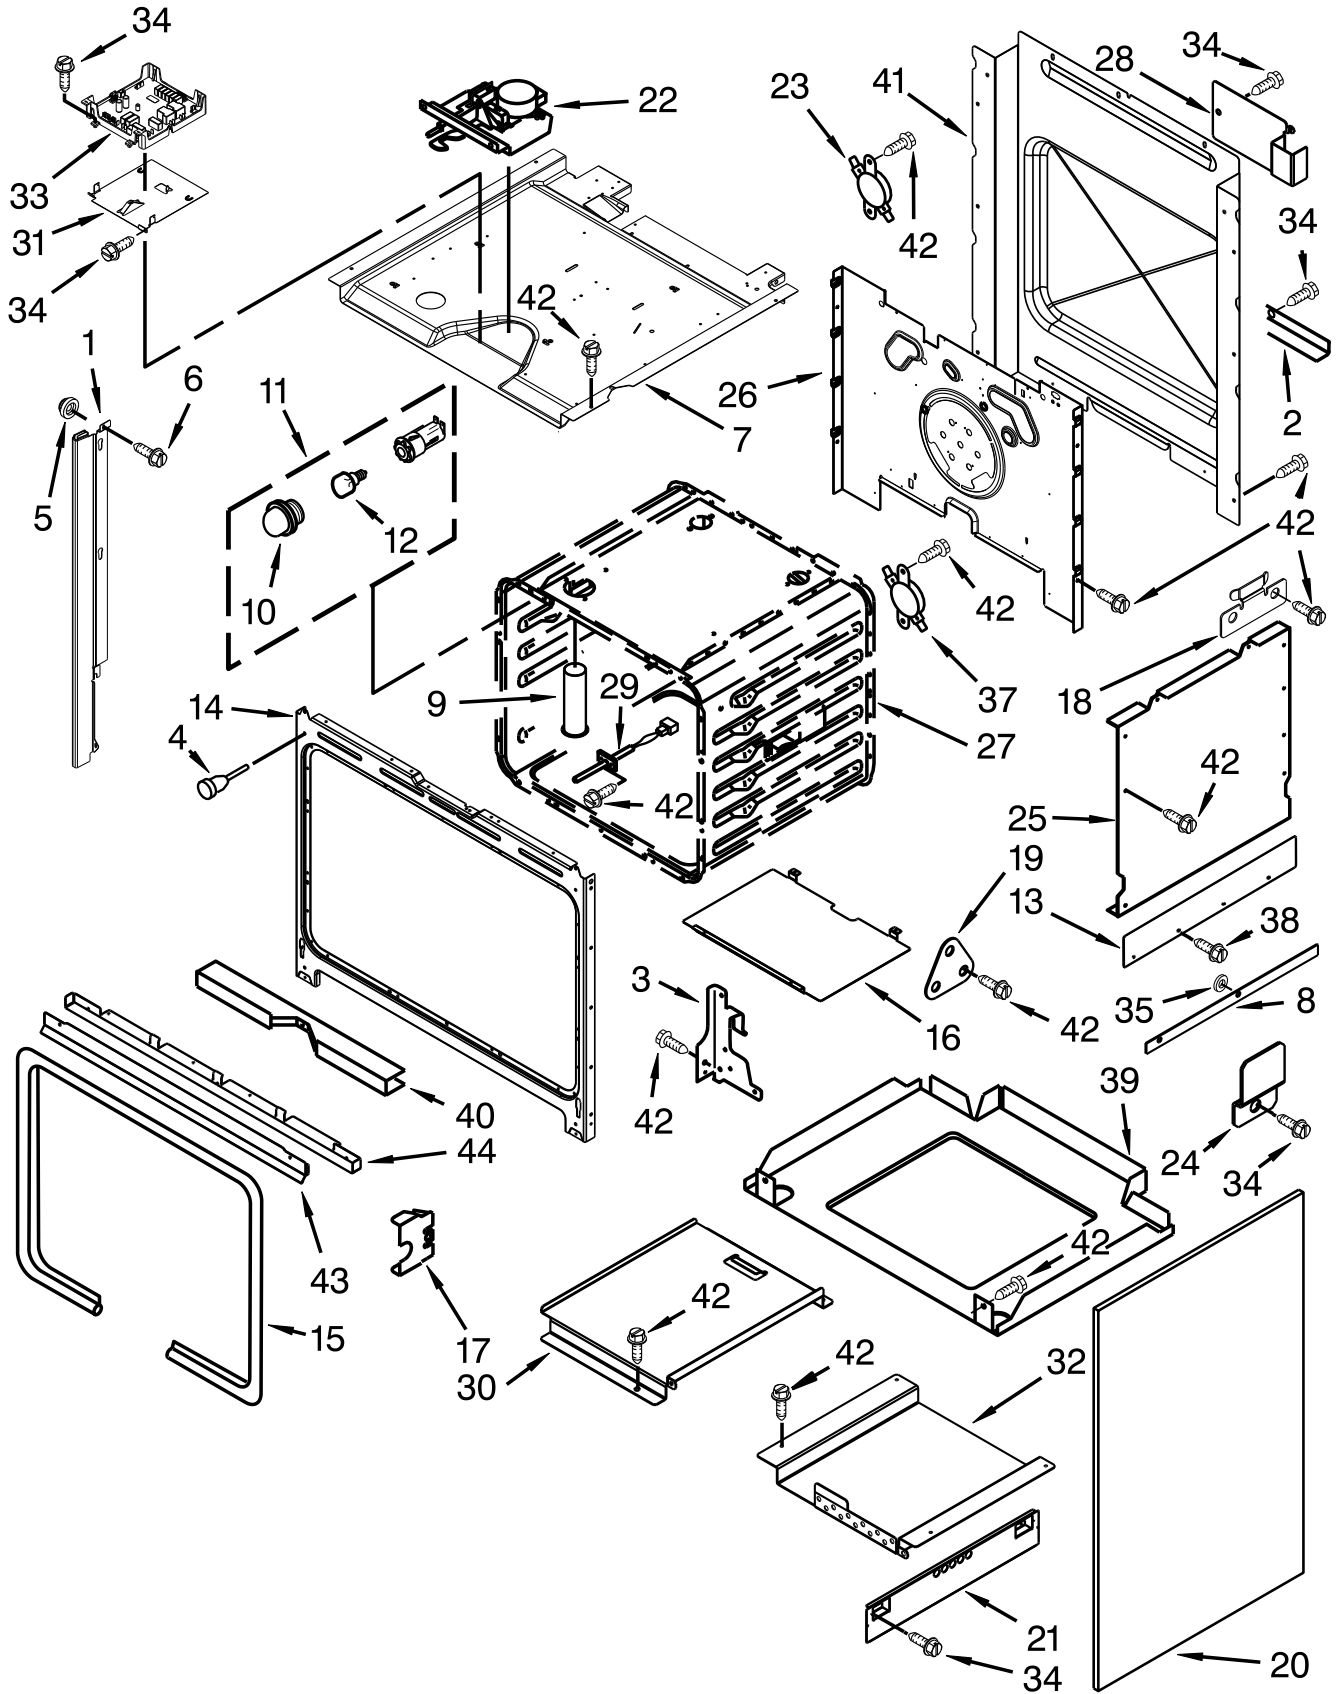


# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Side
	W10109540	Black (Right)
	W10109570	White (Right)
	W10140548	Stainless (Right)
	W10109490	Black (Left)
	W10109520	White (Left)
	W10140547	Stainless (Left)
2	8053971	Brace, Main Back
3	4455606	Receiver, Hinge Right
	4455605	Receiver, Hinge Left
4	W10105790	Bumper & Screw
5	4448444	Grommet
6	3400832	Screw
7	8303099	Chassis, Top
8	9759722	Insulation, Body Side Trim
9	9761666	Tube, Vent
10	W10067870	Lens, Light
11	W10009930	Assembly, Light
12	4452166	Bulb, Light
13	9757732	Shield, Heat
14	W10115831	Frame, Front
15	W10074200	Gasket, Door
16	9757070	Plate, Relectance

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
17	4452152	Bracket, Bottom Vent
18	9757685	Guide, Side Panel
19	9757461	Bracket, Side Panel
20		Panel, Oven Side
	W10281880	Black
	W10281881	White
21	9757811	Brace, Side Panel
22	W10195934	Latch, Motorized
23	9757807	Thermostat SPST
24	9759890	Clip, Side Panel
25	4455641	Side, Panel
26	9759762	Back, Chassis
27		Liner, Oven (Not serviceable)
28	9759945	Standoff, Rear
29	W10131825	Sensor
30	9756454	Bracket, Appliance Manager
31	9760223	Slide, DSI Module
32	W10083460	Slide, Global Oven Control
33	9762774	Manager, Appliance
34	3196537	Screw
35	9760481	Washer

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
37	9759242	Thermostat, Thermal Overload
38	W10292297	Screw
39	W10110534	Base, Chassis
40	4448933	Gasket, Retainer
41	9758583	Cover, Back
42	4449809	Screw
43		Vent, Bottom Upper
	9756481BL	Black
	9756481WH	White
	9756481SS	Stainless
44		Trim, Lower Vent
	W10153486	Black
	W10153488	White
	W10154789	Stainless \$DA88
	9756817	Insulation, Wrap
	W10095410	Insulation, Cover Back Top
	W10095400	Insulation, Cover Back Side
	9756470	Insulation, Back


# DOOR PARTS

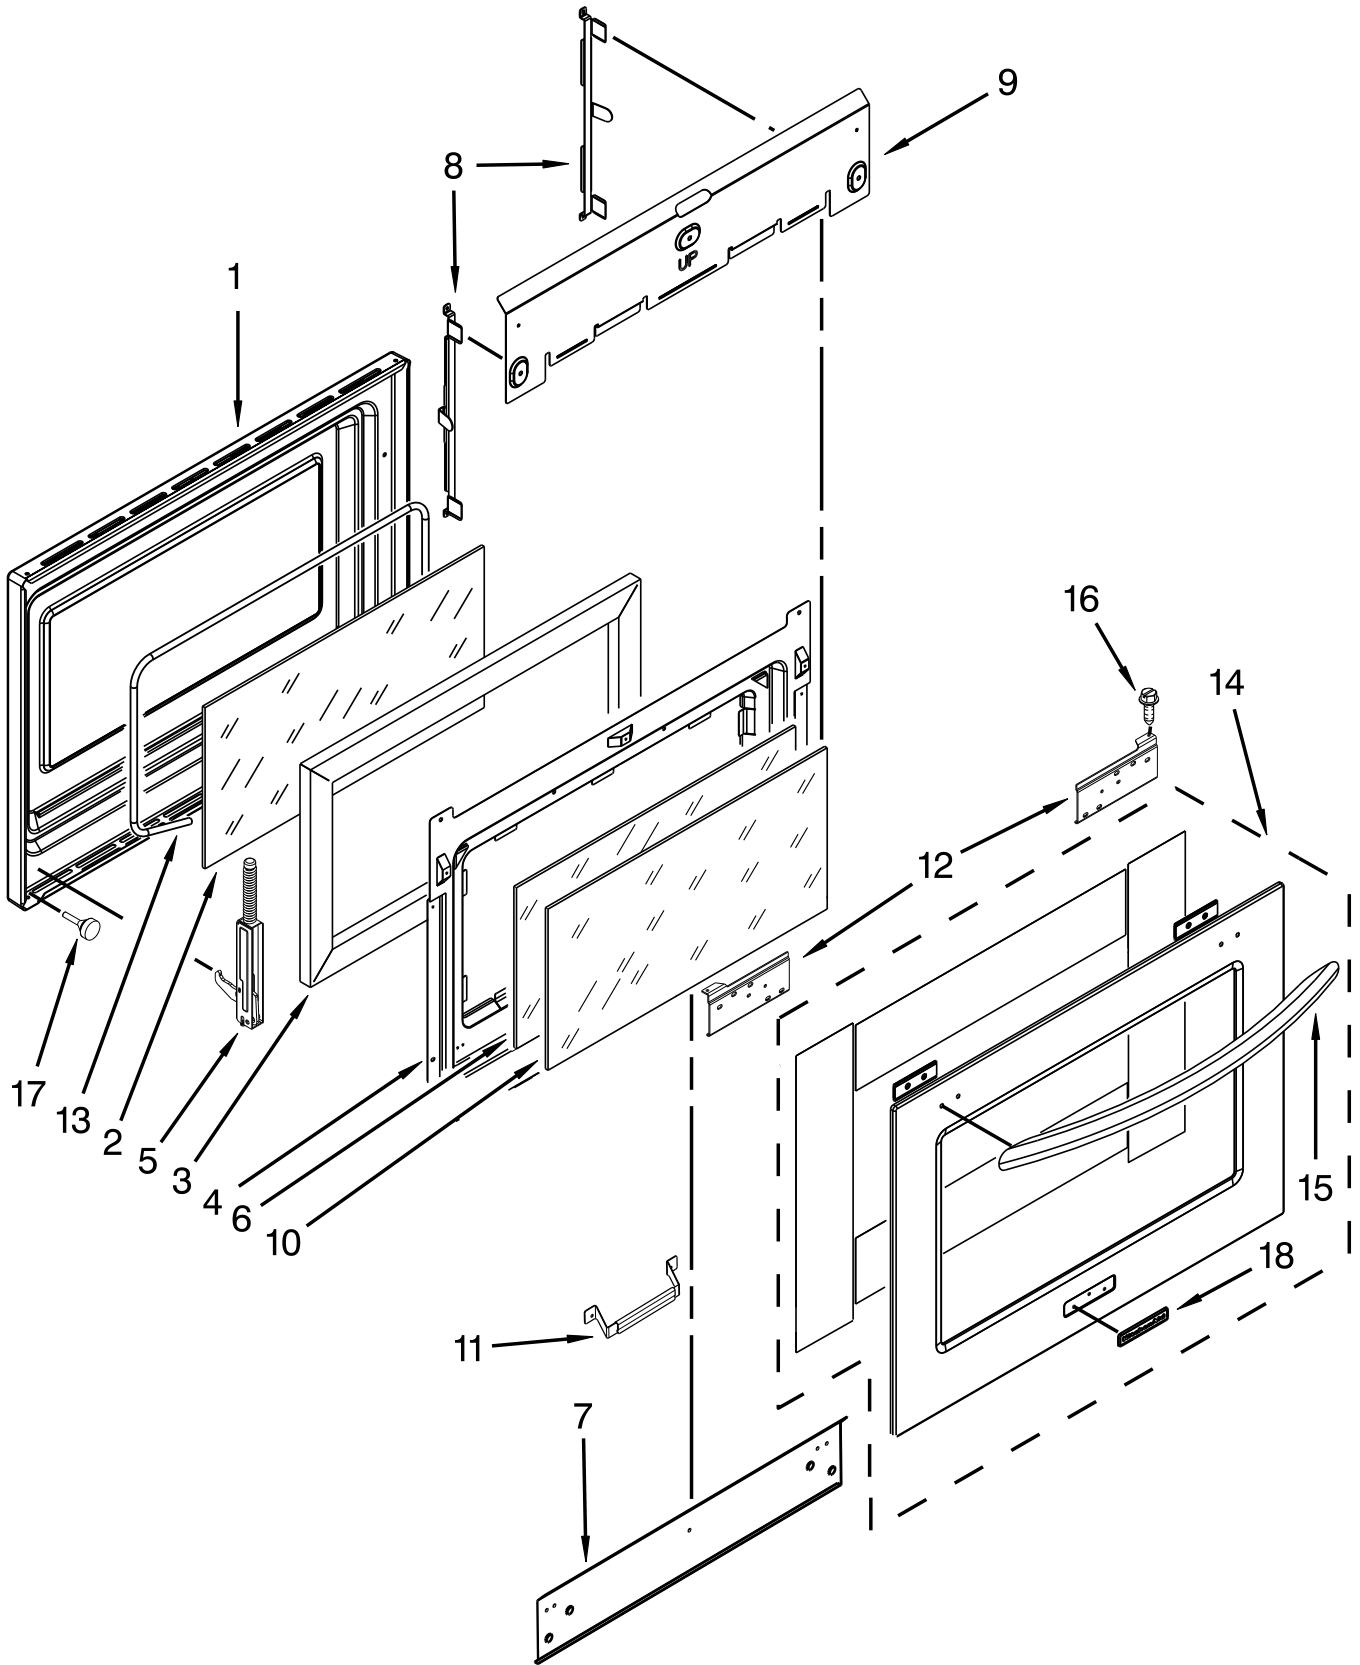

# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10277749	Liner, Door	10	9759225	Glass, Inner	15		Handle, Door
2	9757706	Glass, Inner	11	9759230	Bracket, Central		W10292381	Black
3	4451722	Insulation, Door	12	9763497	Bracket, Handle (Right)		W10292382	White
4	4457132	Retainer, Glass		9763496	Bracket, Handle (Left)		W10292380	Stainless
5	9760579	Hinge, Door (Right)	13	8522415	Seal, Window	16	3196184	Screw
	9760580	Hinge, Door (Left)	14		Assembly, Door Kit	17	4448520	Bumper, Door
6	9759225	Glass, Inner		W10131888	Black	18	8304603BL	Black
7	4457114	Shield, Heat Bottom		W10131889	White		8304603WH	White
8	9759229	Bracket, Side		W10155557	Stainless		8304603SS	Stainless
9	4457104	Shield, Heat Top						

# DRAWER PARTS



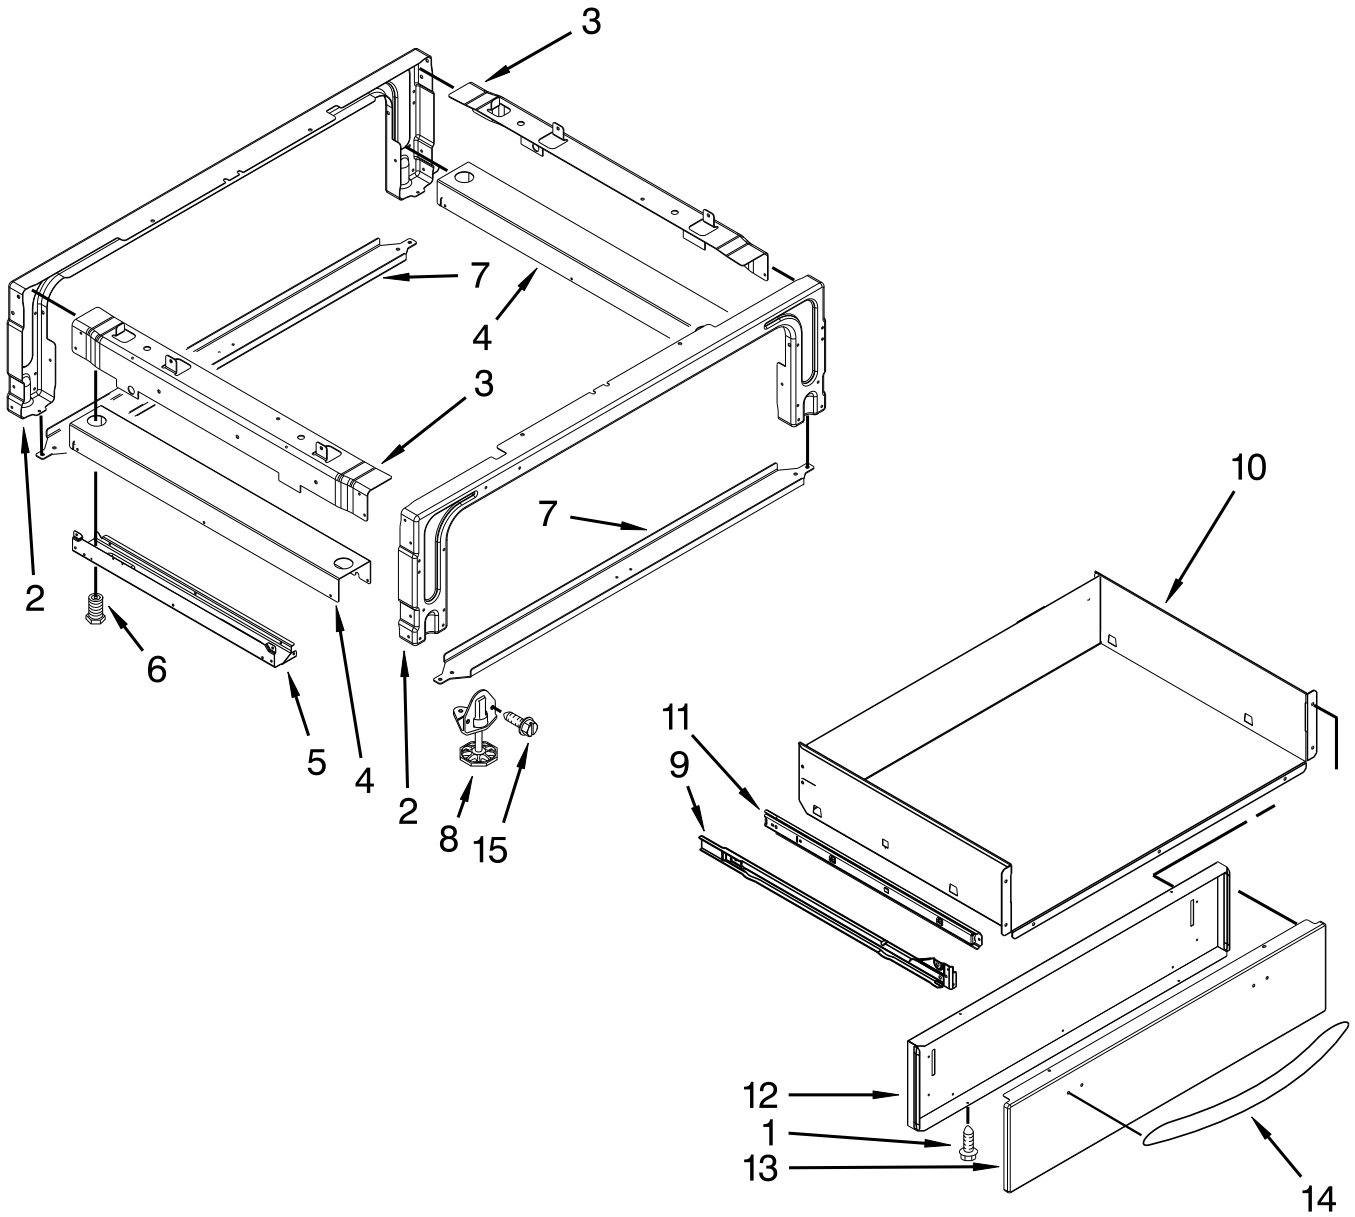




# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10162096	Screw	8	3196037	Assembly, Foot	13		Front, Drawer
2	9763501BL	Support	9	9756836	Rail, Storage (Right)		W10203760	Black
3	4453720	Brace, Drawer (Right)		9756838	Rail, Storage (Left)		W10203762	White
	4453721	Brace, Drawer (Left)	10	9757806	Drawer		W10140545	Stainless
4	9759965	Bracket, Base	11	9756841	Assembly, Drawer Guide (Right)	14		Handle, Drawer
5	9759953	Base, Side (Right)		9756842	Assembly, Drawer Guide (Left)		W10292375	Black
	9759954	Base, Side (Left)		9760592	Panel, Drawer		W10292379	White
6	W10058460	Foot, Leveling	12				W10292374	Stainless
7	9759943	Brace, Base Front				15	3196537	Screw


# TOP VENTING PARTS

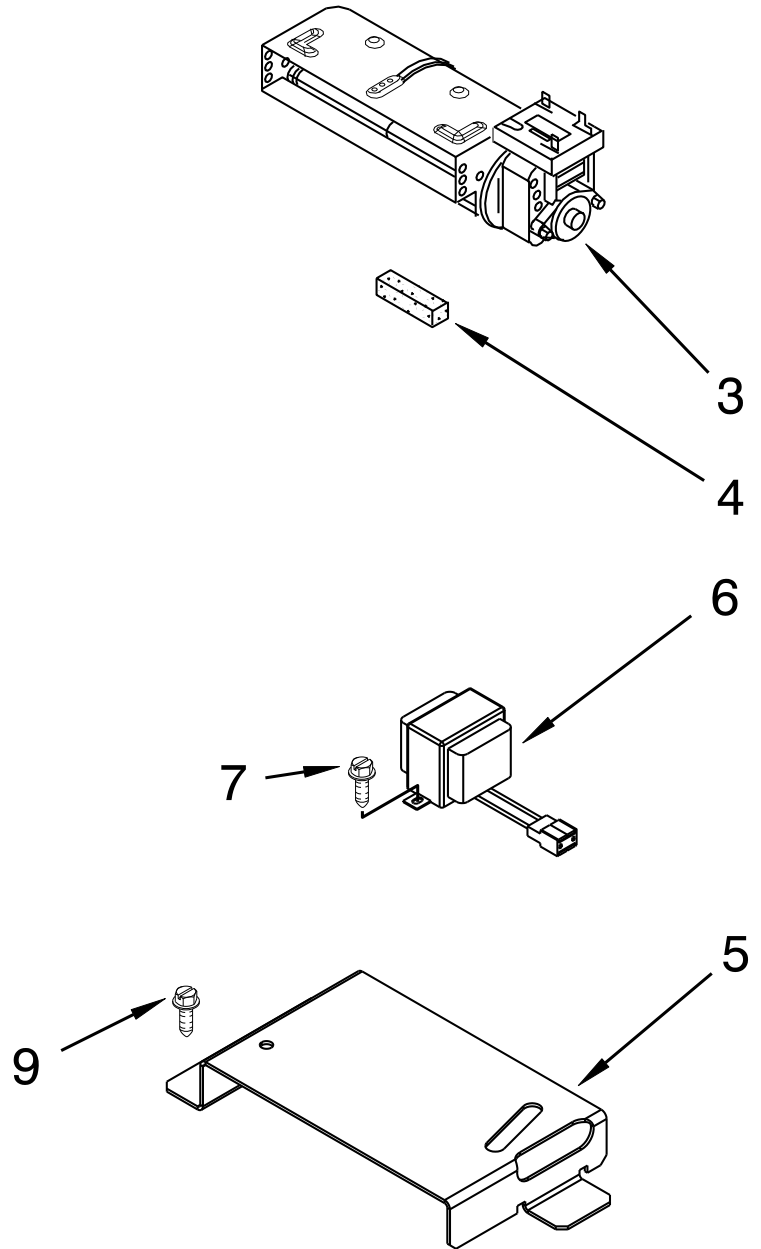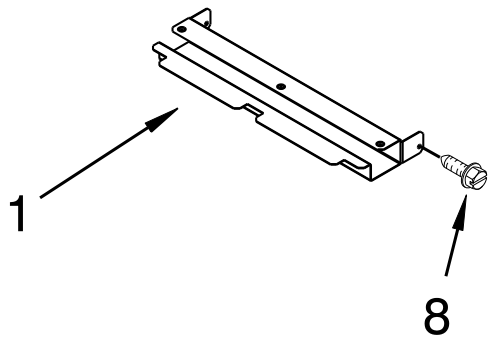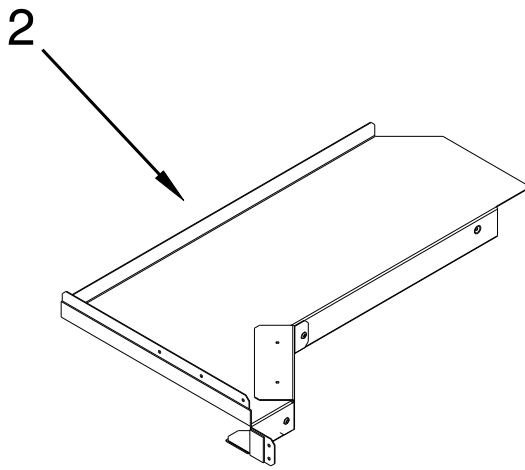

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10203758	Front, Air Duct	4	4451758	Block, Foam	8	4449040	Screw
2	W10068590	Top, Air Duct (Right)	5	9757829	Bracket, Transformer	9	4449809	Screw
	W10068600	Top, Air Duct (Left)	6	W10111628	Transformer, Control			
3	9759320	Blower, 60MM	7	3196537	Screw			


# INTERNAL OVEN PARTS

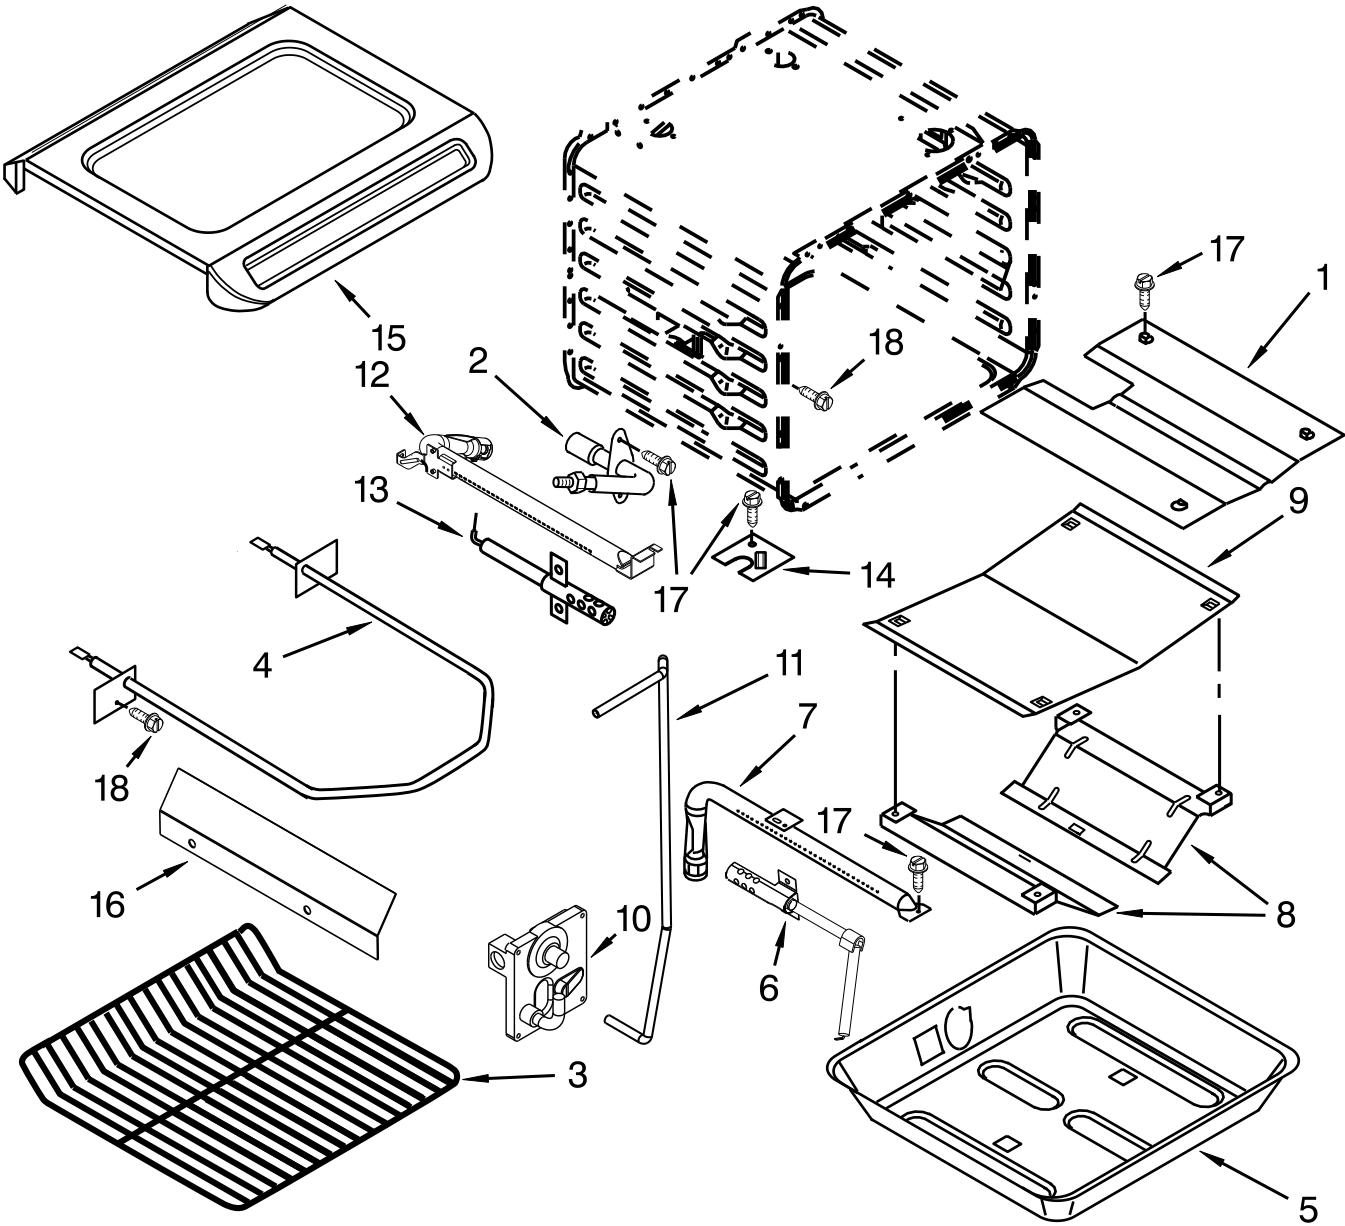

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9752980	Shield, Broiler Flame	8	9752737	Shield, Oven	16	W10153101	Diverter, Air
2	9757779	Fitting, Broiler	9	4453984	Shield, Bake Flame	17	3196176	Screw
3	W10179152	Rack, Oven	10	9763716	Assembly, Valve	18	4449154	Screw
4	W10207402	Element, Broil	11	9756831	Tube, Broil			
5	W10145744	Support, Bake Pan	12	W10111219	Burner, Broil			
6	9760229	Electrode, Bake Burner	13	8054129	Electrode, Broil			
7	9760228	Burner, Bake Log	14	4454009	Cover, Ignitor			
			15	W10272546	Bottom, Oven			


# COOKTOP BURNER PARTS

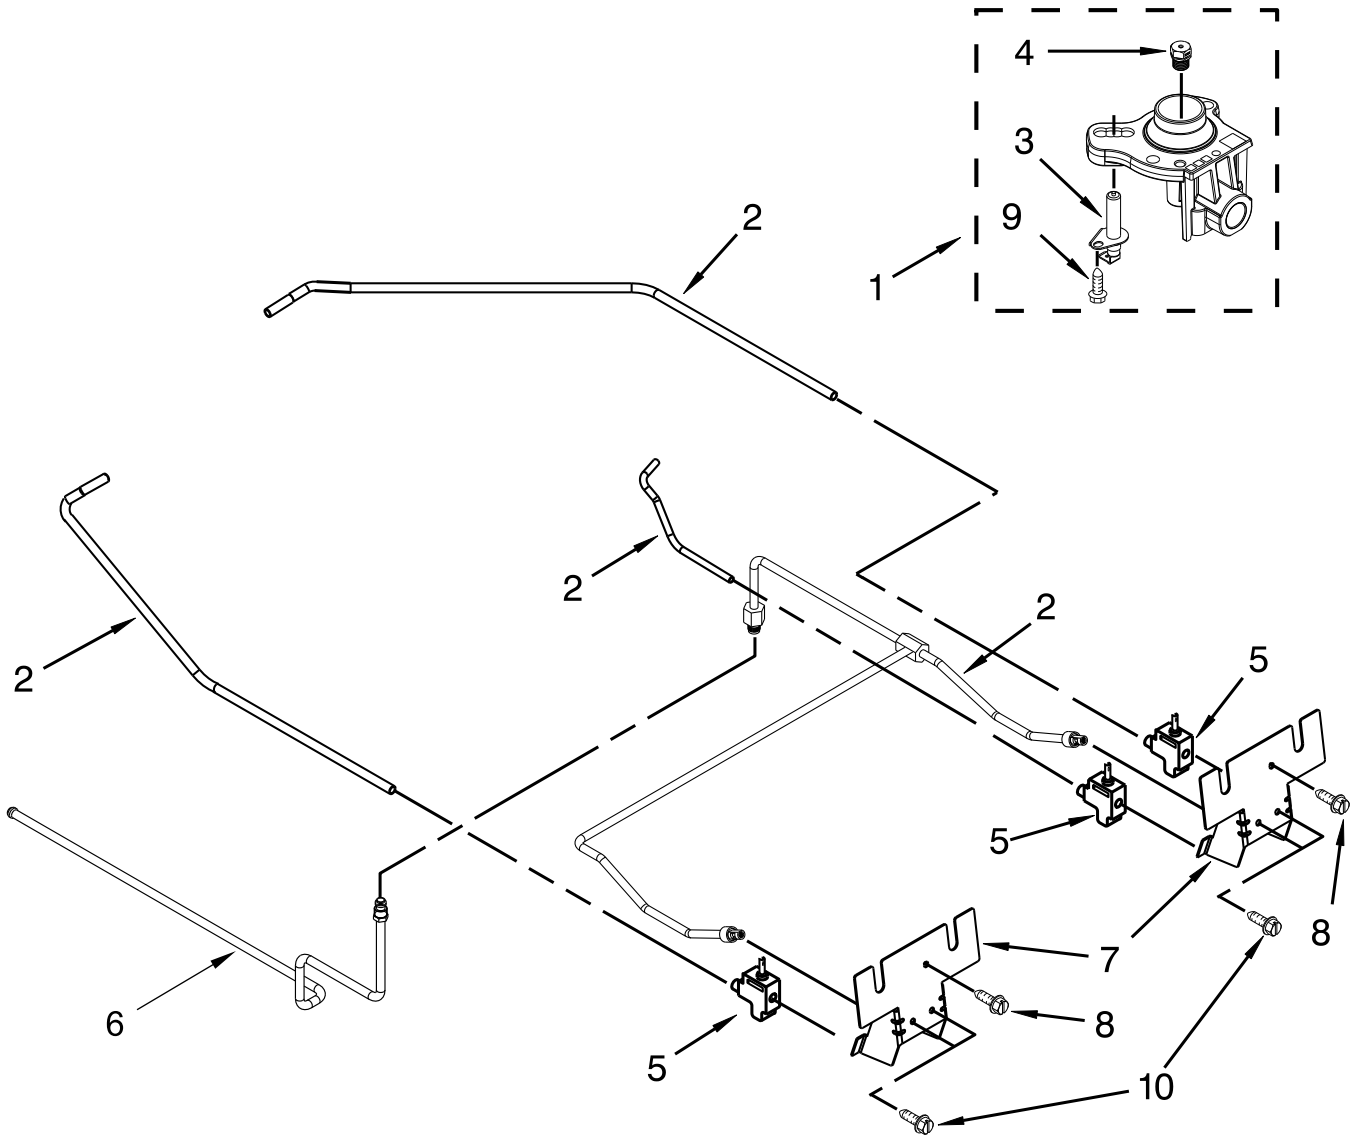

# COOKTOP BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10128446	Assembly, Orifice Holder (Left Rear & Right Front)	3	W10110378	Ignitor, Orifice	7	9761642	Manifold, Cooktop
	W10128455	Assembly, Orifice Holder (Right Rear)	4	9762937	Orifice, Spud (Left Rear & Right Front)	8	3196537	Screw
	W10128456	Assembly, Orifice Holder (Left Front)		9762938	Orifice, Spud (Right Rear)	9	8273062	Screw
2	9761068	Tubing, Burner (Left Rear)		9762939	Orifice, Spud (Left Front)	10	7101P640-60	Screw
	9761561	Tubing, Burner (Left Front)	5	4456816	Valve, Burner (Left Rear & Right Front)			
	9761070	Tubing, Burner (Right Rear)		4456818	Valve, Burner (Left Front)			
	9761069	Tubing, Burner (Right Front)		4456817	Valve, Burner (Right Rear)			
			6	4453754	Tubing, GDS To Manifold			

# CONTROL PANEL PARTS

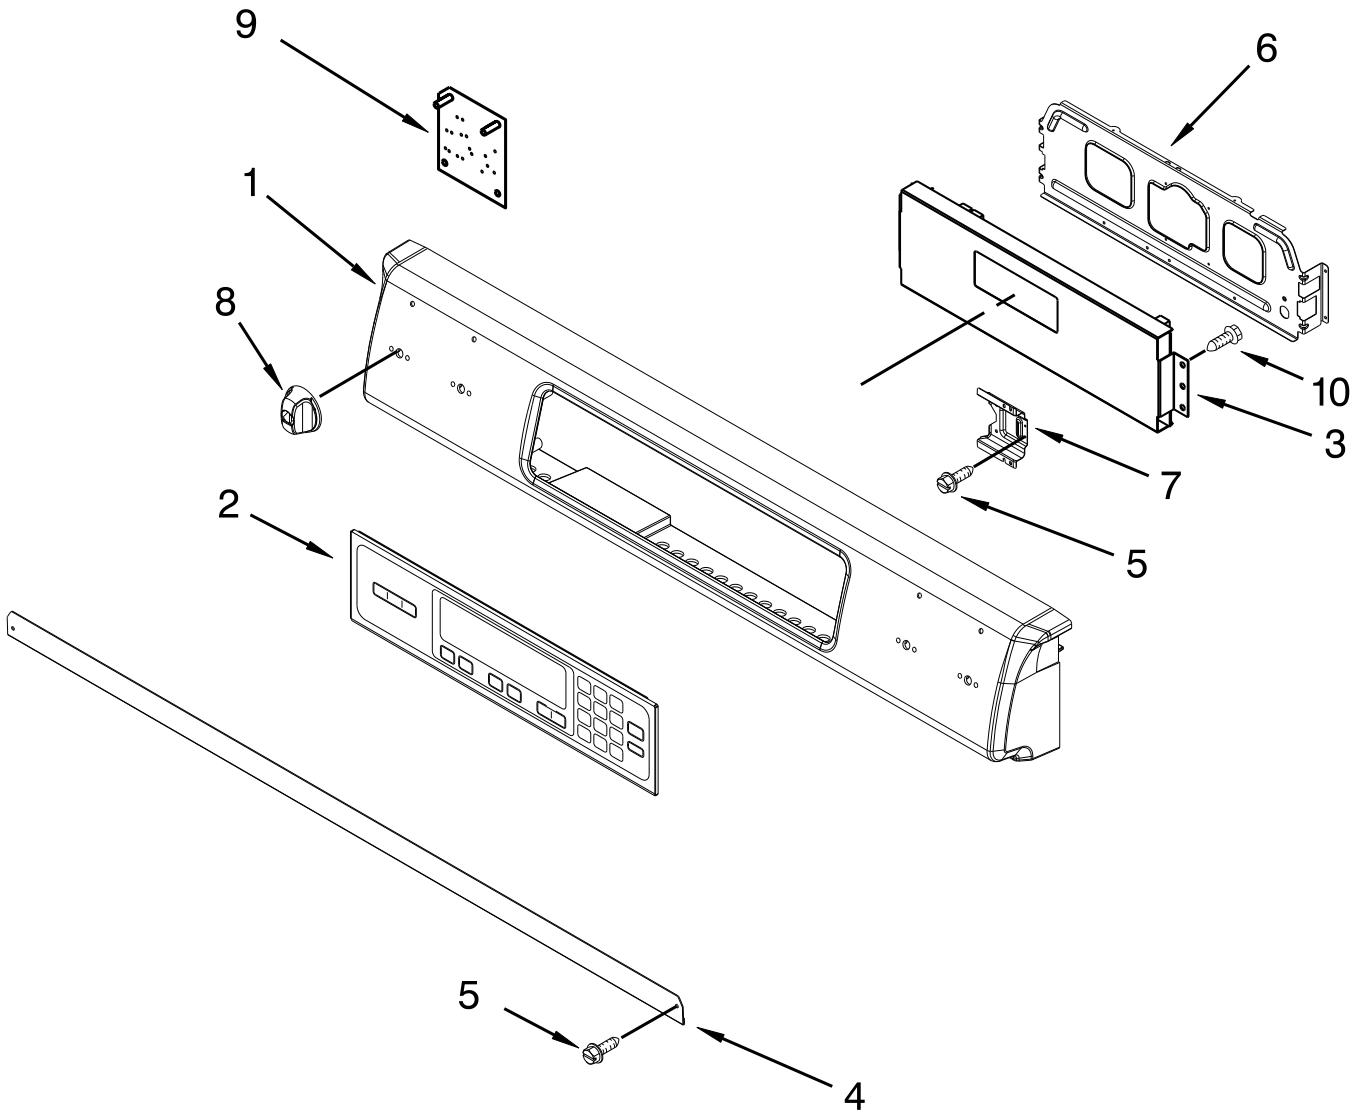



# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Control Panel	5	3196537	Screw	9	9758080	Module, Spark
	W10117036	Black	6	9757409	Support, Gas Valve	10	9780271	Screw
	W10117038	White	7	9761745	Bracket, TST			
	W10156273	Stainless	8		Knob, Burner			
2	9761565	Switch, Membrane		W10193275	Black			
3	9762793	Control, Interface		W10193273	White			
4	W10105370	Shield, Console Vent		W10156265	Stainless			

# OPTIONAL PARTS

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque
	350956	Almond
	350938	Gray Primer
	350942	White Primer

## ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	591014	Adhesive Loctite (1/3)
	482338	Sealer, Silastic

## WIRING HARNESS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10118723	Harness, Main
	9762904	Harness, Bake/Broil Ignitor
	9756892	Harness, DSI Cooktop
	9756822	Harness, Switch
	9762921	Harness, Communication
	9763481	Harness, Ground Strap
	W10237644	Connector, Flex
	1129449	Bushing
	4454842	Tie, Cable
	4449809	Screw
	4450800	Screw, Grounding
	4452222	Spacer, Harness

## MISCELLANEOUS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4455352	Bracket, Blower (60mm)
	9757427	Kit, LP Conversion
	9758677	Cord, Power
	9782676	Anti-Tip Assembly
		Kit, Filler
	W10113902A	Black
	W10113903A	White
	W10113901A	Stainless