

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS


For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
 (Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10246119	Installation Instructions
	W10246111	Use & Care Guide
	W10220962	Tech Sheet
	9763467	Easy Set Guide
	9757680	Anti-Tip Instructions
		Safe Cooking Tips
	9762761	English
	W10065852	French
2	246119	Screw
3	9761422	Frame, Cooktop
4		Cooktop
	W10110271	Black/Stainless
	W10110269	White
5	9761724	Cover, Cooktop
		Rear
6	9763517	Rail, Element (2)
7	W10076030	Gasket (2)
9	9759944	Thermostat
10	9756821	Support, Wiring
11	9757825	Rail, Element
		Center (1)
12		Element, Surface
	W10203294	LR/1000W
	4453909	LF,RR/1200W
	8523696	RF/1800W
13	9761423	Frame, Cooktop
		Front
14	3196537	Screw
15	341196	Thermostat
16	3196160	Screw
17	8523739	Indicator Light, Hot Surface
18	9758799	Bracket, Indicator Light
19	9759094	Spring, Locator
20	9761768	Frame, Cooktop
		Rear

# OVEN PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04

(Black) (Designer White) (Stainless)

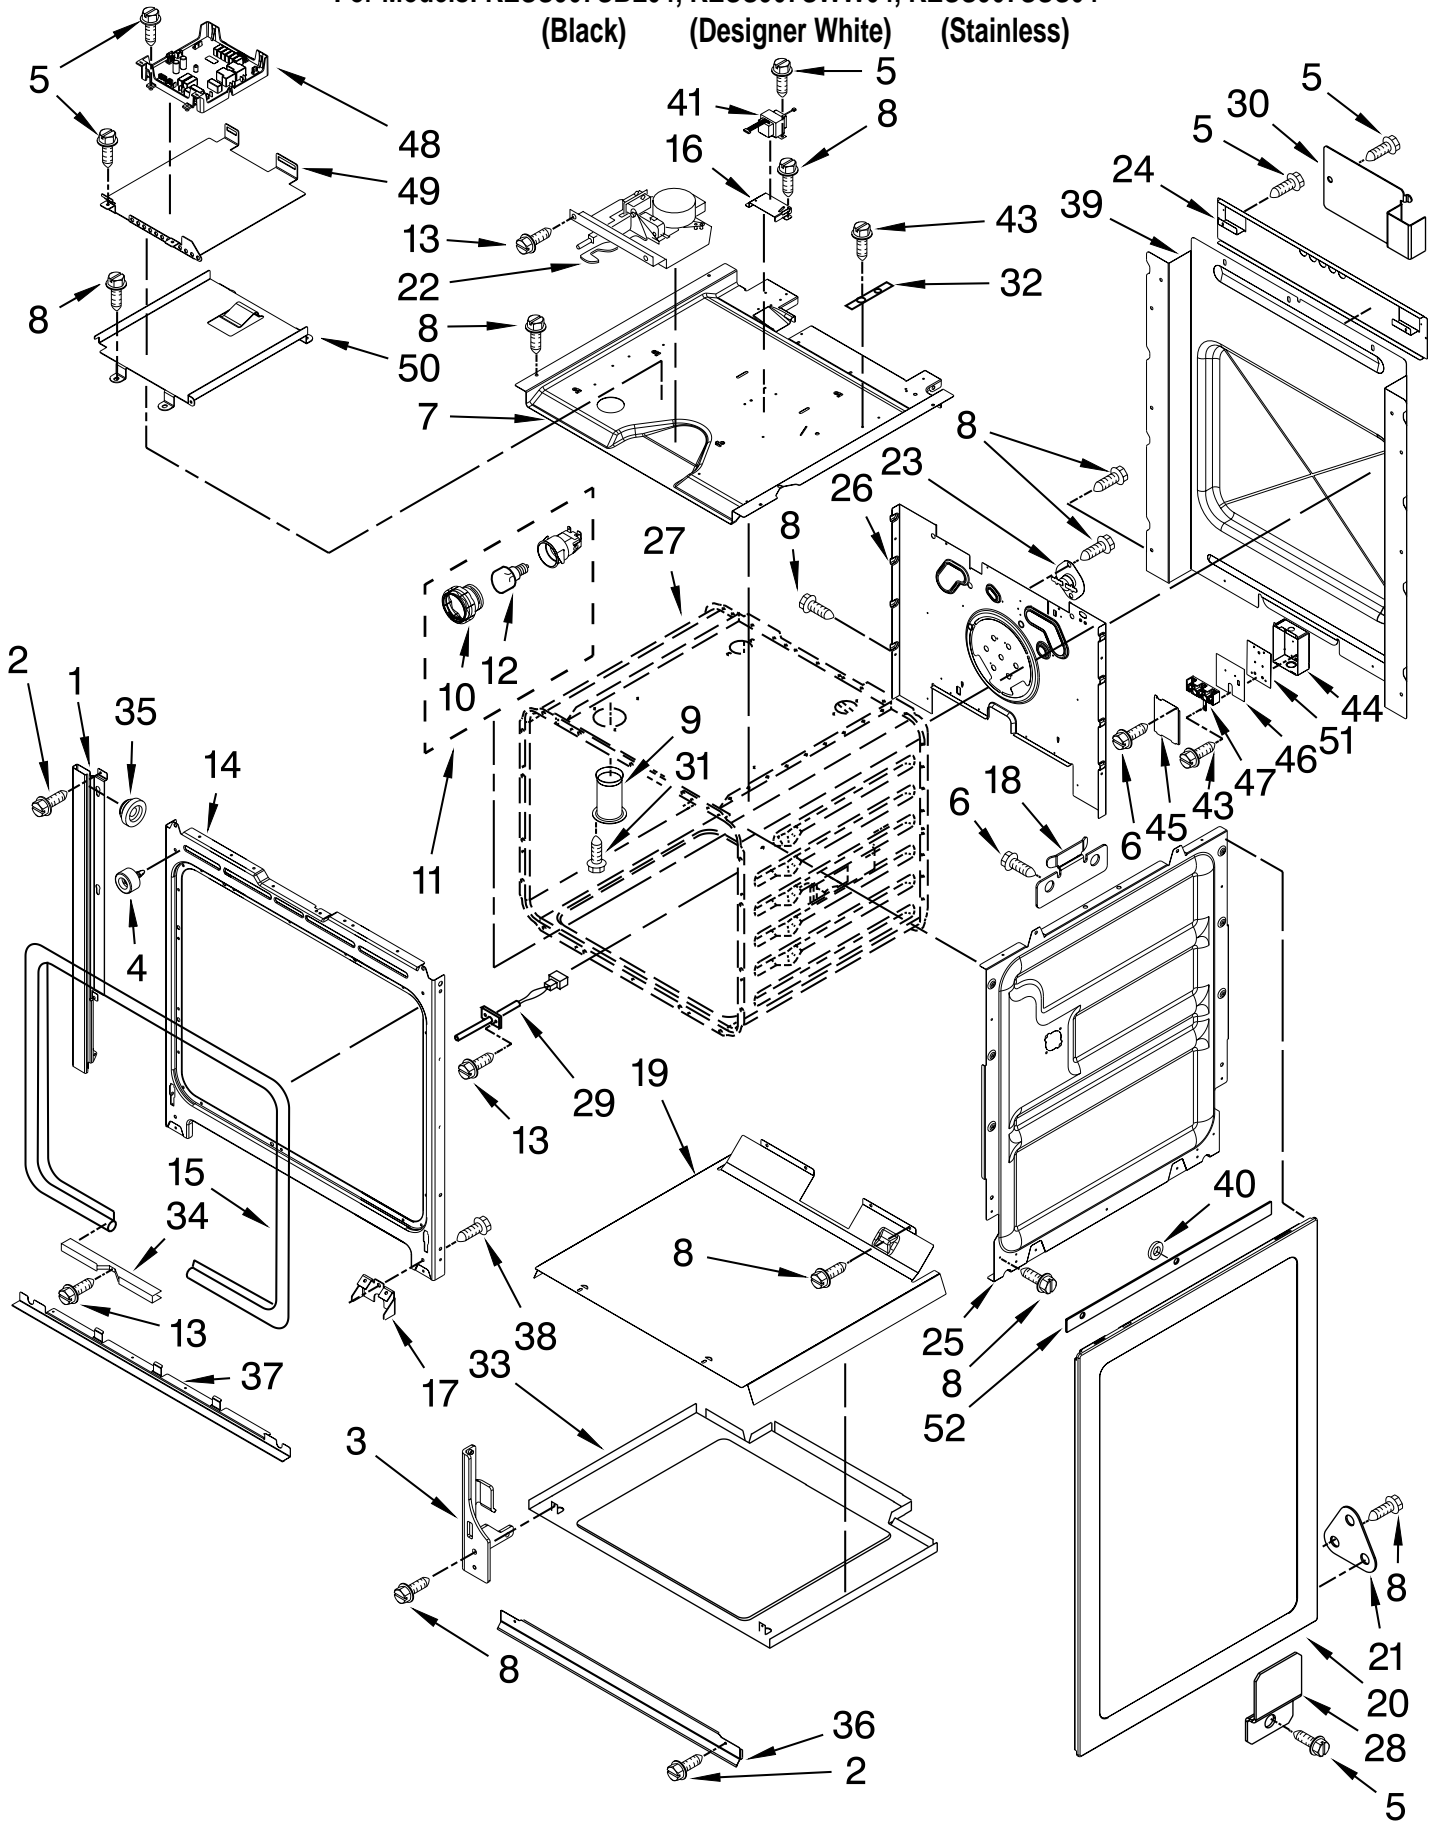

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


# OVEN PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
(Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	18	9757685	Guide, Side Panel	38	W10292297	Screw
	W10109540	Black	19	4451478	Support, Insulation Body, Side	39	9758583	Cover, Back
	W10109570	White	20			40	9760481	Washer
	W10140548	Stainless		W10281880	Black/Stainless	41	W10111628	Transformer, Control
		Left		W10281881	White	43	3400080	Screw
	W10109490	Black	21	9757461	Bracket, Side Panel	44	W10165135	Box, Terminal
	W10109520	White	22	W10195934	Latch, Motorized	45	9757405	Cover, Terminal Box
	W10140547	Stainless	23	9759242	Thermostat	46	9759721	Insulator, Terminal Box
2	3400832	Screw	24	9757811	Brace, Side Panel	47	W10245259	Block, Terminal
3		Hinge Receiver	25	4455641	Side, Chassis	48	W10181438	Appliance, Manager
	4455606	Right	26	9759761	Back, Chassis	49	W10083460	Slide, GOC
	4455605	Left	27		Liner, Oven (Not Serviceable)	50	9756454	Bracket, Appliance Manager
4	W10105790	Bumper, Door	28	9759890	Clip, Side Panel	51	9759884	Insulation
5	3196537	Screw	29	W10131825	Sensor	52	9759722	Insulation, Body Side
6	W10143304	Screw	30	9759945	Standoff, Rear	<b>FOLLOWING PARTS NOT ILLUSTRATED</b>		
7	8303099	Top Chassis	31	3196176	Screw	<b>INSULATION</b>		
8	4449809	Screw	32	9759885	Pad, Insulation		9756817	Insulation, Wrap
9	4452158	Tube, Vent	33	9759713	Base, Chassis		9756470	Insulation, Back
10	W10067870	Lens, Light	34	4448933	Retainer, Gasket			
11	W10009930	Oven Light, Assembly	35	4448444	Grommet, Mounting Rail			
12	4452166	Bulb, Light	36		Vent, Bottom Upper			
13	4449154	Screw		9756481BL	Black			
14	W10115831	Frame, Front		W10116897	White			
15	W10074200	Gasket, Door		W10140533	Stainless			
16	9757829	Bracket, Transformer	37		Vent, Bottom Lower			
17	4452152	Bracket, Mounting		W10153486	Black			
				W10153488	White			
				W10154789	Stainless			

# DOOR PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
(Black) (Designer White) (Stainless)

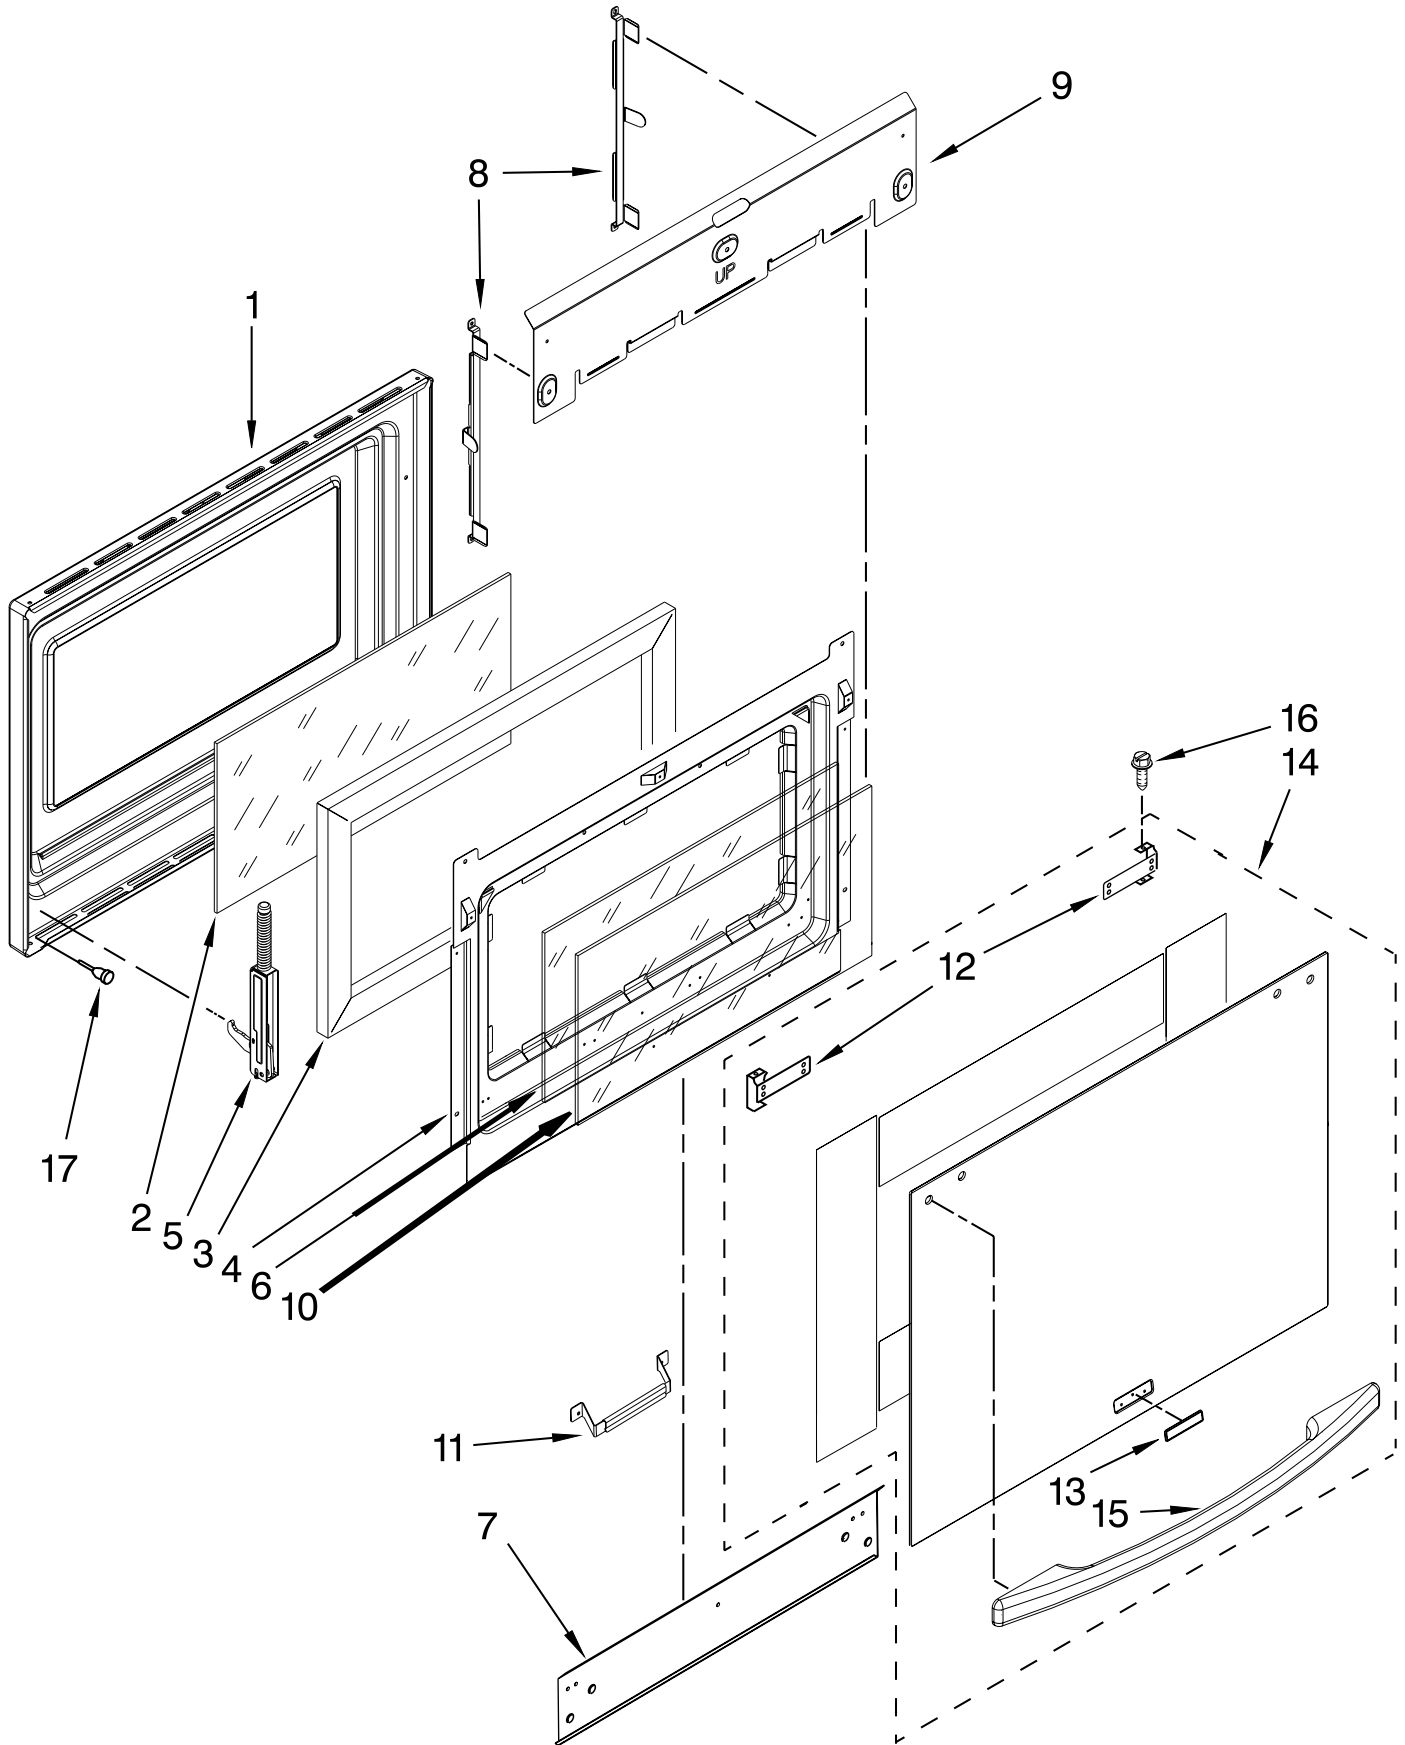

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR PARTS


For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
 (Black) (Designer White) (Stainless)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	W10277749	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760580	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457104	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	W10246114	Right
	W10246113	Left
13		Nameplate
	W10243392	Black
	W10243393	White
	W10243392	Stainless
14		Assembly, Door Kit
	W10131888	Black
	W10131889	White
	W10155557	Stainless
15		Handle, Door
	W10292381	Black
	W10292382	White
	W10292380	Stainless
16	3196184	Screw
17	4448520	Bumper, Door

# DRAWER PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04

(Black) (Designer White) (Stainless)

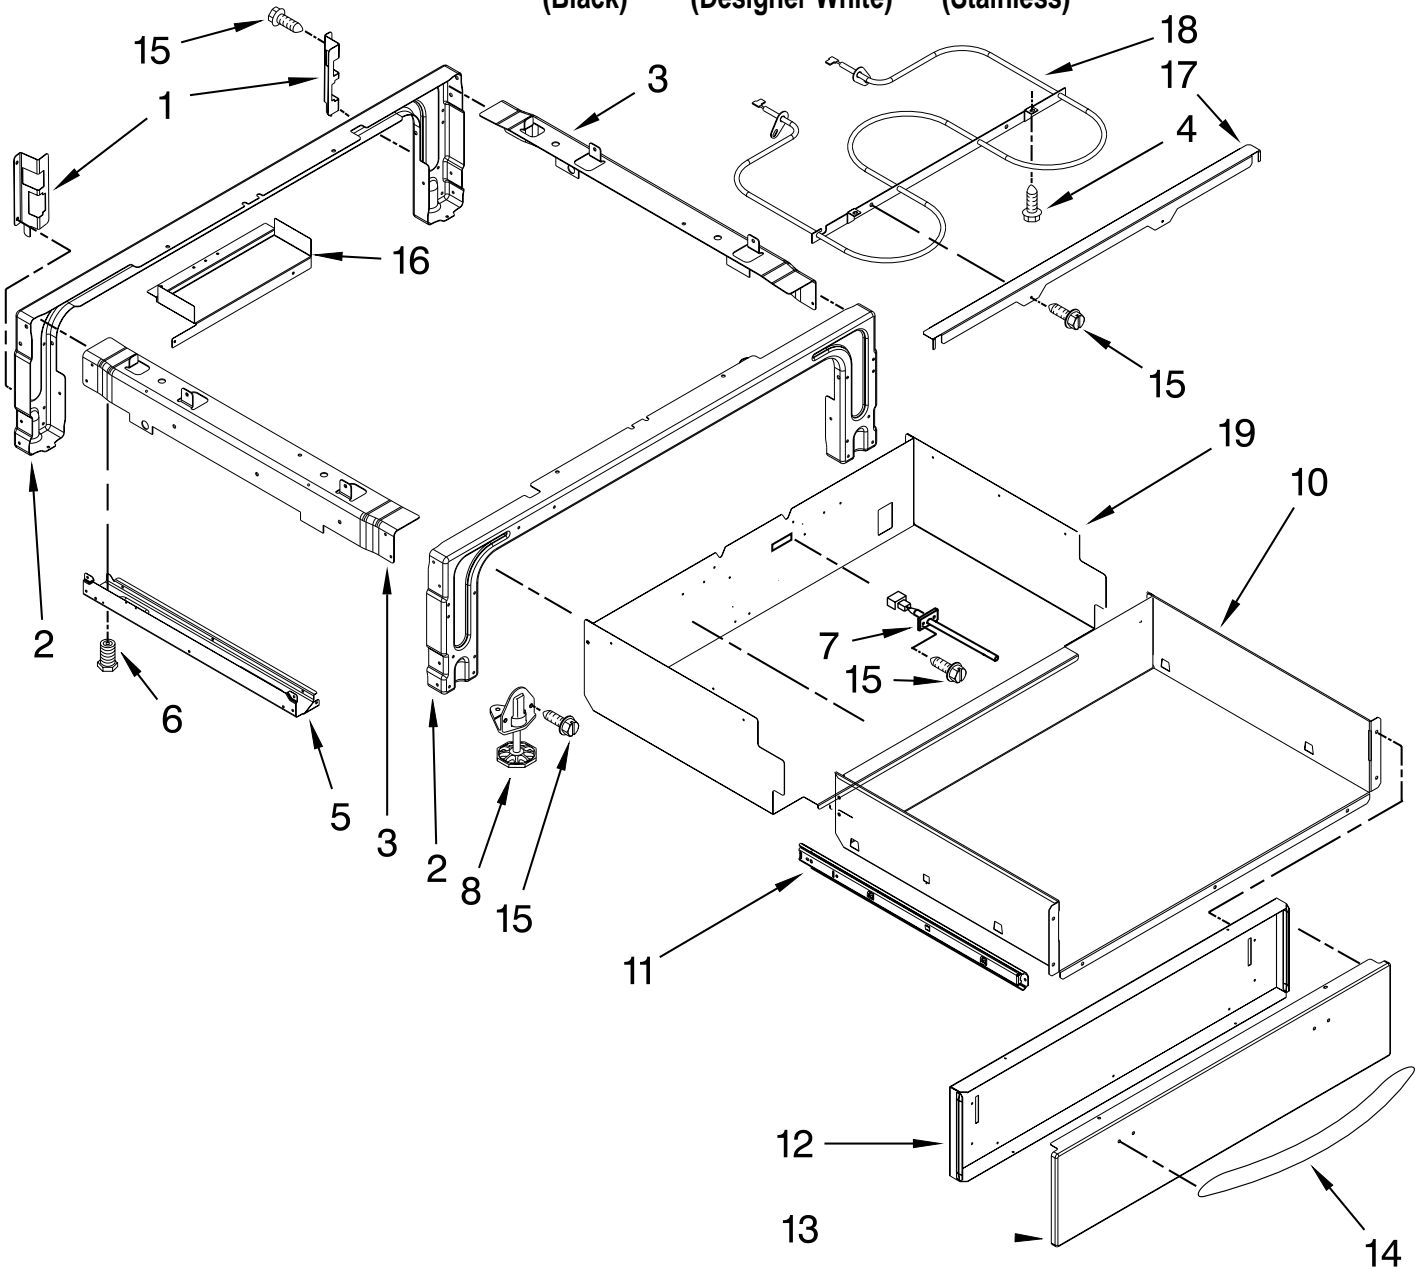

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
4	W10162096	Screw


Illus. No.	Part No.	DESCRIPTION
5		Side, Base
	9759953	Right
	9759954	Left
6	W10058460	Foot
7	8274149	Thermistor
8	3196037	Foot Assembly
10	W10164163	Drawer
11		Drawer Slide
	W10155633	Right
	W10155632	Left
12	W10164169	Panel, Drawer
13		Front, Drawer
	W10203760	Black
	W10203762	White
	W10203763	Stainless

Illus. No.	Part No.	DESCRIPTION
14		Handle, Drawer
	W10292375	Black
	W10292379	White
	W10292374	Stainless
15	3196537	Screw
16	W10153100	Cover, Terminal
17	9758676	Support, Element
18	W10207401	Element, Warming Drawer
19	9763518	Enclosure, Warming Drawer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
(Black) (Designer White) (Stainless)

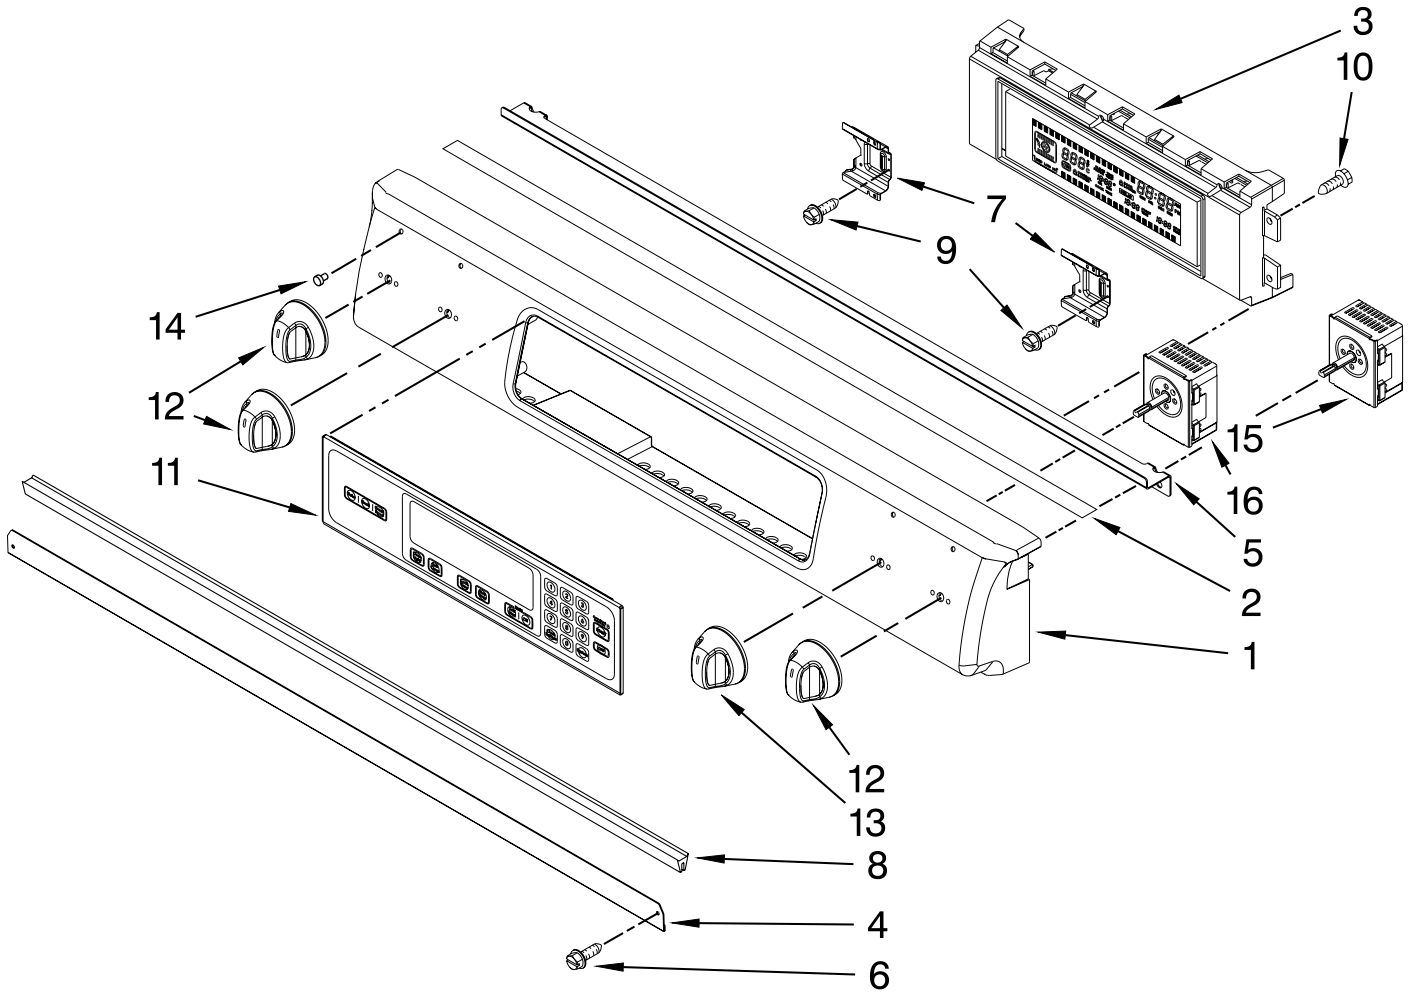

Illus. No.	Part No.	DESCRIPTION
1		Control Panel
	W10190660	Black
	W10190661	White
	W10190662	Stainless
2	W10110246	Gasket, Console
3	W10181439	Control, Electric
4	W10105370	Shield, Console Vent
5	W10117524	Bracket, Console
6	3196160	Screw

Illus. No.	Part No.	DESCRIPTION
7	9761745	Bracket, Thermostat (2)
8	W10116195	Gasket, Vent Shield
9	3196537	Screw
10	9780271	Screw
11	9761566	Membrane, Switch
12		Knob, Smart Dual LF,LR,RR
	W10193255	Black
	W10193253	White
	W10156260	Stainless

Illus. No.	Part No.	DESCRIPTION
13		Knob, Smart Single RF
	W10193259	Black
	W10193257	White
	W10156261	Stainless
14	3196068	Lens, Indicator Light
15	9763762	Duel Switch LF,LR,RR
16	9763761	Single Switch RF


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# INTERNAL OVEN PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04

(Black) (Designer White) (Stainless)

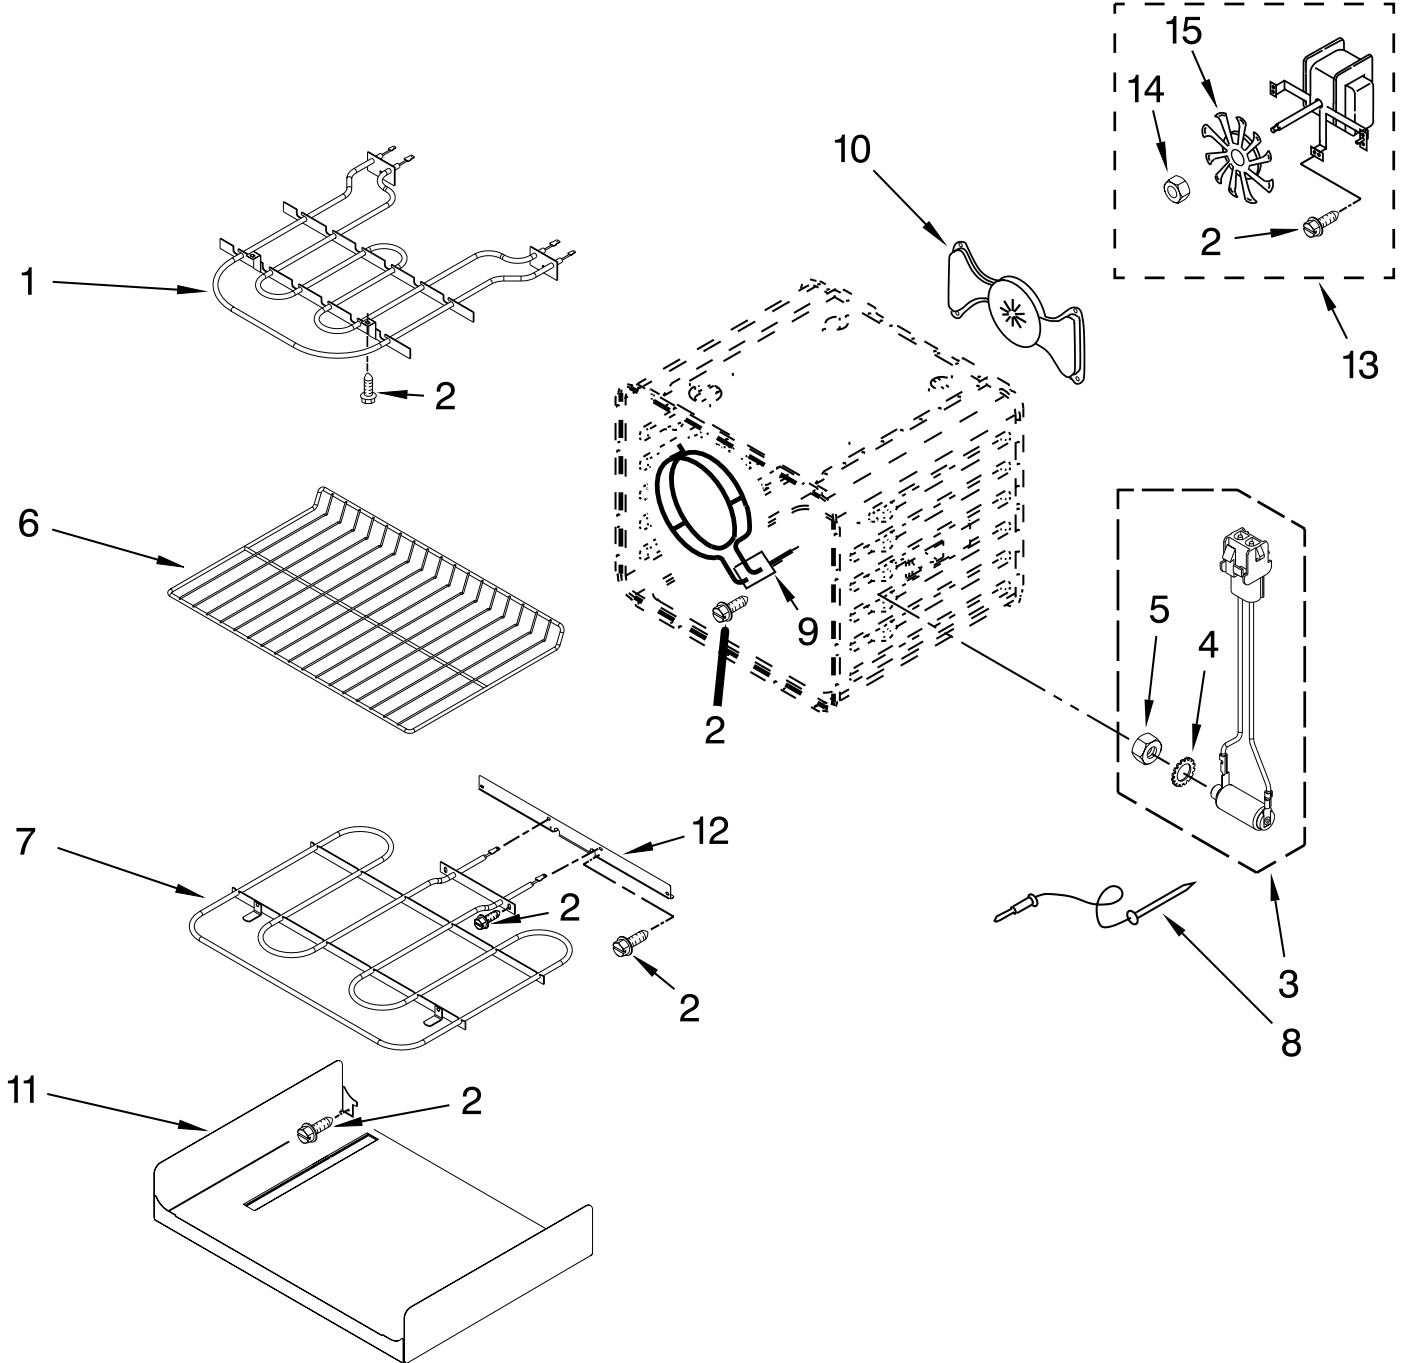

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4449154	Screw
3	9755543	Jack, Meat Probe
4	9755547	Lock Washer
5	9755546	Hex Nut


Illus. No.	Part No.	DESCRIPTION
6	W10179152	Rack, Oven
7	W10207398	Element, Hidden Bake
8	9755542	Probe, Meat
9	9760769	Element, Convection
10	W10160868	Baffle, Convection

Illus. No.	Part No.	DESCRIPTION
11	4455037	Tray, Hidden Bake
12	4450039	Cover, Bake Tray
13	W10116228	Motor, Convection
14	W10116349	Nut
15	W10116351	Blade, Fan

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
 (Black) (Designer White) (Stainless)

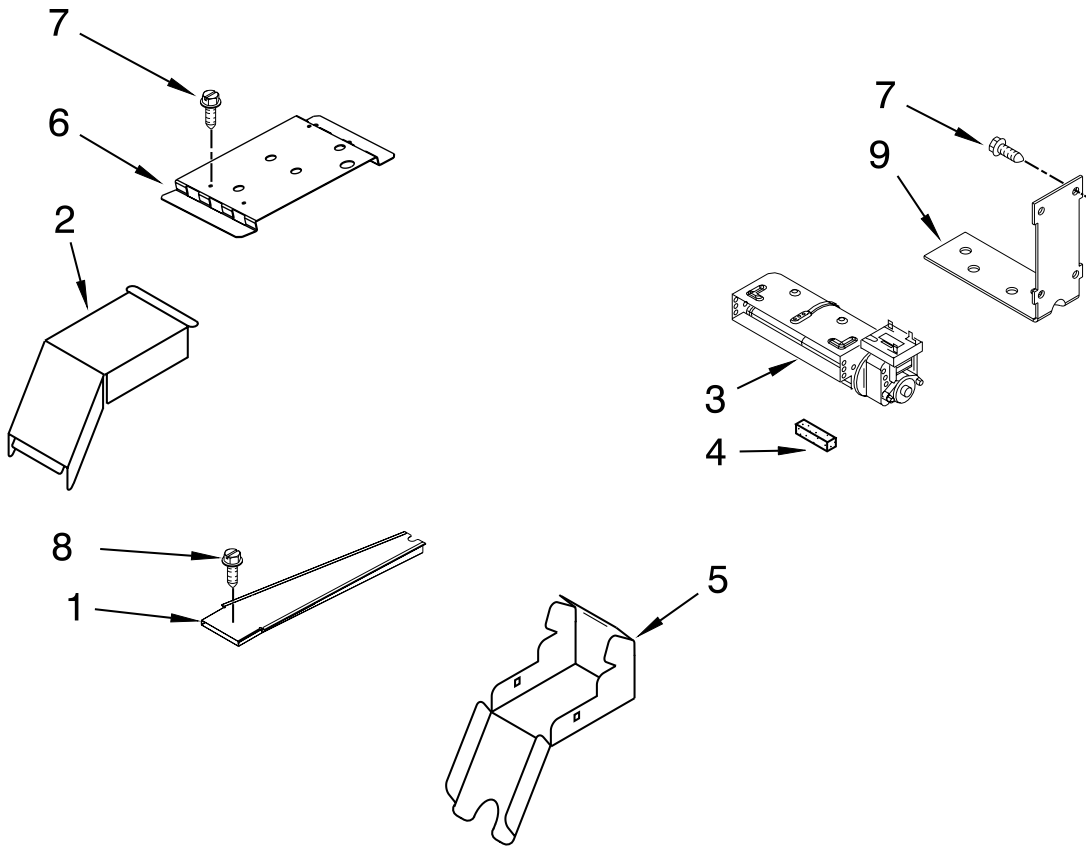

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	W10143041	Bracket, Terminal Box
7	4449809	Screw
8	4449040	Screw
9	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: KESS907SBL04, KESS907SWW04, KESS907SSS04  
(Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
	261869	Cord Brown
	72032	Black
<b><u>PAINT, SPRAY</u></b>		
	350930	White
	261900	Citrine White
	830864	Black
<b><u>ADHESIVE</u></b>		
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
<b><u>WIRING HARNESS PARTS</u></b>		
	W10137680	Harness, Main
	W10198758	Harness, Cooktop
	W10157935	Harness, Switch
	9762921	Harness, Communication
	W10207713	Bushing, Snap
	9763481	Harness, Ground Strap Edge Protector
	W10123242	19mm
	W10127413	38mm
	3148605	Anchor, Plastic
	W10177363	Grommet, Flex 60mm
	3192830	Bracket, Anti Tip
	9757778	Bushing, Snap Split 1"
	W10076020	Gasket
	4449809	Screw
	7103P027-60	Nut
	W10237644	Connector, Flex
	4450800	Screw, Ground
	3400015	Screw, Ground

Illus. No.	Part No.	DESCRIPTION
<b><u>Miscellaneous</u></b>		
	9782676	Anti-Tip Assembly Filler, Counter Top
	W10113902A	Black
	W10113903A	White
	W10113901A	Stainless