

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


COOKTOP PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	W10118260	Installation Instructions Use & Care Guide
	W10246111	English
	W10162197	French Tech Sheet
	W10220962	English
	W10220963	French
	9763467	Easy Set Guide
	9757680	Anti-Tip Instructions Safe Cooking Tips
	9762761	English
	W10065852	French
2	9758799	Bracket, Indicator Light
3	9761422	Frame, Cooktop Side
4		Cooktop
	W10110271	Black/Stainless
	W10110269	White
5	8523739	Indicator, Lamp Hot Surface
6		Edge Protector
	W10123242	19mm
	W10127413	38mm
7	W10076030	Gasket
8	W10248257	Element, LR, 1800/1000W
9	9759944	Thermostat
10	9756821	Support, Wiring
11	9757825	Rail, Element Center
12	W10275049	Element, LF/RR, 2500/1200W
13	9761423	Frame, Cooktop Front
14	3196537	Screw
15	341196	Thermostat
16	3196160	Screw
17	8273993	Element, RF, 1800W
18	9761724	Cover, Cooktop Rear
19	9759094	Spring, Locator
20	9761768	Frame, Cooktop Rear
21	9763517	Rail, Element
22	246119	Screw

OVEN PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
 (Black) (White) (Stainless)

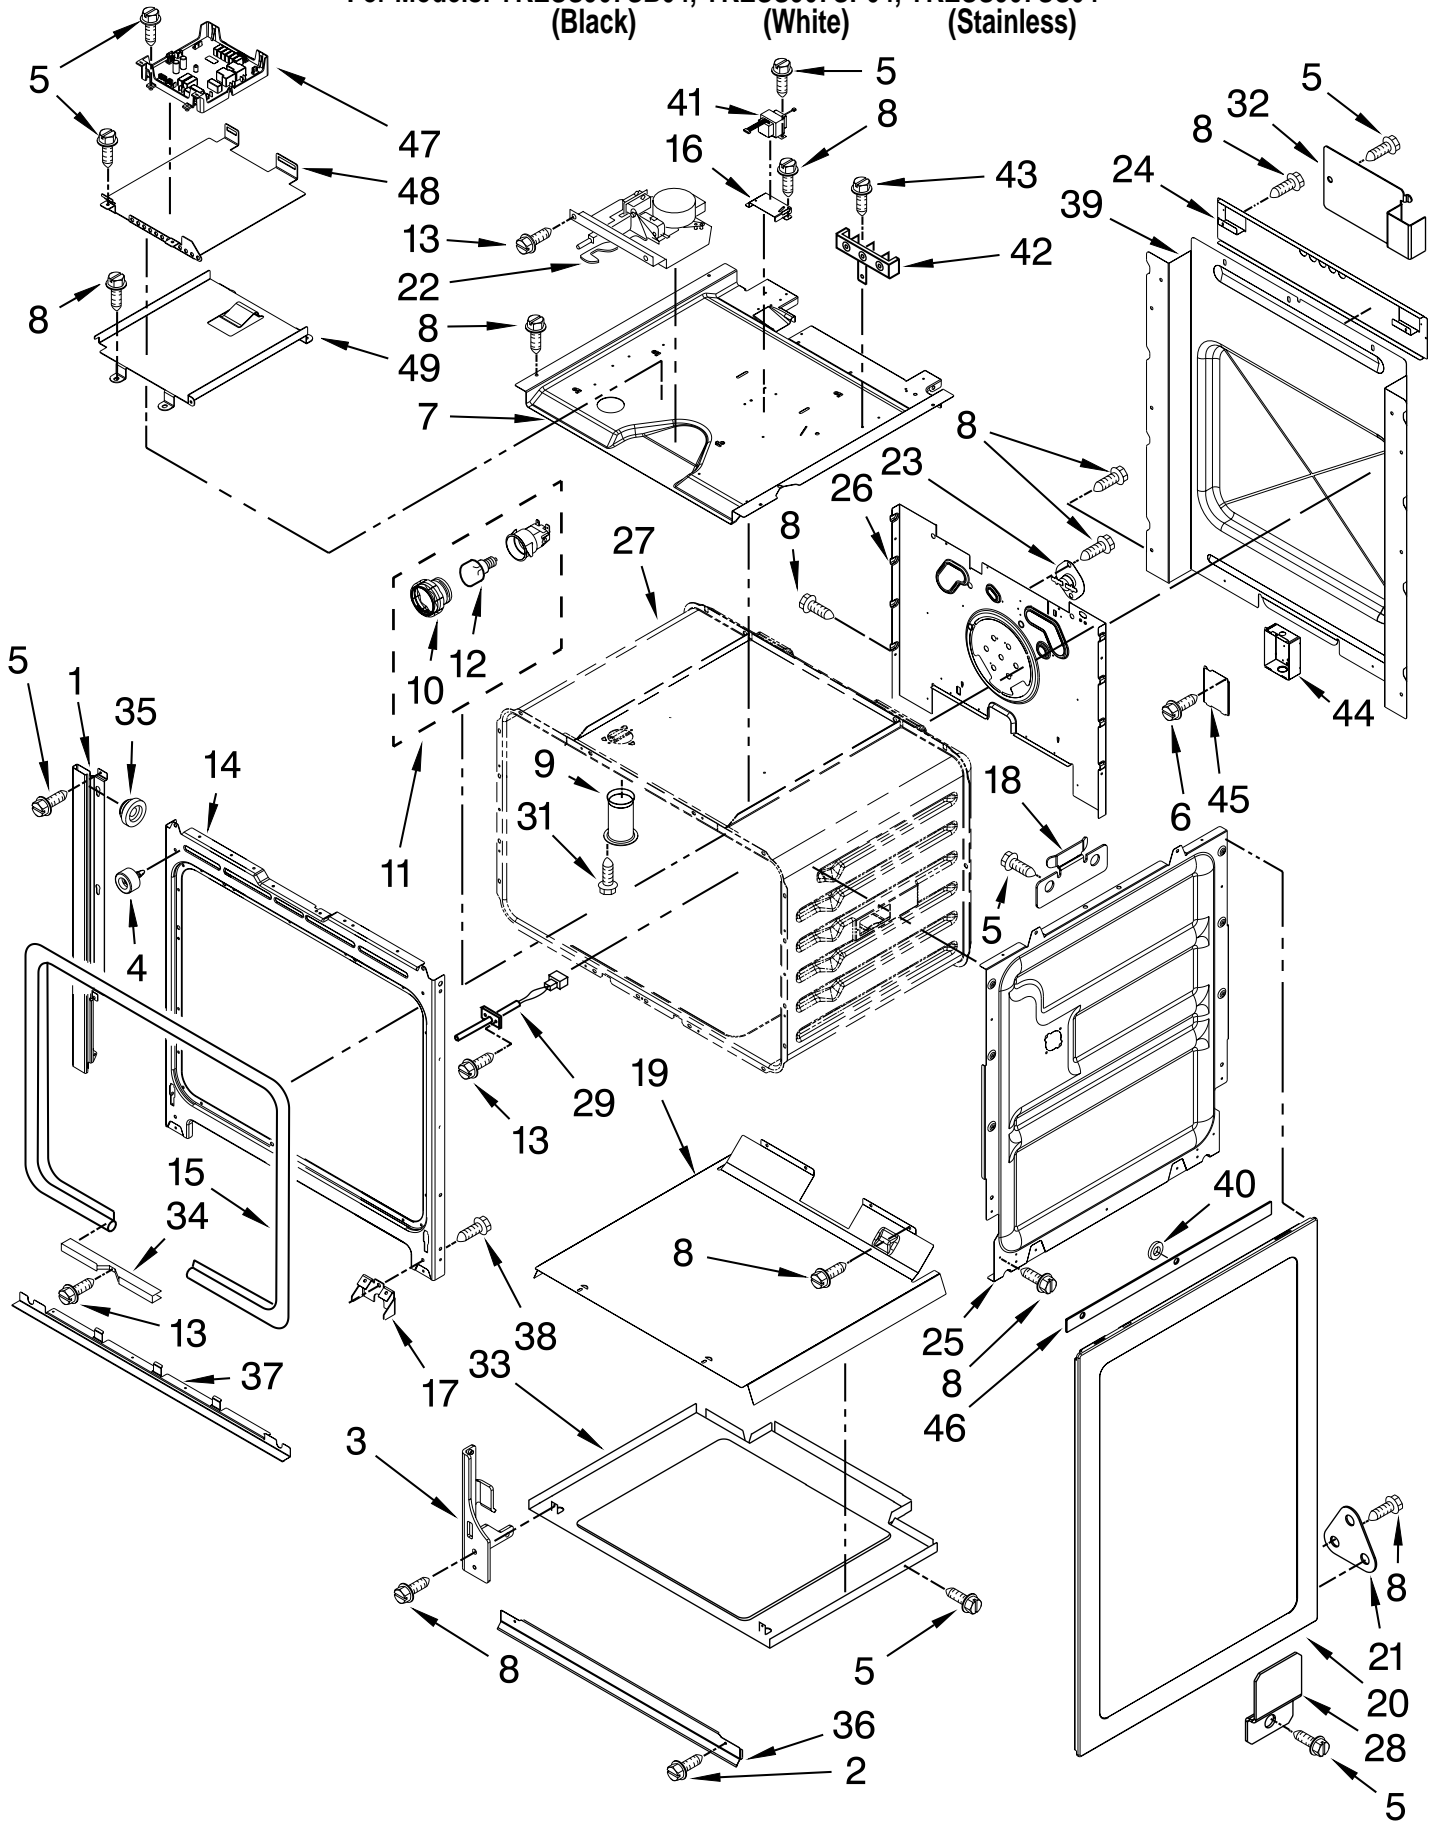

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


OVEN PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	18	9757685	Guide, Side Panel	38	4449743	Screw
	W10109540	Black	19	4451478	Support, Insulation Body, Side	39	9758583	Cover, Back
	W10109570	White	20			40	9760481	Washer
	W10140548	Stainless		W10281880	Black/Stainless	41	W10111628	Transformer, Control
		Left		W10281881	White	42	7401P038-60	Block, Terminal
	W10109490	Black	21	9757461	Bracket, Side Panel	43	3400080	Screw
	W10109520	White	22	W10195934	Latch, Motorized	44	9759987	Box, Terminal
	W10140547	Stainless	23	9759242	Thermostat	45	9759876	Cover, Terminal Box
2	3400832	Screw	24	9757811	Brace, Side Panel	46	9759722	Insulation, Body Side
3		Hinge Receiver	25	4455641	Side, Chassis	47	W10181438	Appliance, Manager
	4455606	Right	26	9759761	Back, Chassis	48	W10083460	Slide, GOC
	4455605	Left	27		Liner, Oven (Not Serviceable)	49	9756454	Bracket, Appliance Manager
4	W10105790	Bumper, Door	28	9759890	Clip, Side Panel	FOLLOWING PARTS NOT ILLUSTRATED		
5	3196537	Screw	29	W10131825	Sensor	INSULATION		
6	3196160	Screw	31	3196176	Screw		9756817	Insulation, Wrap
7	8303099	Top Chassis	32	9759945	Standoff, Rear		9756470	Insulation, Back
8	7101P426-60	Screw	33	9759713	Base, Chassis			
9	4452158	Tube, Vent	34	4448933	Retainer, Gasket			
10	W10067870	Lens, Light	35	4448444	Grommet, Mounting Rail			
11	W10009930	Oven Light, Assembly	36		Vent, Bottom Upper			
12	4452166	Bulb, Light		W10116899	Black			
13	4449154	Screw		W10116897	White			
14	W10115831	Frame, Front		W10160347	Stainless			
15	W10074200	Gasket, Door	37		Vent, Bottom Lower			
16	9757829	Bracket, Transformer		W10153486	Black			
17	4452152	Bracket, Mounting		W10153488	White			
				W10154789	Stainless			

DOOR PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
(Black) (White) (Stainless)

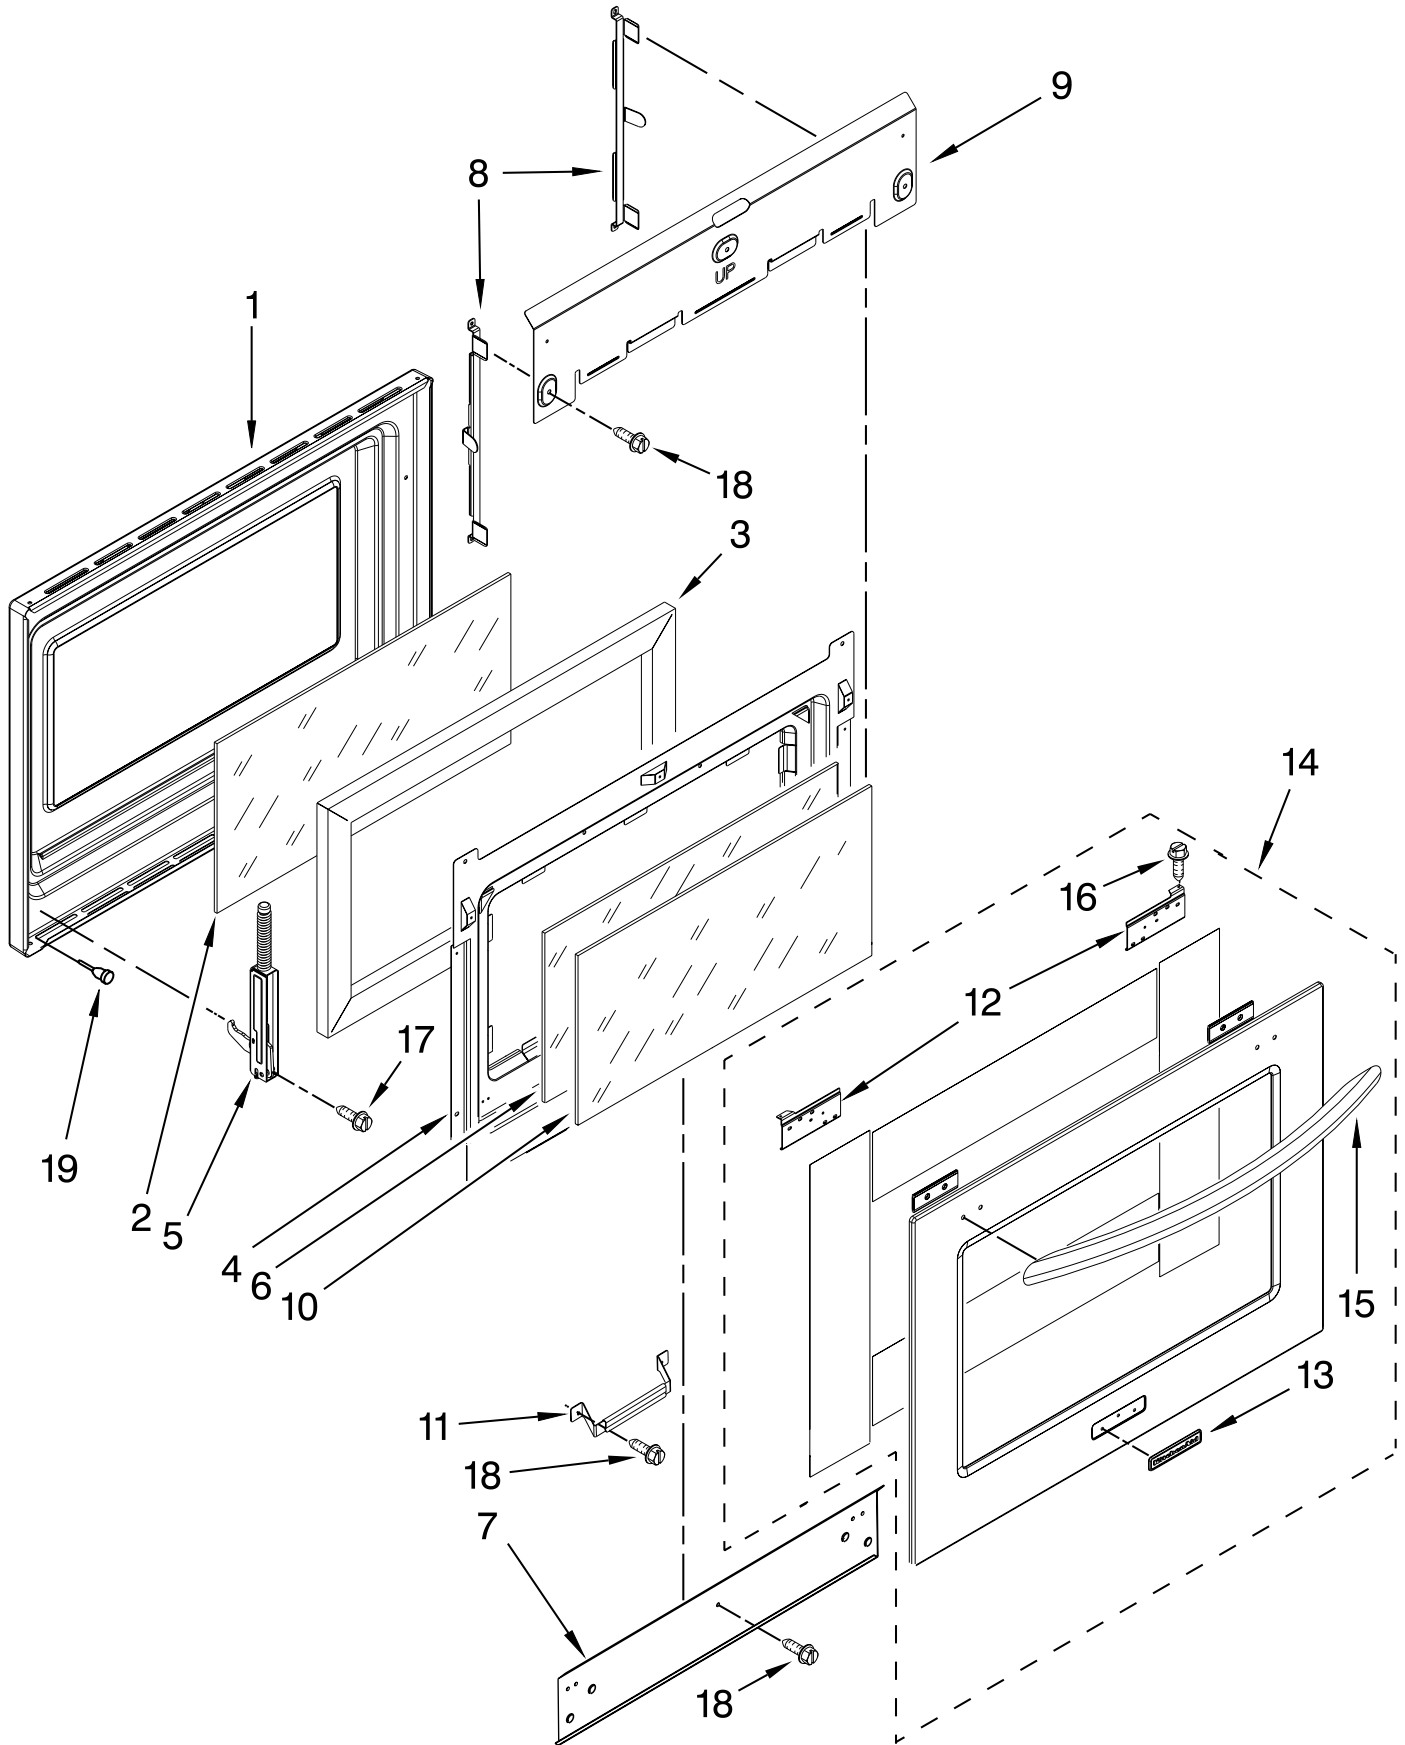

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


DOOR PARTS

For Models: YKESS907SB04, YKESS907SP04, YKESS907SS04
 (Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	W10277749	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760574	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457104	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	W10246114	Right
	W10246113	Left
13		Badge
	W10243392	Black
	W10243393	White
	W10243391	Stainless
14		Assembly, Door Kit
	W10131888	Black
	W10131889	White
	W10155557	Stainless
15		Handle, Door
	W10292381	Black
	W10292382	White
	W10292380	Stainless
16	3196184	Screw
17	W10292297	Screw
18	7101P426-60	Screw
19	4448520	Bumper, Door

DRAWER PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
(Black) (White) (Stainless)

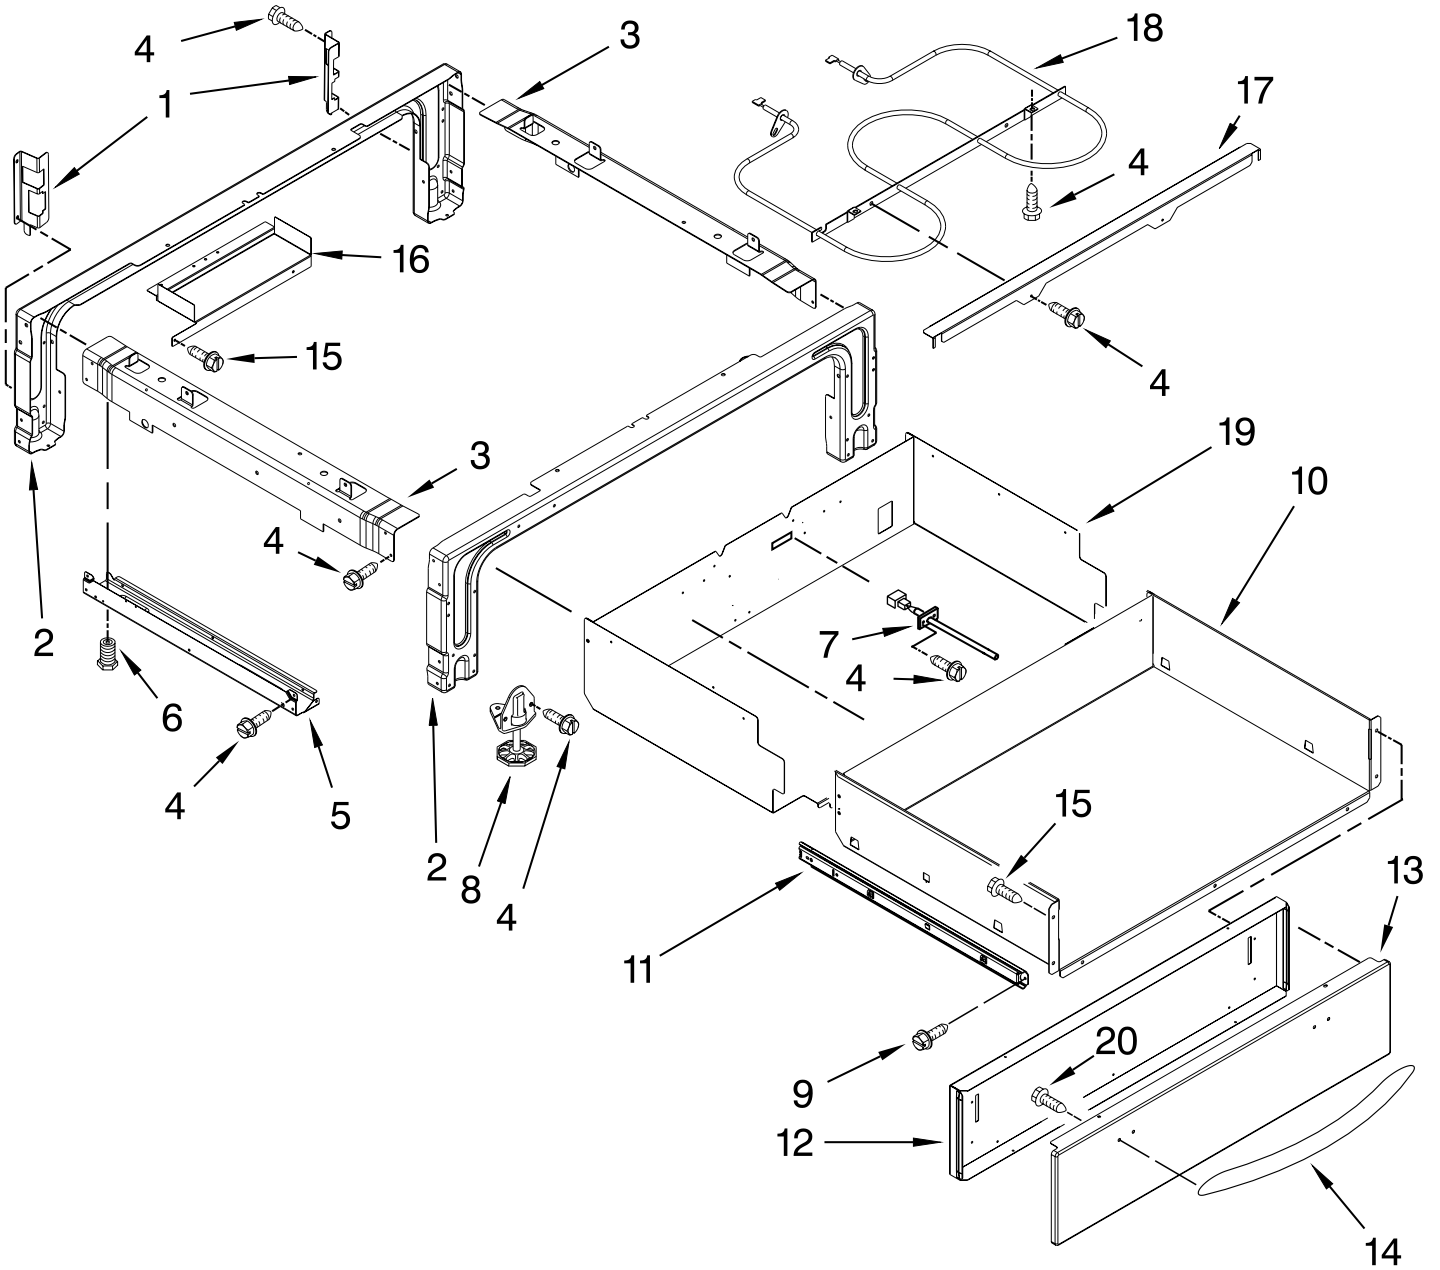

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
4	7101P434-60	Screw
5		Side, Base
	9759953	Right
	9759954	Left


Illus. No.	Part No.	DESCRIPTION
6	W10058460	Foot
7	8274149	Thermistor
8	3196037	Foot Assembly
9	7101P376-60	Screw
10	W10164163	Wrap, Warming Drawer
11		Drawer Slide
	W10155633	Right
	W10155632	Left
12	W10164169	Panel, Drawer
13		Front, Drawer
	W10203760	Black
	W10203762	White
	W10203763	Stainless

Illus. No.	Part No.	DESCRIPTION
14		Handle, Drawer
	W10292375	Black
	W10292379	White
	W10292374	Stainless
15	3196537	Screw
16	W10153100	Cover, Terminal
17	9758676	Support, Element
18	W10207401	Element, Warming Drawer
19	9763518	Enclosure, Warming Drawer
20	4449743	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: YKESS907SB04, YKESS907SP04, YKESS907SS04
 (Black) (White) (Stainless)

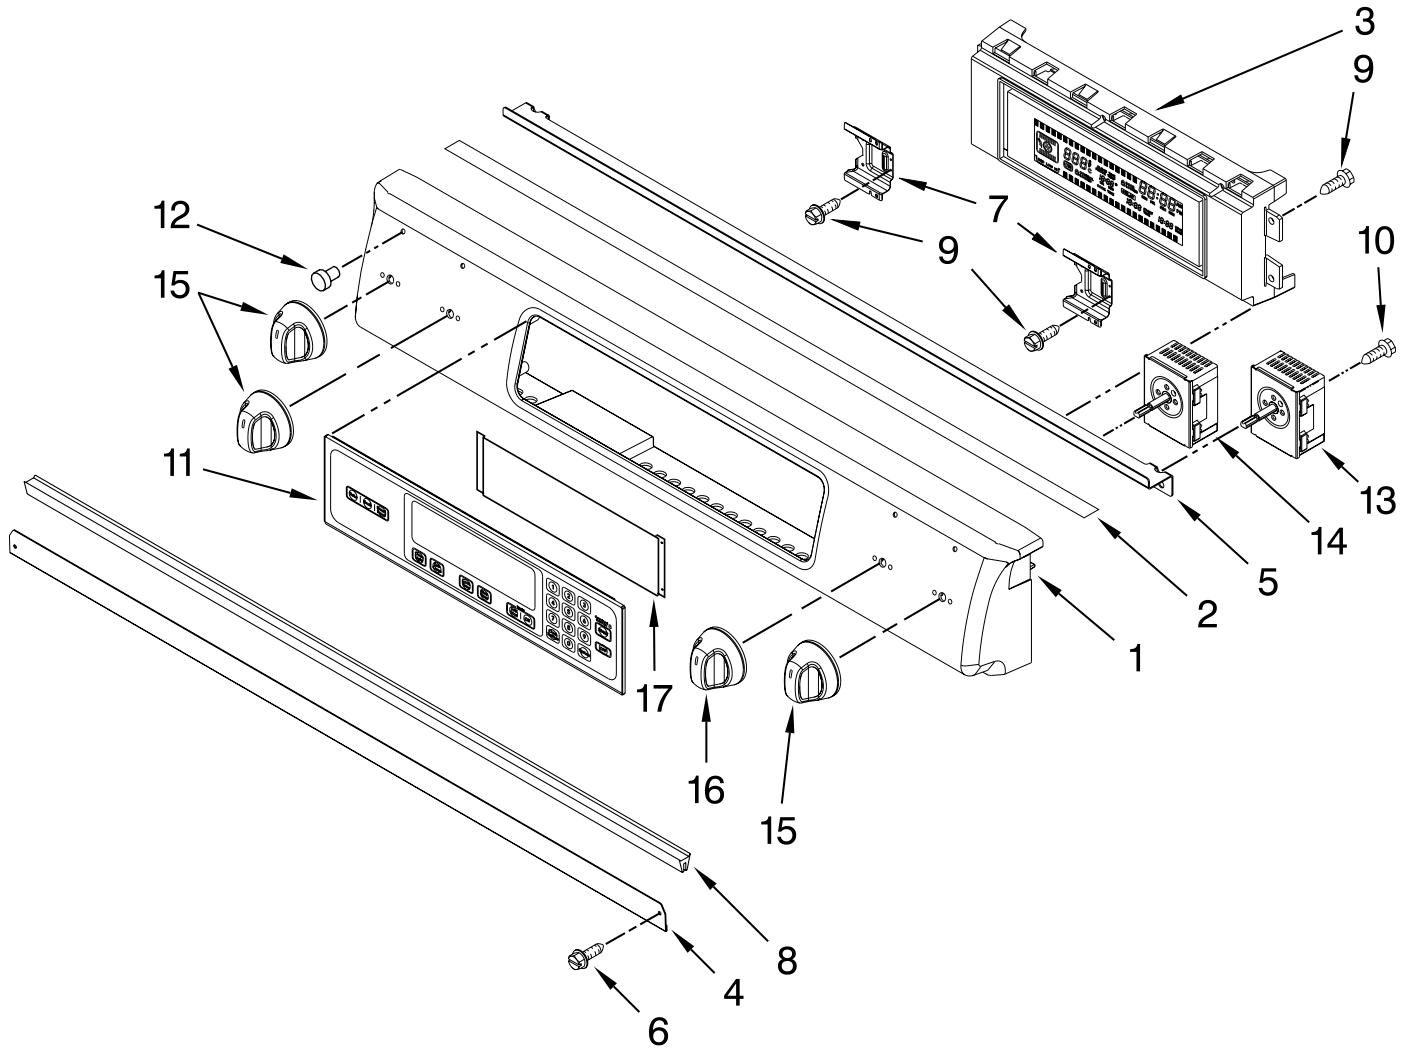

Illus. No.	Part No.	DESCRIPTION
1	W10190660	Control Panel Black
	W10190661	White
	W10190662	Stainless
2	W10110246	Gasket, Console
3	W10181439	Control, Electric
4	W10105370	Shield, Console Vent
5	W10117524	Bracket, Console
6	3196160	Screw
7	9761745	Bracket, Thermostat


Illus. No.	Part No.	DESCRIPTION
8	W10116195	Gasket, Vent Shield
9	3196537	Screw
10	W10061760	Screw
11	9761566	Membrane, Switch
12	3196068	Lens, Indicator
13	9763762	Dual, Switch LR,LF,RR
14	9763761	Single, Switch RF

Illus. No.	Part No.	DESCRIPTION
15		Knob, Smart Duel LR,LR,RR
	W10193255	Black
	W10193253	White
	W10156260	Stainless
16		Knob, Smart Single RF
	W10193259	Black
	W10193257	White
	W10156261	Stainless
17	W10237644	Flex Connector

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
(Black) (White) (Stainless)

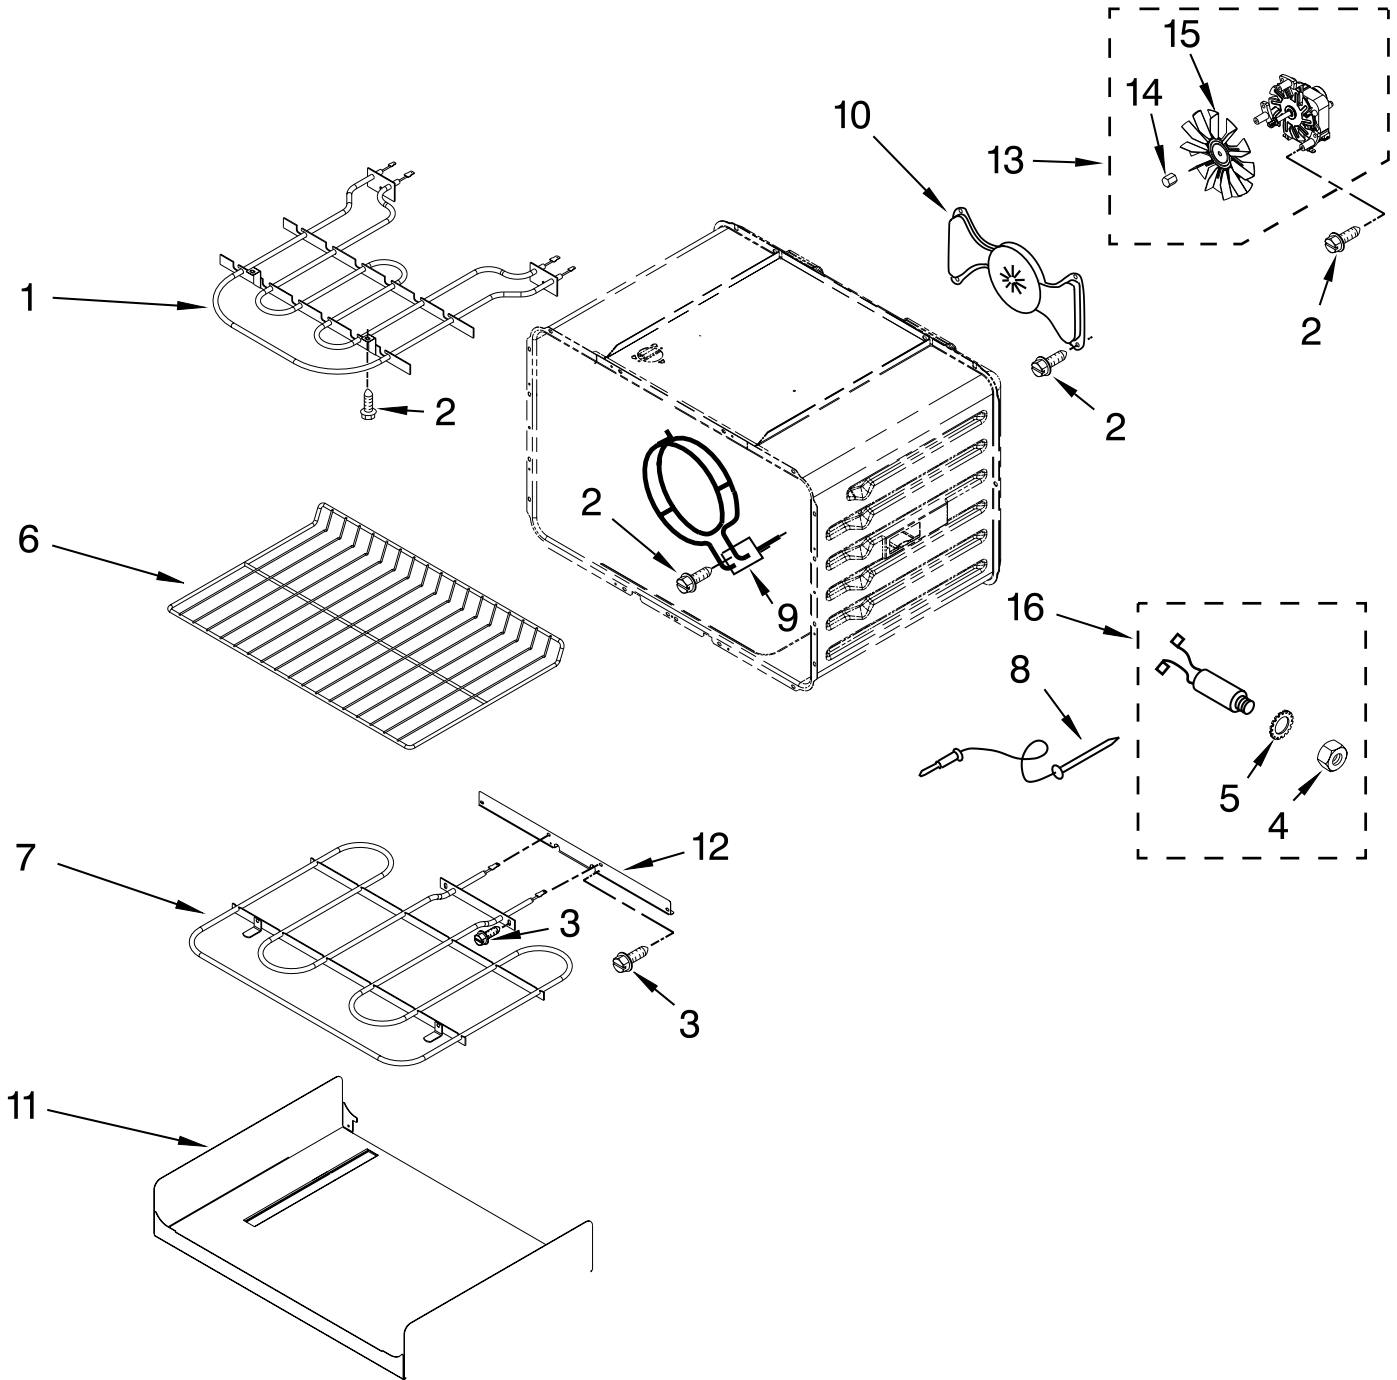

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4449154	Screw
3	7101P426-60	Screw
4	9755546	Hex Nut
5	9755547	Lock Washer
6	W10179152	Rack, Oven


Illus. No.	Part No.	DESCRIPTION
7	W10207398	Element, Bake
8	9755542	Probe, Meat
9	9760769	Element, Convection
10	W10160868	Cover, Fan

Illus. No.	Part No.	DESCRIPTION
11	4455037	Tray, Hidden Bake
12	4450039	Cover, Bake Tray
13	W10116228	Motor, Convection
14	W10116349	Nut
15	W10116351	Blade, Fan
16	9755543	Jack, Meat Probe

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: YKES907SB04, YKES907SP04, YKES907SS04
 (Black) (White) (Stainless)

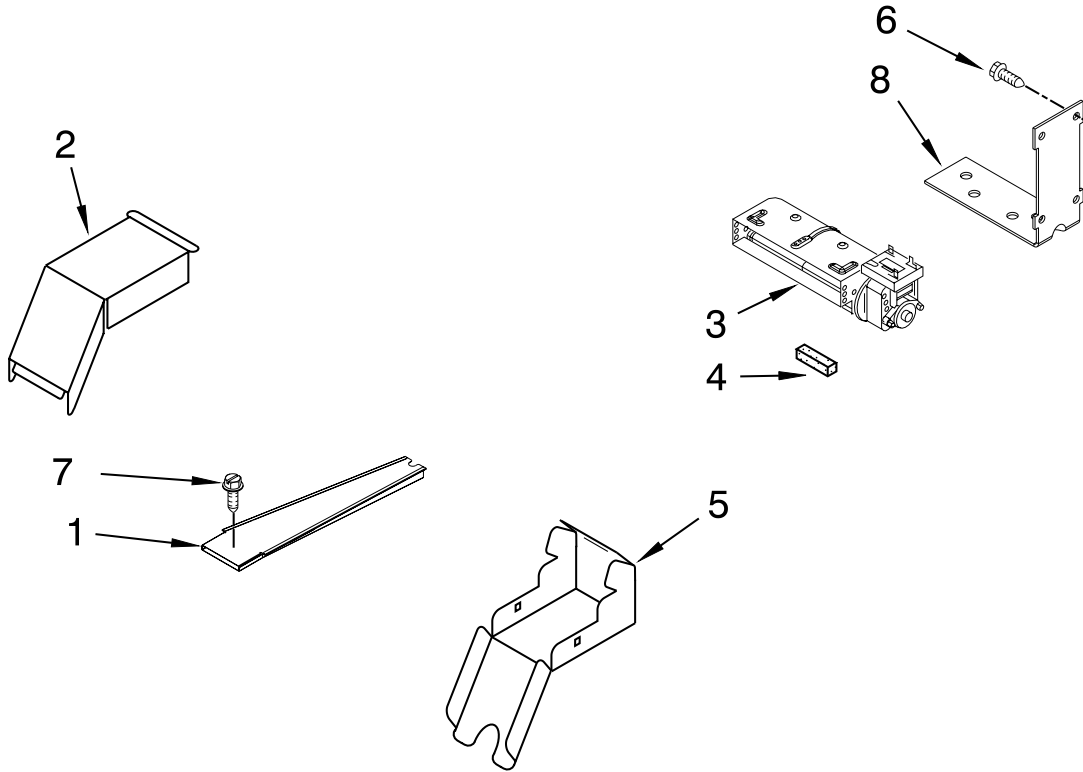

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	7101P426-60	Screw
7	4449040	Screw
8	4455352	Bracket, Blower

OPTIONAL PARTS

For Models: YKESS907SB04, YKESS907SP04, YKESS907SS04
(Black) (White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
<u>ACCESSORIES</u>		
4396920		Stainless Steel Cleaner & Polish
8212510		Stainless Steel Wipes
31464		Cooktop Cleaner
31463		Cooktop Protectant
WA906B		Cooktop Scraper
4378577		Brick Pizza Stone
W10123240		Broiler Pan

PAINT, TOUCH-UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black

PAINT, SPRAY

350930	White
261900	Citrine White
285006	Black

Illus. No.	Part No.	DESCRIPTION
<u>ADHESIVE</u>		
482338		Sealer, Silastic (3 oz.)

WIRING HARNESS PARTS

W10118728	Harness, Main
W10215187	Harness, Cooktop Electric Switch
313438	Clip, Harness
W10157935	Harness, Switch
9762921	Harness, Communication
9763481	Harness, Ground Strap
9761059	Power Cord
W10111397	Conduit, Slide-In
313660	Clip, Ground Wire
4448664	Clamp
9759877	Retainer, Strain Relief
9757778	Bushing, Snap, Split 1"
W10076020	Gasket
7103P027-60	Nut
4450800	Screw, Ground
3400015	Screw, Ground

Illus. No.	Part No.	DESCRIPTION
<u>Miscellaneous</u>		
9782676		Anti-Tip Assembly Filler, Counter Top
W10113902A		Black
W10113903A		White
W10113901A		Stainless