

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


COOKTOP PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
 (Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts Installation Instructions
	W10246119	English
	W10075750	Bi-Lingual
	W10246111	Use & Care Guide
	W10220962	Tech Sheet
	9763467	Easy Set Guide
	9757680	Anti-Tip Instructions Safe Cooking Tips
	9762761	English
	W10065852	French
2	246119	Screw
3	9761422	Frame, Cooktop
4		Cooktop
	W10110271	Black/Stainless
	W10110269	White
5	9761724	Cover, Cooktop Rear
6	9763517	Rail, Element
7	W10076030	Gasket
9	9759944	Thermostat
10	9756821	Support, Wiring
11	9757825	Rail, Element Center
12		Element, Surface
	W10248257	LR (1800/1000W)
	W10275049	LF/RR (2500/1200W)
	8273993	RF (1800W)
13	9761423	Frame, Cooktop Front
14	3196537	Screw
15	341196	Thermostat
16	9759094	Spring, Locator
17	8523739	Indicator Light, Hot Surface
18	9758799	Bracket, Indicator Light
19	9761768	Frame, Cooktop Rear

OVEN PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
 (Black) (Designer White) (Stainless)

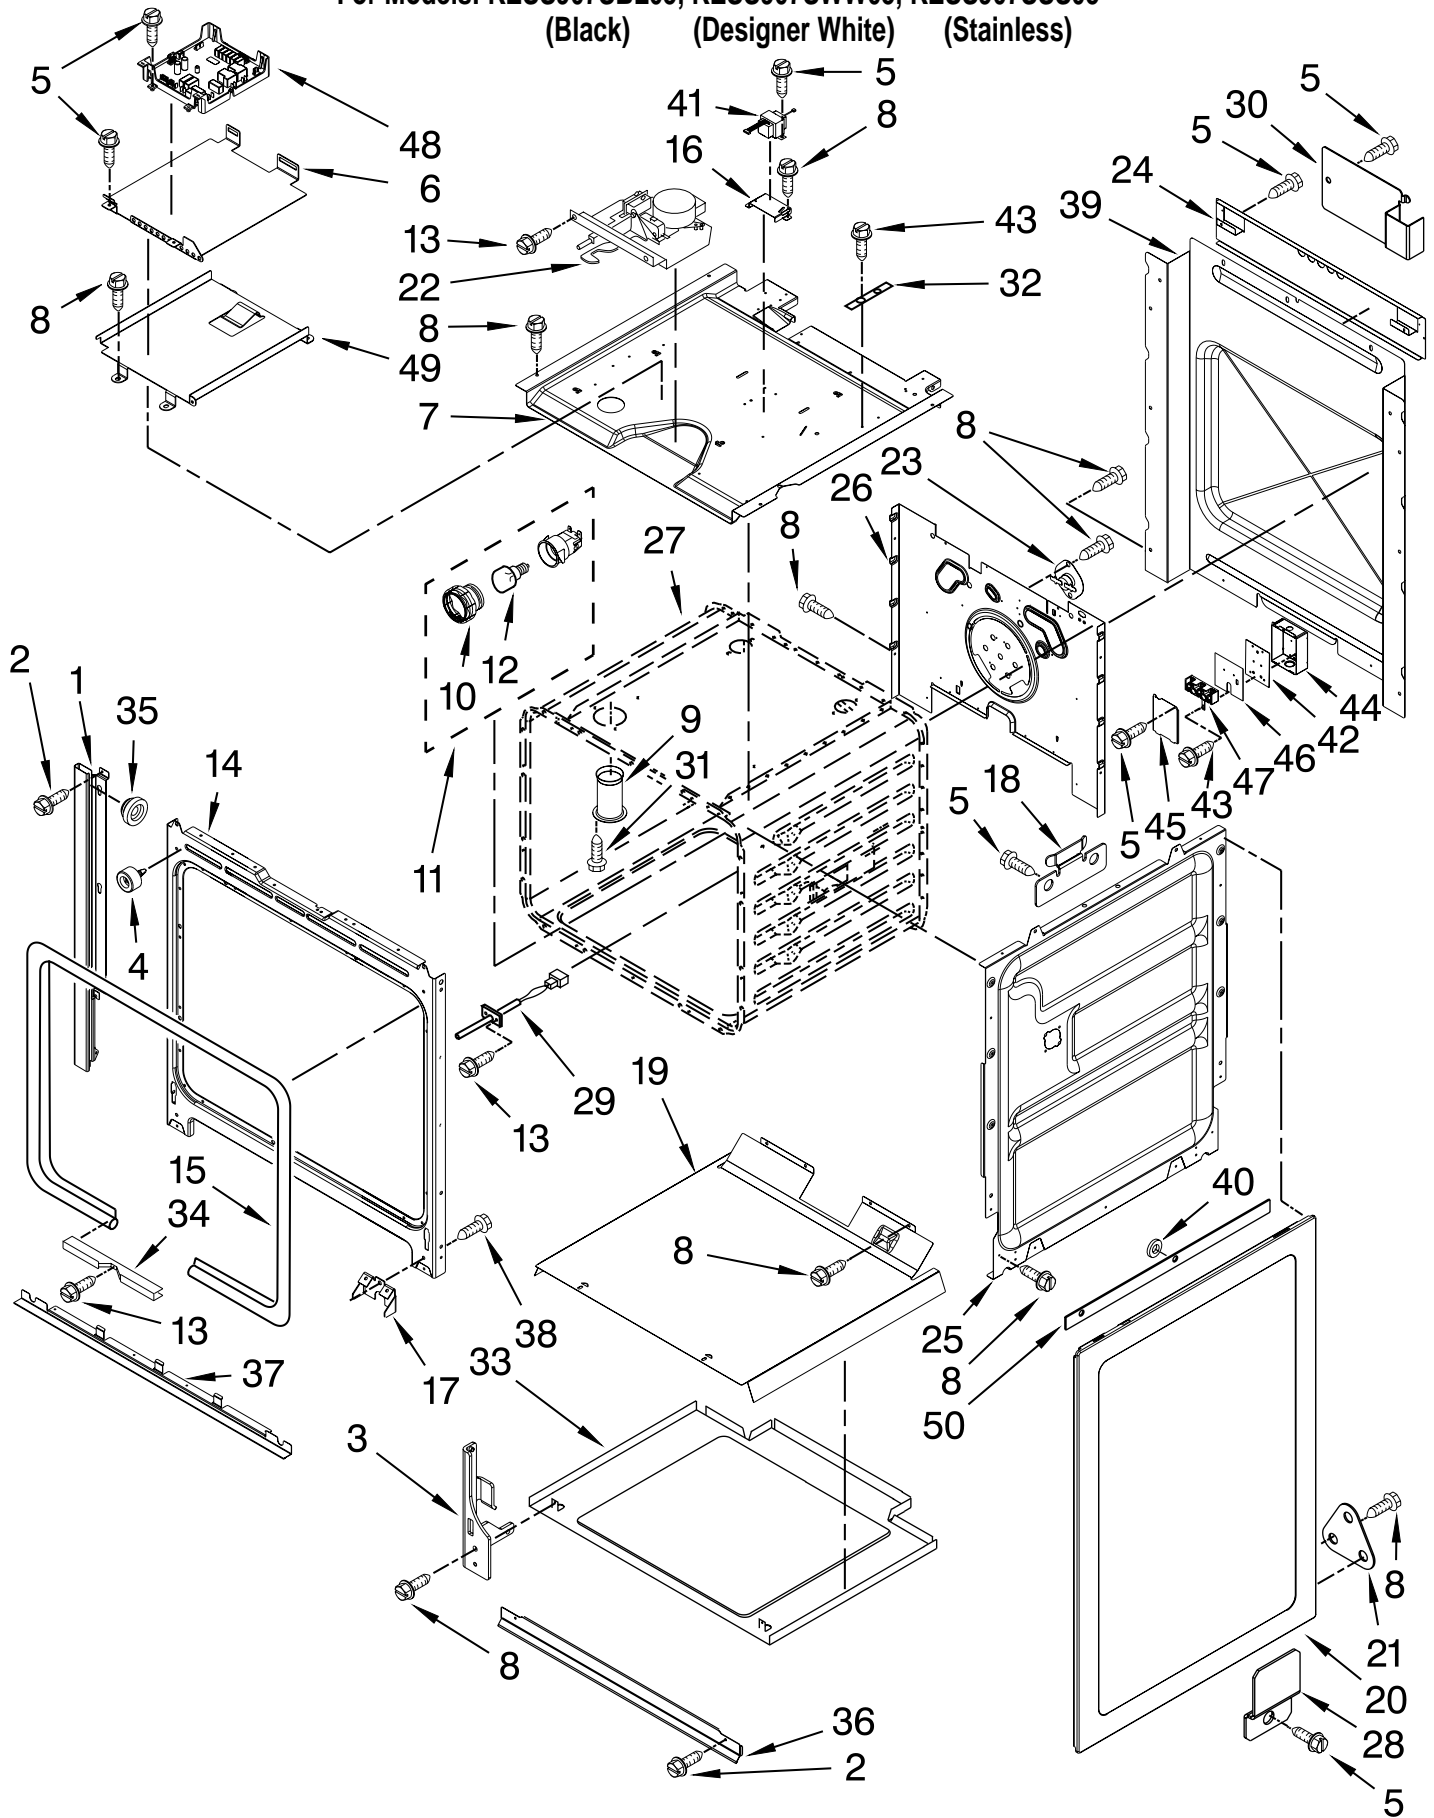

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
(Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Trim, Side Right	17	4452152	Bracket, Mounting	37		Vent, Bottom Lower
	W10109540	Black	18	9757685	Guide, Side Panel		W10153486	Black
	W10109570	White	19	4451478	Support, Insulation		W10153488	White
	W10140548	Stainless	20		Body, Side		W10154789	Stainless
		Left		W10281880	Black/Stainless	38	W10292297	Screw
	W10109490	Black		W10281881	White	39	9758583	Cover, Back
	W10109520	White	21	9757461	Bracket, Side Panel	40	9760481	Washer
	W10140547	Stainless	22	W10195934	Latch, Motorized	41	W10111628	Transformer, Control
2	3400832	Screw	23	9759242	Thermostat	42	9759884	Insulation
3		Hinge Receiver	24	9757811	Brace, Side Panel	43	3400080	Screw
	4455606	Right	25	4455641	Side, Chassis	44	W10165135	Box, Terminal
	4455605	Left	26	9759761	Back, Chassis	45	9757405	Cover, Terminal Box
4	W10105790	Bumper, Door	27		Liner, Oven (Not Serviceable)	46	9759721	Insulator, Terminal Box
5	3196537	Screw	28	9759890	Clip, Side Panel	47	W10245259	Block, Terminal
6	W10083460	GOC, Slide	29	W10131825	Sensor	48	W10181438	Appliance, Manager
7	8303099	Top Chassis	30	9759945	Standoff, Rear	49	9756454	Bracket, Appliance Manager
8	7101P426-60	Screw	31	3196176	Screw	50	9759722	Insulation, Body Side
9	4452158	Tube, Vent	32	9759885	Pad, Insulation			
10	W10067870	Lens, Light	33	9759713	Base, Chassis			
11	W10009930	Oven Light, Assembly	34	4448933	Retainer, Gasket			
12	4452166	Bulb, Light	35	4448444	Grommet, Mounting Rail			
13	4449154	Screw			Vent, Bottom Upper			
14	W10115831	Frame, Front	36					
15	W10074200	Gasket, Door		9756481BL	Black			
16	9757829	Bracket, Transformer		9756481WH	White			
				W10140533	Stainless			


**FOLLOWING PARTS
NOT ILLUSTRATED**

INSULATION

9756817 Insulation, Wrap
9756470 Insulation, Back

DOOR PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
(Black) (Designer White) (Stainless)

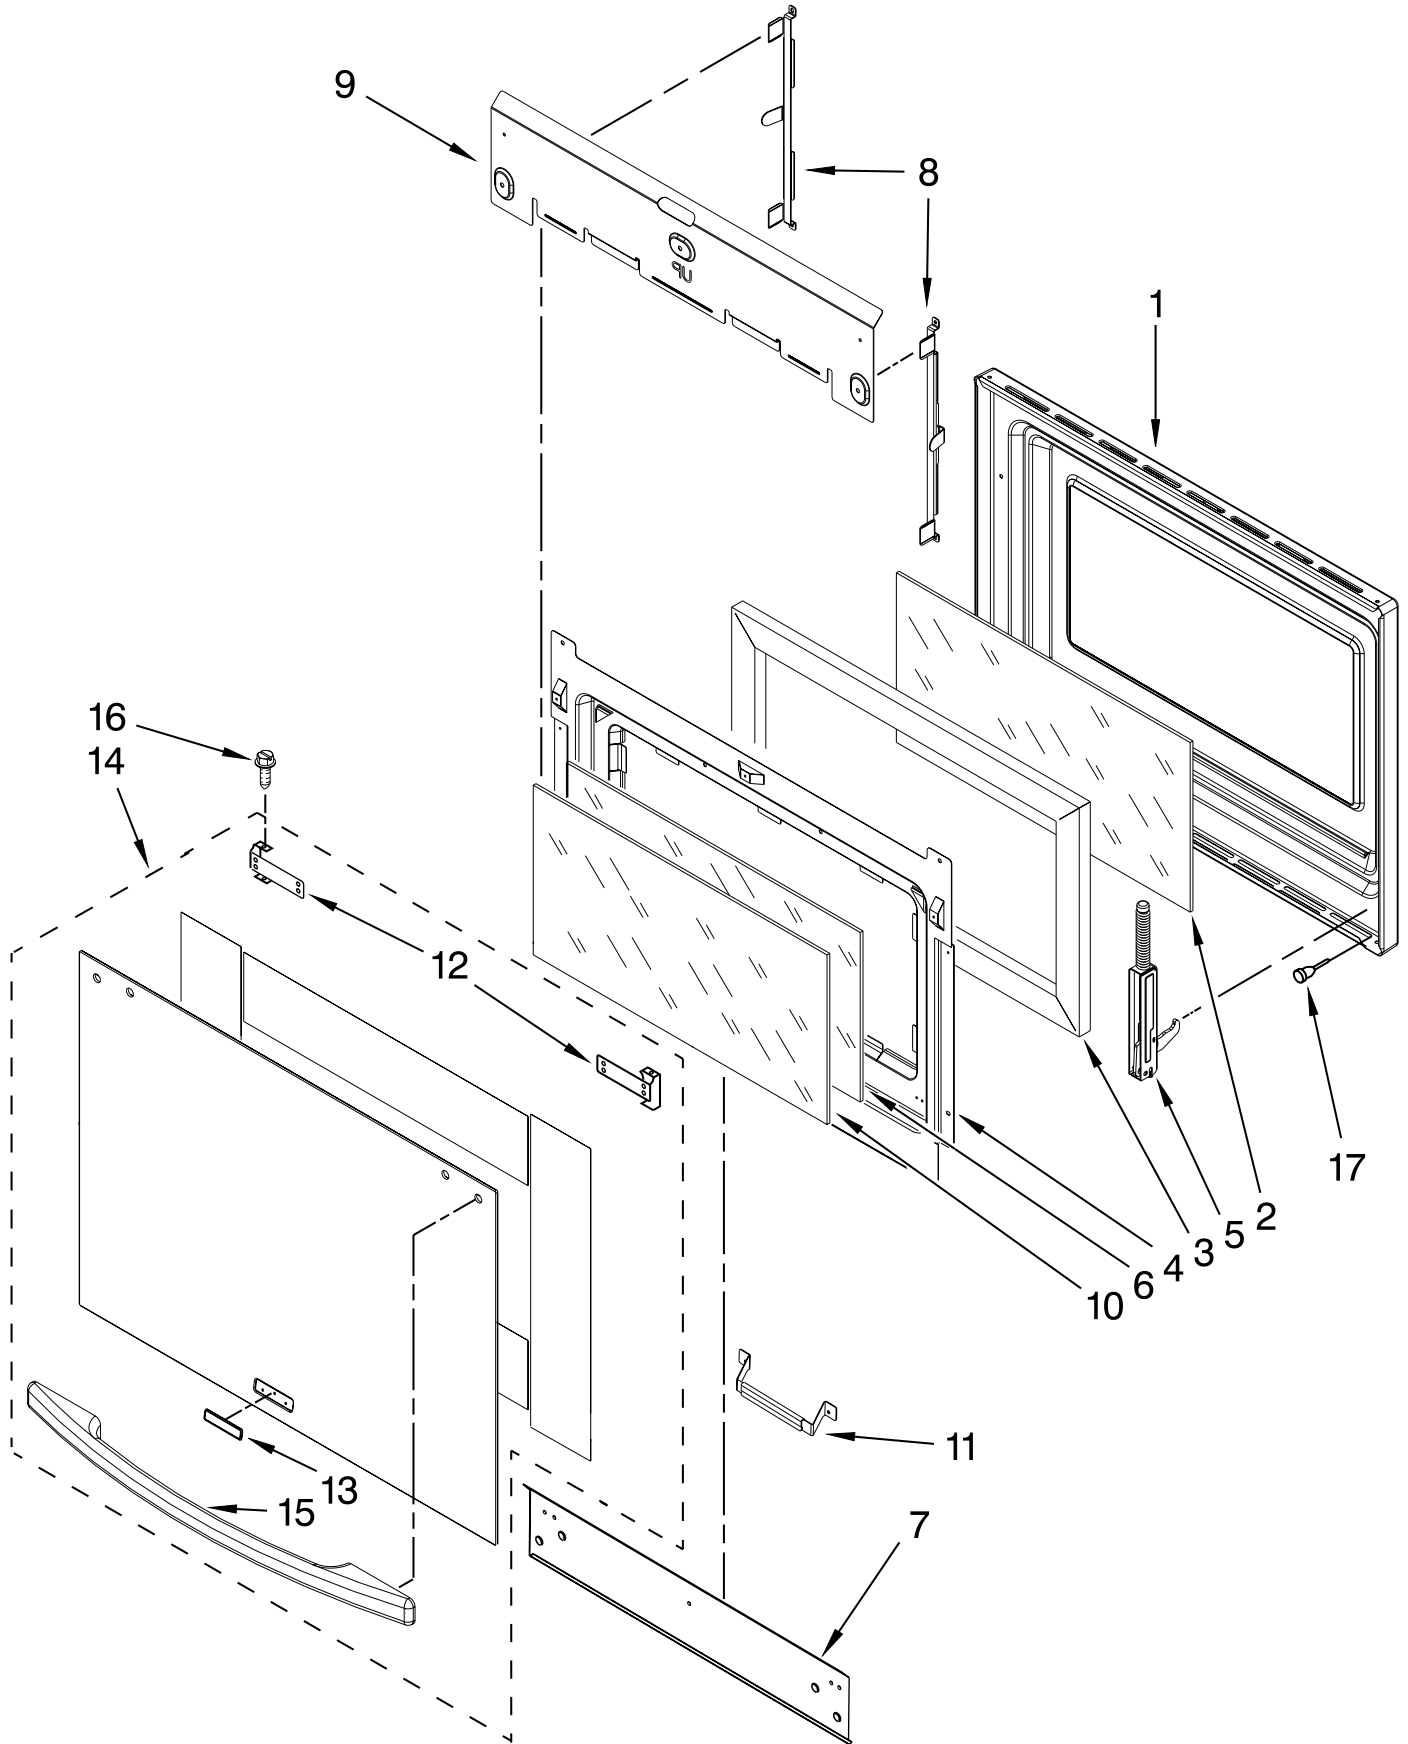

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


DOOR PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
 (Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1	W10277749	Panel, Door
2	9757706	Glass, Inner
3	4451722	Insulation, Door
4	4457132	Retainer, Glass
5		Hinge, Oven Door
	9760579	Right
	9760574	Left
6	9759225	Glass, Inner
7	4457114	Shield, Heat Bottom
8	9759229	Bracket, Glass Side
9	4457104	Shield, Heat Top
10	9759225	Glass, Inner Door
11	9759230	Bracket, Central
12		Bracket, Handle
	W10246114	Right
	W10246113	Left
13		Nameplate
	W10243392	Black
	W10243393	White
	W10243391	Stainless
14		Assembly, Door Kit
	W10131888	Black
	W10131889	White
	W10155557	Stainless
15		Handle, Door
	W10292381	Black
	W10292382	White
	W10292380	Stainless
16	3196184	Screw
17	4448520	Bumper, Door

DRAWER PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
(Black) (Designer White) (Stainless)

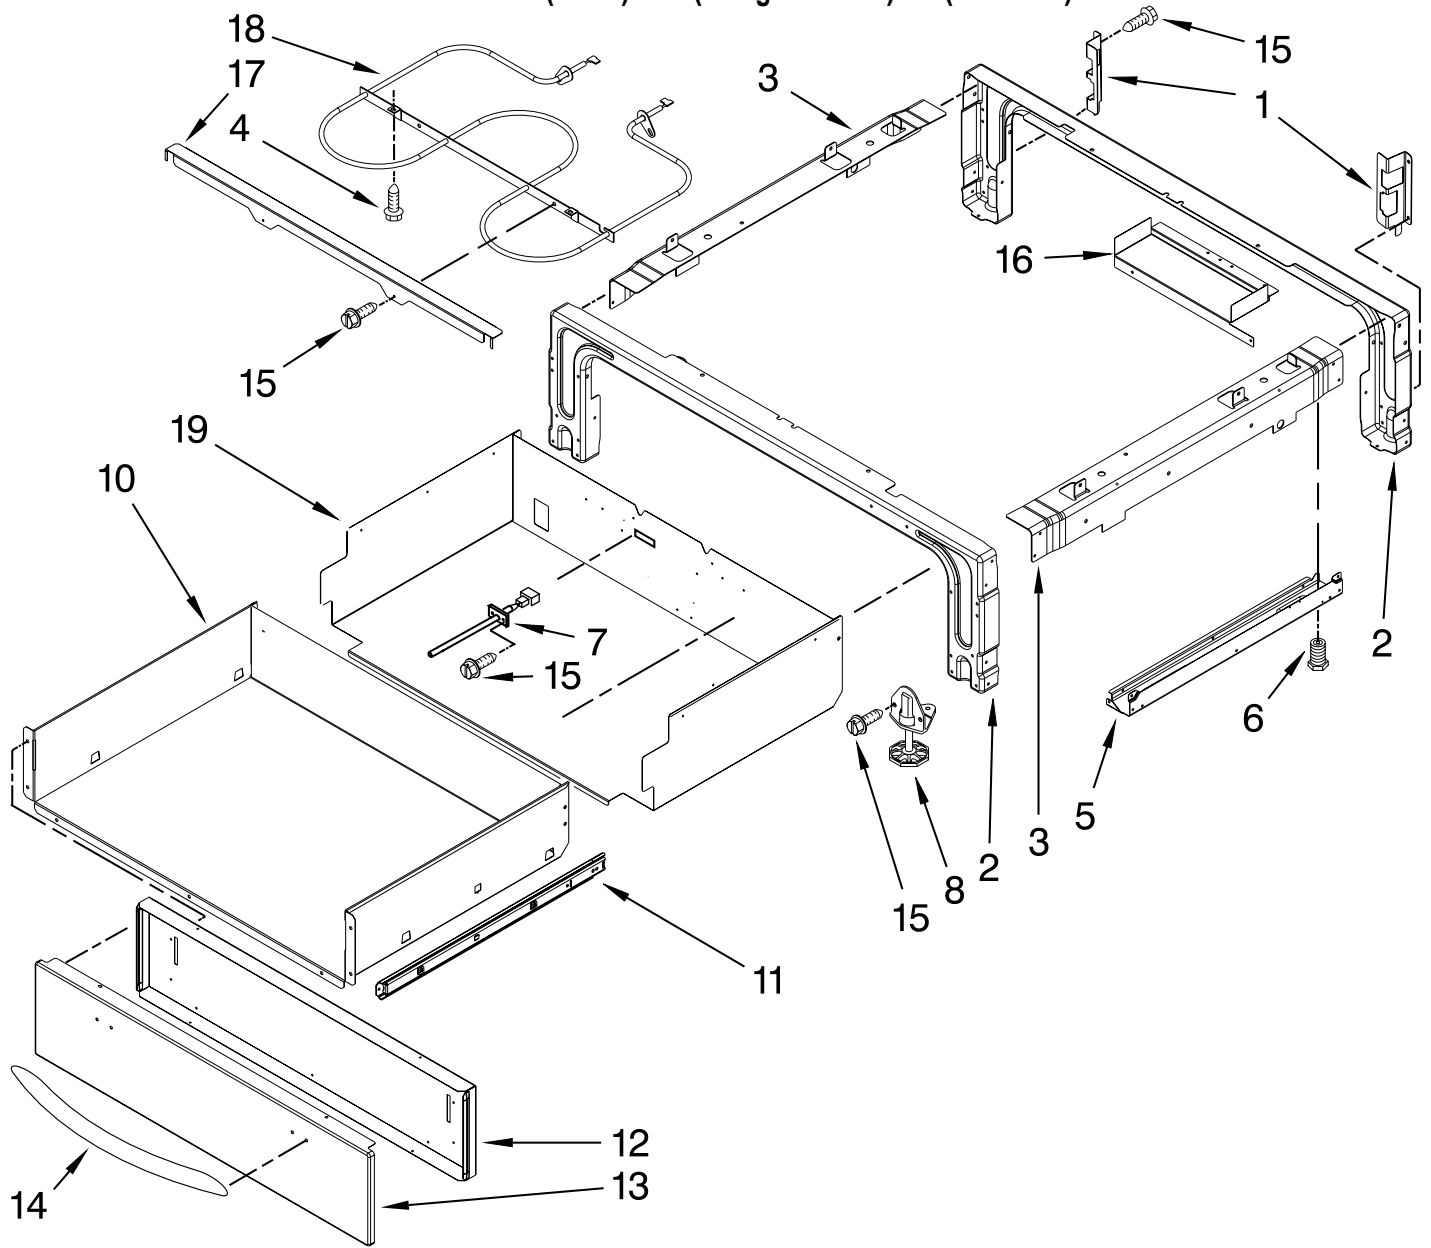

Illus. No.	Part No.	DESCRIPTION
1		Support, Drawer Rail
	9757687	Right
	9757686	Left
2	9763501BL	Support, Front & Rear
3		Brace, Drawer
	4453720	Right
	4453721	Left
4	W10162096	Screw


Illus. No.	Part No.	DESCRIPTION
5		Side, Base
	9759953	Right
	9759954	Left
6	W10058460	Foot
7	8274149	Thermistor
8	3196037	Foot Assembly
10	W10164163	Drawer
11		Drawer Slide
	W10155633	Right
	W10155632	Left
12	W10164169	Panel, Drawer
13		Front, Drawer
	W10203760	Black
	W10203762	White
	W10203763	Stainless

Illus. No.	Part No.	DESCRIPTION
14		Handle, Drawer
	W10292375	Black
	W10292379	White
	W10292374	Stainless
15	3196537	Screw
16	W10153100	Cover, Terminal
17	9758676	Support, Element
18	W10207401	Element, Warming Drawer
19	9763518	Enclosure, Warming Drawer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
(Black) (Designer White) (Stainless)

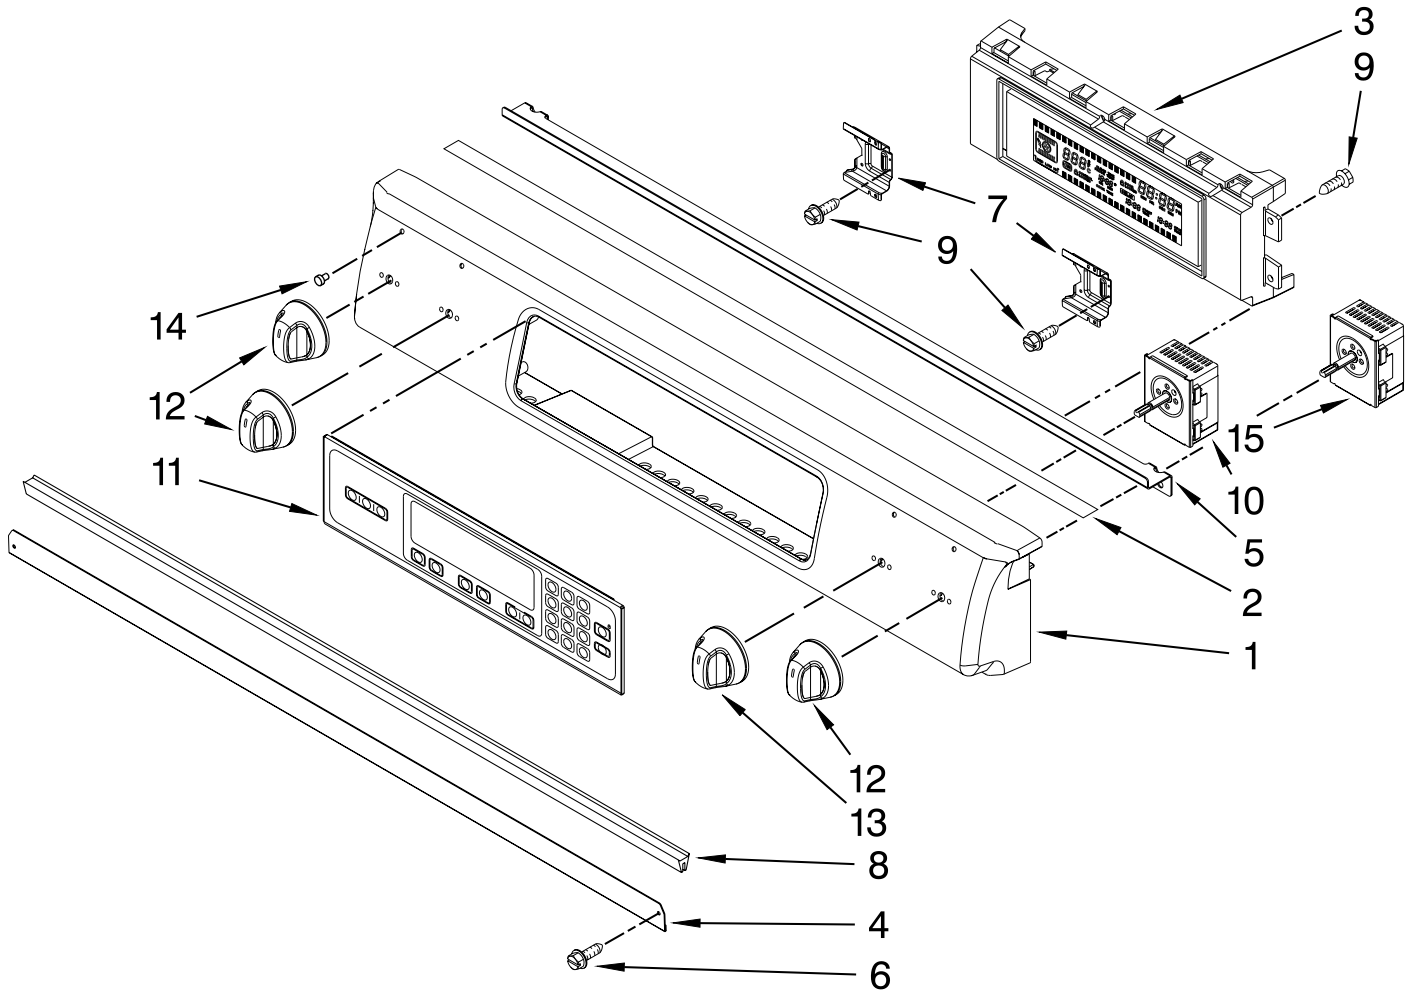

Illus. No.	Part No.	DESCRIPTION
1	W10190660	Control Panel Black
	W10190661	White
	W10190662	Stainless
2	W10110246	Gasket, Console
3	W10181439	Control, Electric
4	W10105370	Shield, Console Vent
5	W10117524	Bracket, Console
6	W10061760	Screw


Illus. No.	Part No.	DESCRIPTION
7	9761745	Bracket, Thermostat
8	W10116195	Gasket, Vent Shield
9	3196537	Screw
10	9763761	Single Switch (RF)
11	9761566	Membrane, Switch
12		Knob, Smart Dual LF,LR,RR
	W10193255	Black
	W10193253	White
	W10156260	Stainless

Illus. No.	Part No.	DESCRIPTION
13		Knob, Smart Single RF
	W10193259	Black
	W10193257	White
	W10156261	Stainless
14	3196068	Lens, Indicator Light
15	9763762	Dual Switch LF,LR,RR

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

INTERNAL OVEN PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
(Black) (Designer White) (Stainless)

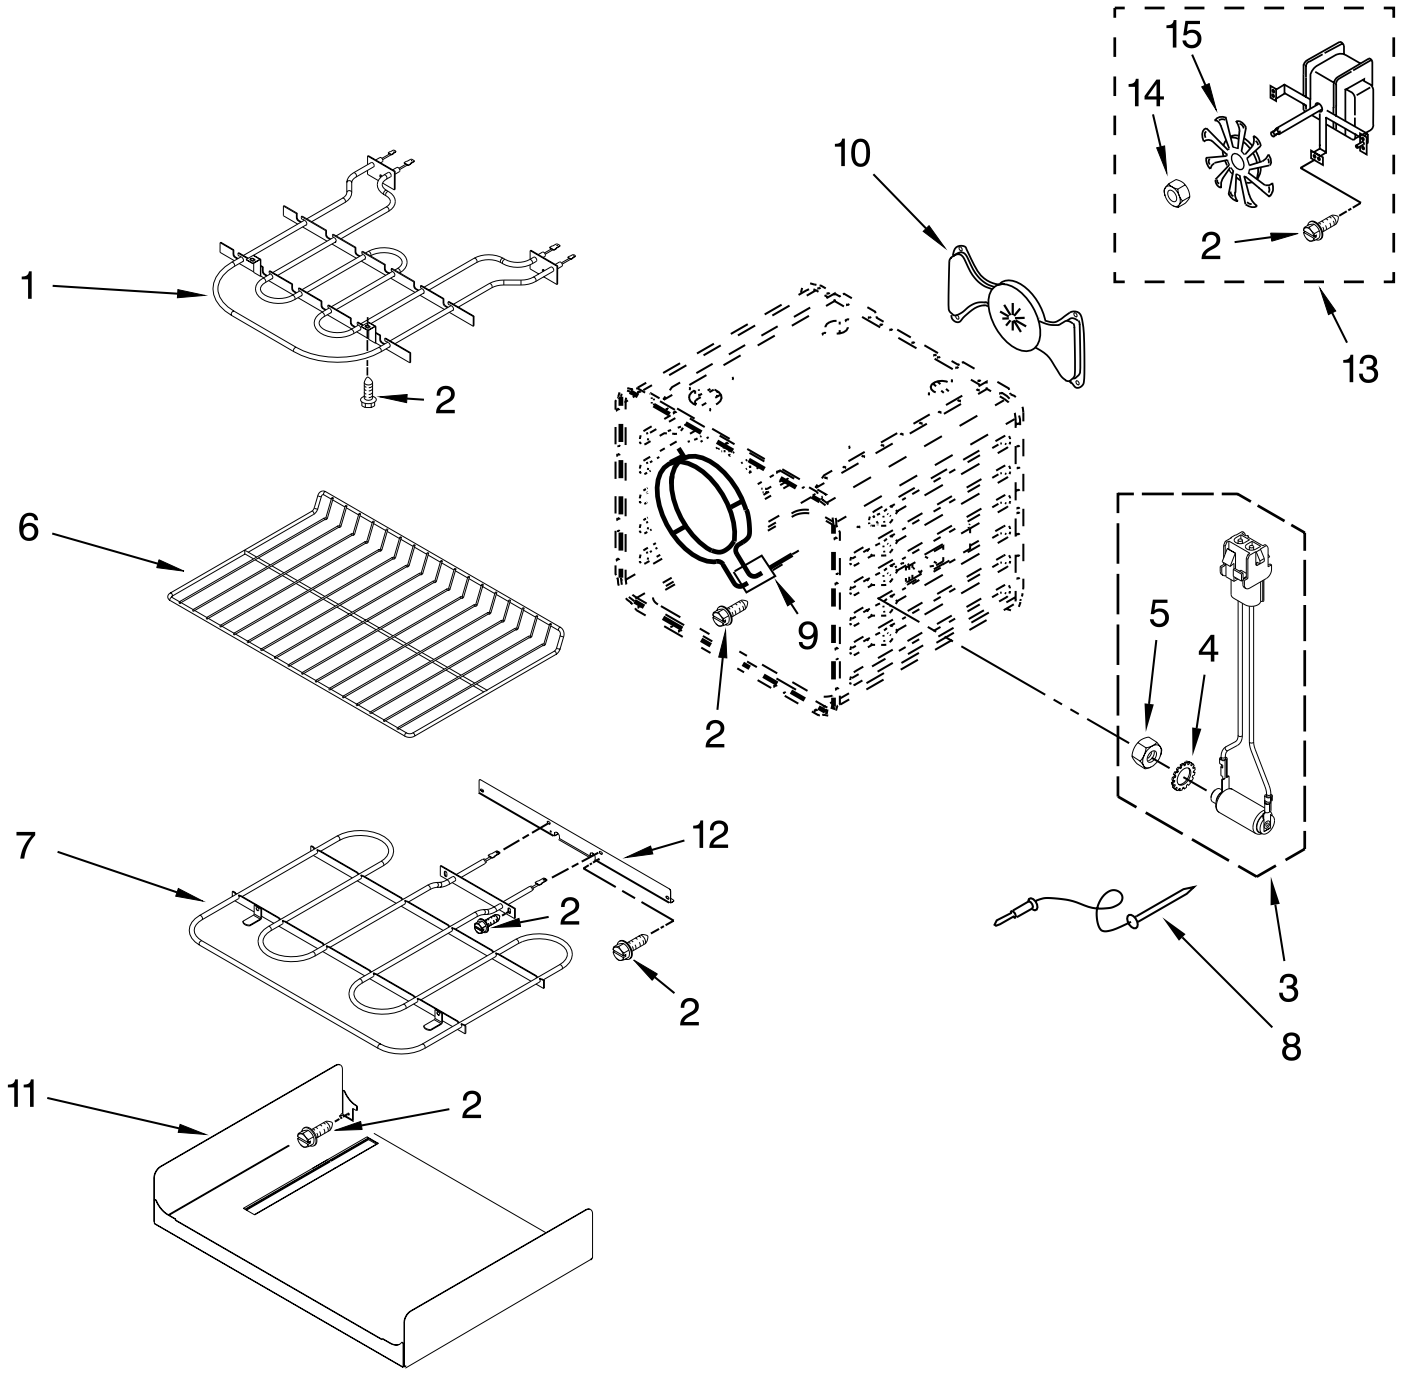

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	4449154	Screw
3	9755543	Jack, Meat Probe
4	9755547	Lock Washer
5	9755546	Hex Nut


Illus. No.	Part No.	DESCRIPTION
6	W10179152	Rack, Oven
7	W10207398	Element, Hidden Bake
8	9755542	Probe, Meat
9	9760769	Element, Convection

Illus. No.	Part No.	DESCRIPTION
10	W10160868	Baffle, Convection
11	4455037	Tray, Hidden Bake
12	4450039	Cover, Bake Tray
13	W10116228	Motor, Convection
14	W10116349	Nut
15	W10116351	Blade, Fan

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
 (Black) (Designer White) (Stainless)

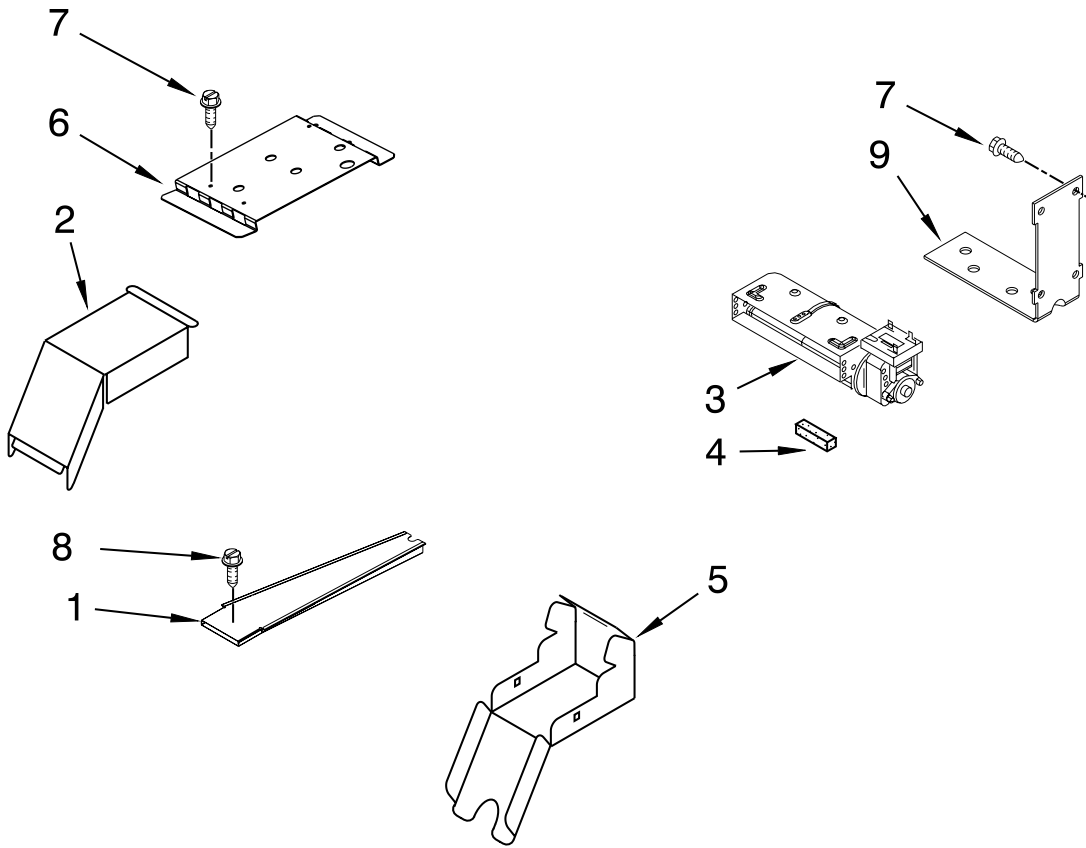

Illus. No.	Part No.	DESCRIPTION
1	4451759	Vent, Exhaust
2	4455178	Elbow, Vent Top
3	9759320	Blower
4	4451758	Block, Foam
5	4455177	Elbow, Vent Bottom
6	W10143041	Bracket, Terminal Box
7	7101P426-60	Screw
8	4449040	Screw
9	4455352	Bracket, Blower

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: KESS907SBL05, KESS907SWW05, KESS907SSS05
 (Black) (Designer White) (Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

	482338	Sealer, Silastic (3 oz.)
--	--------	-----------------------------

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

WIRING HARNESS PARTS

	W10137680	Harness, Main
	W10198758	Harness, Cooktop
	W10157935	Harness, Switch
	9762921	Harness, Communication
	W10207713	Bushing, Snap
	9763481	Harness, Ground Strap Edge Protector
	W10123242	19mm
	W10127413	38mm
	W10177363	Grommet, Flex 60mm
	9757778	Bushing, Snap Split 1"
	W10076020	Gasket
	4449809	Screw
	7103P027-60	Nut
	W10237644	Connector, Flex
	4450800	Screw, Ground
	3400015	Screw, Ground

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Miscellaneous

	9782676	Anti-Tip Assembly Filler, Counter Top
	W10113902A	Black
	W10113903A	White
	W10113901A	Stainless